



UPDATE ALVEOPRO FIRMWARE VERSION 2

I. Materials

1. A 3 mm Allen key
2. USB-C to USB-A cable
3. Windows / Linux PC

Note: 24V power supply not required



Steps to follow


Example with version 2.0.1:

1. Download file : **alveo-pro-2.0.1.uf2**
2. Interface disassembly



Unscrew the 2 BTR screws using a 3 mm Allen key (do not remove the screws)

3. Identifier le bouton « Boot »

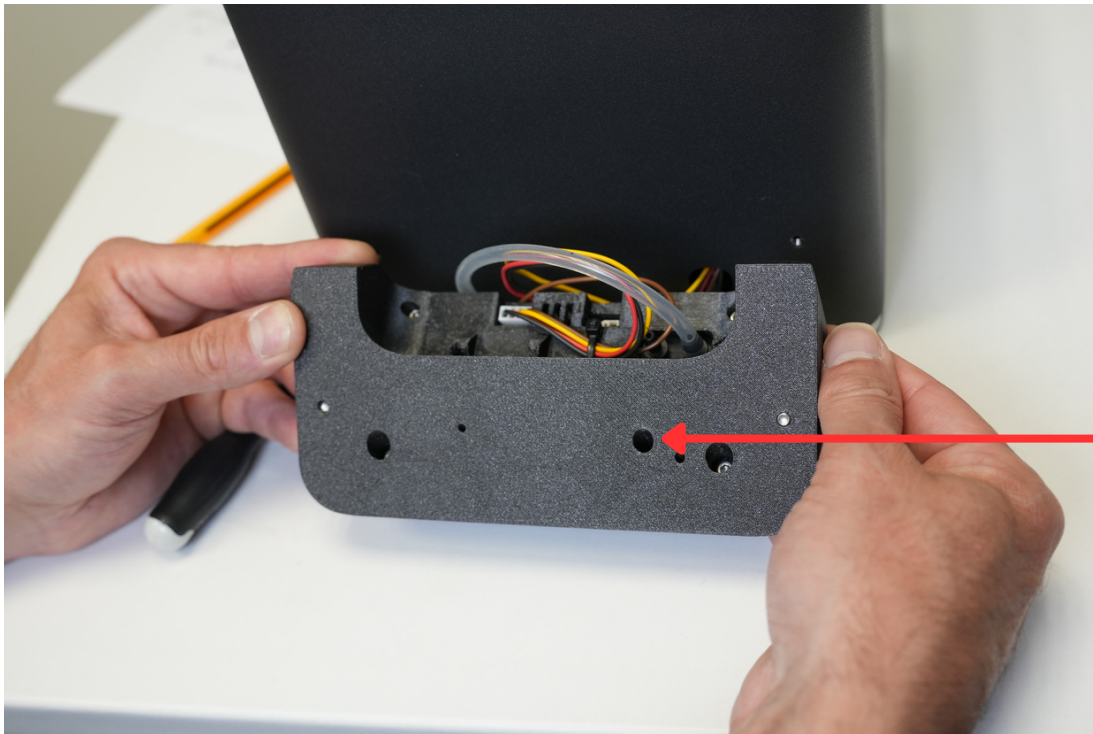


Bouton « Boot »


4. Connecter uniquement le câble USB-C AlveoPRO



5. Using the Allen key, press and hold the “Boot” button until you feel a “click”.

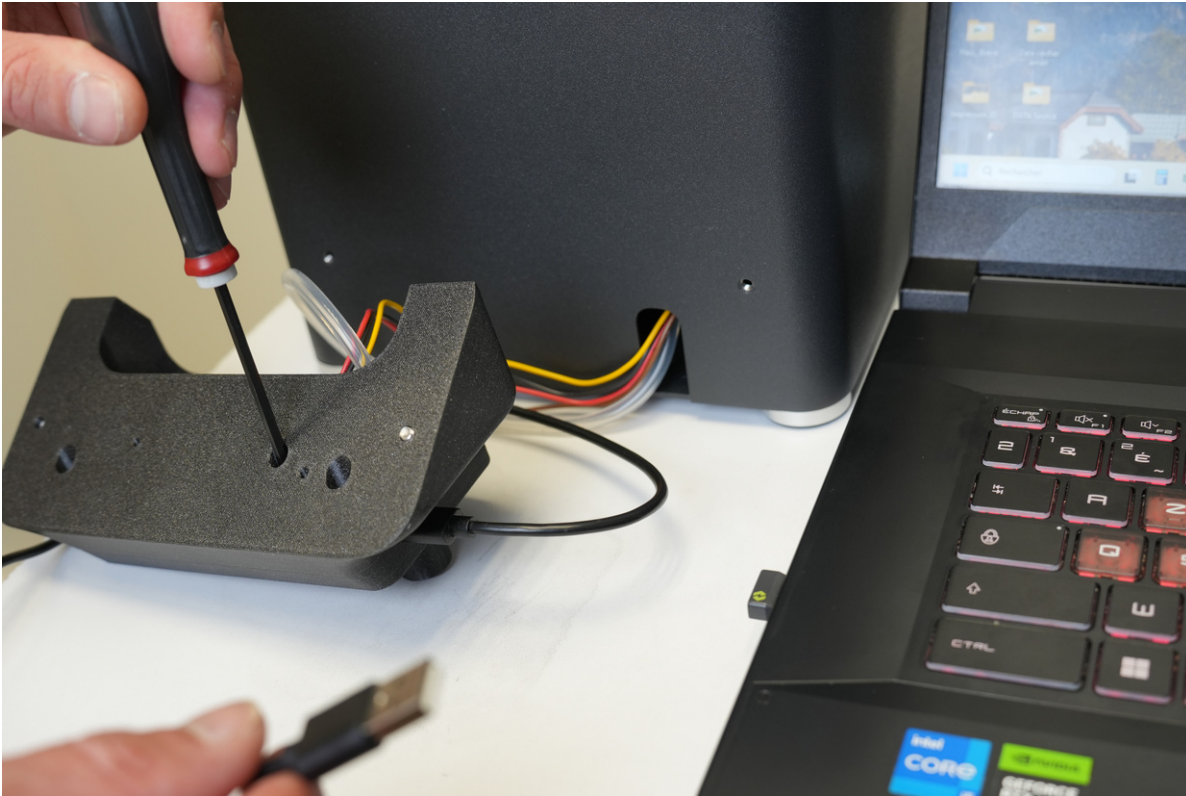


Connect the USB cables to the PC. A window named “RPI-RP2” will open on your PC.

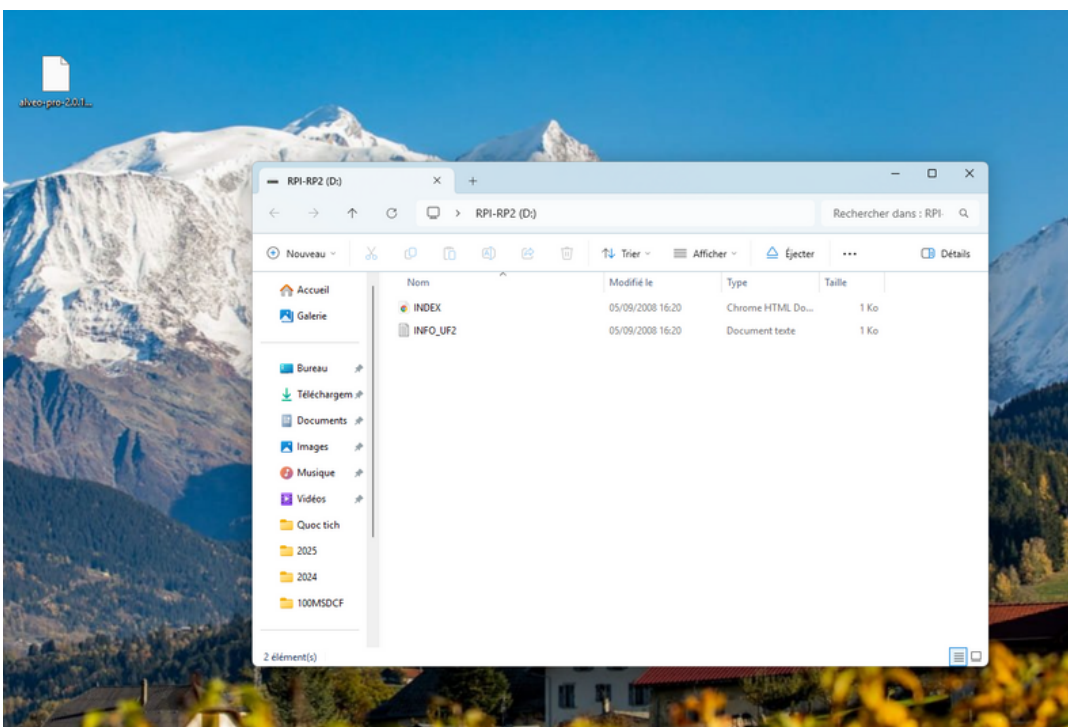

Once connected, you can release the “Boot” button.



6. Drag and drop the previously downloaded firmware (alveo-pro-2.0.1) into the “RPI-RP2” folder.

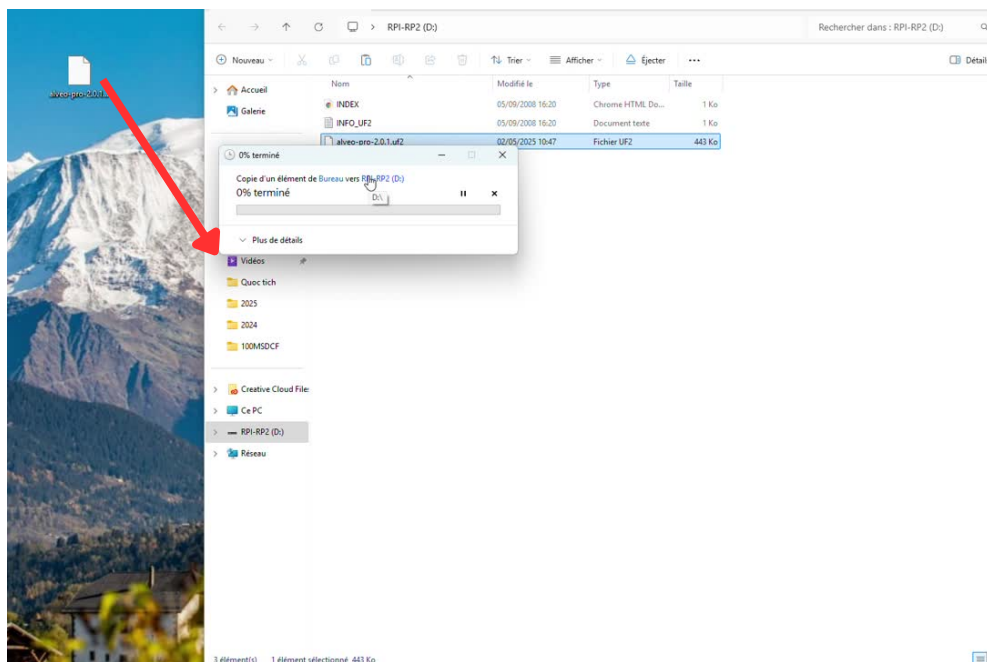

The window closes automatically when the update is complete. Disconnect USB. Review the interface.

Check that the update appears in the AlveoPRO “Info” (line: PRO firmware version: VS 2.0.1)

