


reality Box Parts L

CREALITY BOX *1

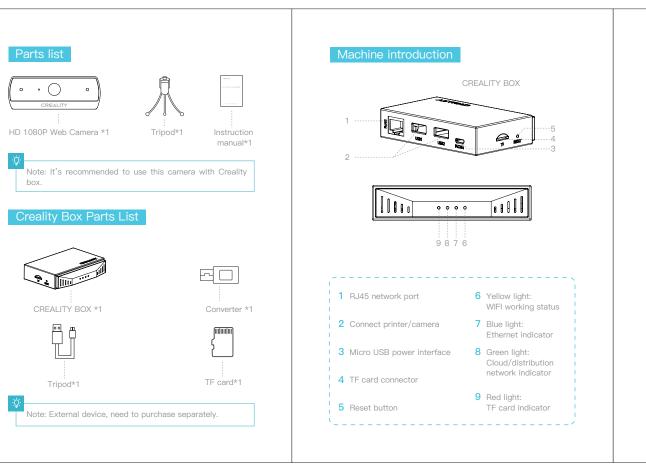

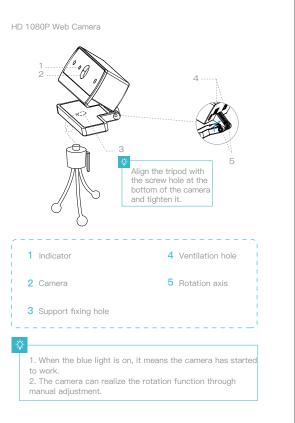


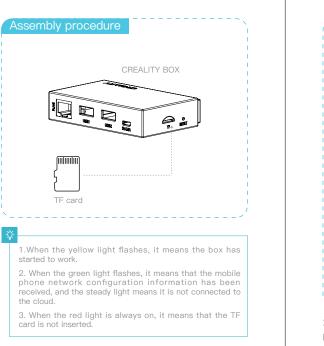



1.Insert the TF card (FAT32/exFAT format) into the TF

card connector of the box.

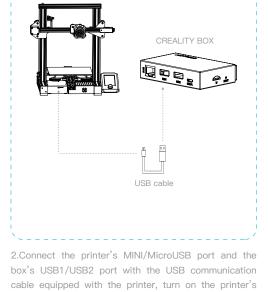


power switch to power on the machine.



SHENZHEN CREALITY 3D TECHNOLOGY CO., LTD. Add: 18F, JinXiuHongDu Building, Meilong Blvd., Longhua Dist., Shenzhen, China 518131 Official Website: www.creality.com Tel: +86 755-8523 4565


E-mail: info@creality.com cs@creality.com

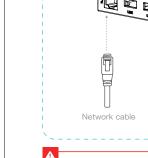

3.Plug one end of the USB cable into the 5V/2.4A connector of the box, connect the other end to the power adapter and turn on the power to power up the box, then connect to the network via wired or wireless.

through the "Creative Cloud" APP.

CREALITY BOX

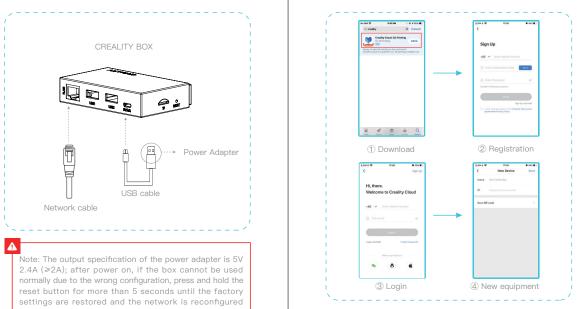


4. Open the mobile app store and search for "Creality Cloud" or scan the QR code on the product box to download the "Creality Cloud" APP, register and login to your account, click "Device" → "+", scan the QR code on the back of the box to add the corresponding box.



5.Connect the box WIFI to configure the network, you can

use APP to print remotely after the box shows online.

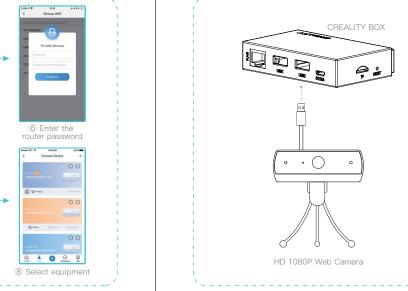

6.Plug the USB connector of the camera into the

USB1/USB2 connector of the WIFI box, open the "Creal-

ity Cloud" APP and click the camera icon " @ " on the

device page to remotely monitor the printing status in