


ALIENCCELL

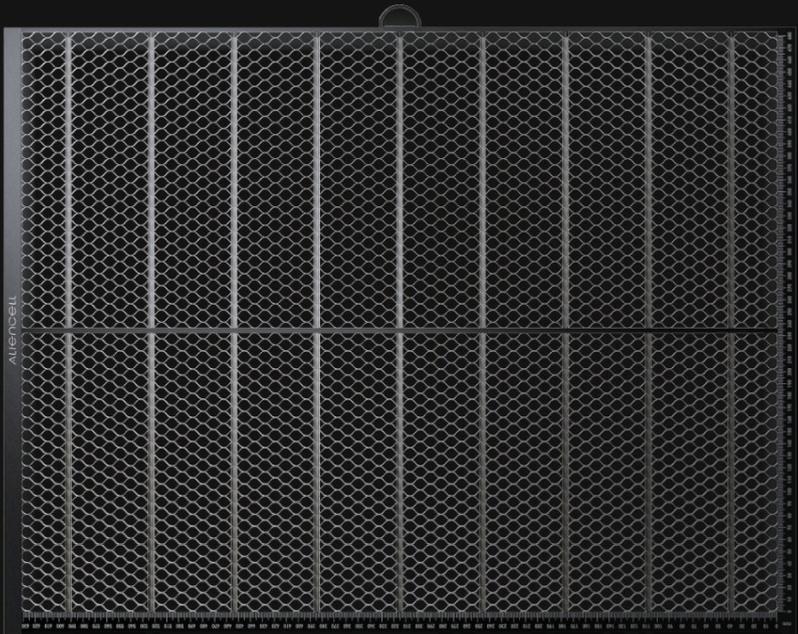

# Aliencell Honeycomb for X1 Laser

## User Manual

## Note

Handle the honeycomb panel with care. Dropping or crashing the honeycomb panel may deform it and affect its function as a working panel.

Residues may remain in the honeycomb panel after material processing. You are advised to take it out and clean it every time after a material is processed. To help you remove and clean the honeycomb panel easily, the area of the honeycomb panel is designed to be smaller than the working area. Hand clasp positions are provided on the two sides after you place it into X1

## List of items



 
Honeycomb Panel  
x1



Material Pins  
x4




Brush  
x1




User Manual  
x1

## Use the honeycomb panel



1. Remove all the slats from X1

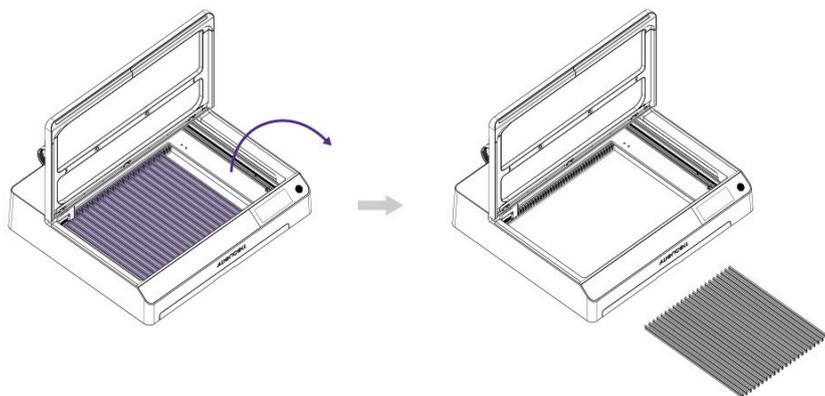

2. Place the honeycomb panel into the machine.

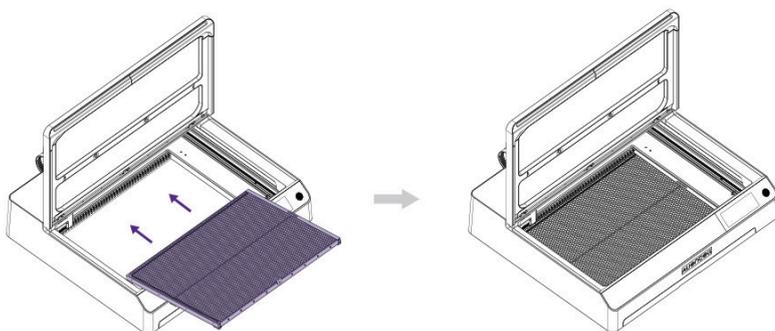

3. Select the **Honeycomb** mode in Aliencell Space.

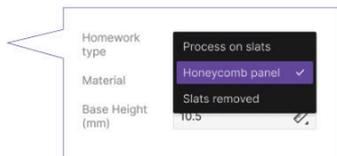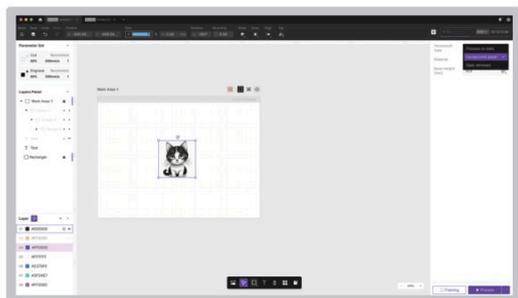

## Maintenance

Residues may remain in the honeycomb panel after material processing. You are advised to take it out and clean it every time after a material is processed, so that the next processing won't be affected.

You can use the brush delivered with the honeycomb panel to clean the cells of the honeycomb panel

