

Micro Swiss FlowTech™ Hotend for Sovol SV08

INSTALLATION INSTRUCTIONS


Tools Required:

- 2.0mm Allen wrench
- 2.5mm Allen wrench

What's in the box:

| | |
|---------------------------|-------------------------------|
| Heatsink | Titanium Mounting Screws (2x) |
| Copper Thermal Adapter | Heater Core |
| 0.4mm Plated Brass Nozzle | Silicone Sock |


STEP 1

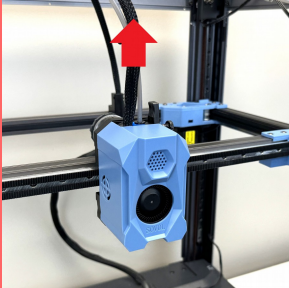

SAFETY / PREPARATION

- Unload the filament from the printer.
- Allow the hotend to cool down to room temperature.
- Power off the printer.
- Disconnect the power cable.

STEP 2

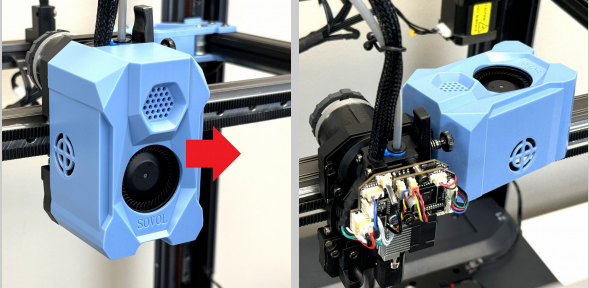

REMOVE THE FAN SHROUD

- Pull the magnetic fan shroud off of the print head.
- Set the fan shroud on top of the aluminum extrusion. Leave the connector attached to the breakout board.


STEP 3



DETACH THE FAN

- Remove the two screws securing the cooling fan to the heatsink. (2.5mm Allen wrench)
- Set the fan on top of the print head. Leave the fan connector attached to the breakout board.


STEP 4

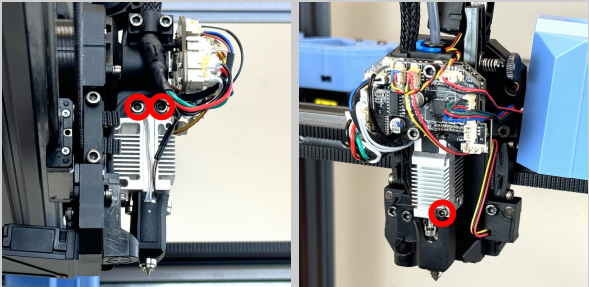

UNFASTEN THE ORIGINAL HOTEND

- Remove the two screws from the top left side of the heatsink. (2.5mm Allen wrench)
- Remove the screw located on the front of the heatsink. (2.0mm Allen wrench)


STEP 5

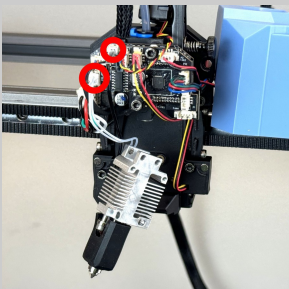

DISCONNECT THE CABLES

- Disconnect the original hotend's thermistor and heater cables from the breakout board.

STEP 6

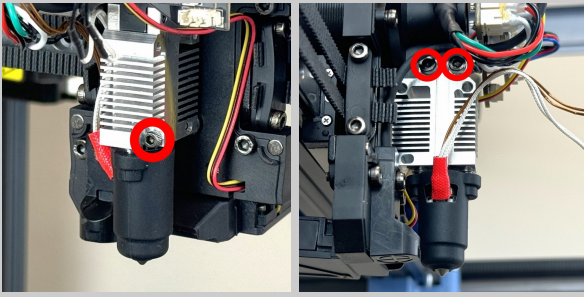


FASTEN THE FLOWTECH HOTEND

- Attach the FlowTech hotend to the carriage using the three original screws. (2.0mm and 2.5mm Allen wrenches)

Use the (M2.5 x 30mm) screw in the front of the heatsink and two (M3 x 16mm) screws in the top left side of the heatsink.


STEP 7

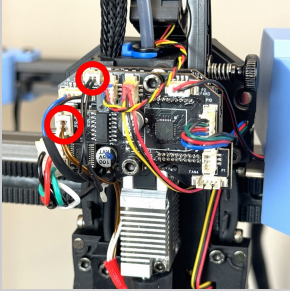

CONNECT THE FLOWTECH HOTEND

- Connect the FlowTech hotend's heater and thermistor cables to the matching ports on the breakout board.

STEP 8

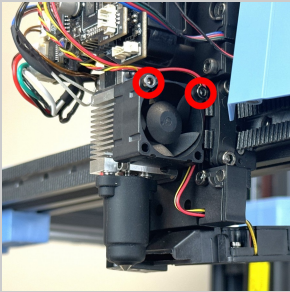


ATTACH THE FAN

- Attach the cooling fan to the FlowTech heatsink using the two original screws. (2.5mm Allen wrench)

Use the two (M2.5 x 18mm) screws.


STEP 9

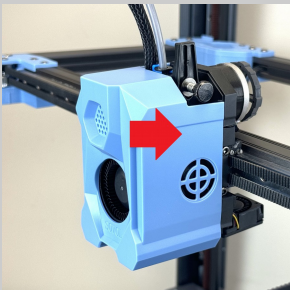

INSTALL THE FAN SHROUD

- Tuck the cables in so that they do not get in the way of the fan shroud.
- Reinstall the magnetic fan shroud.

STEP 10

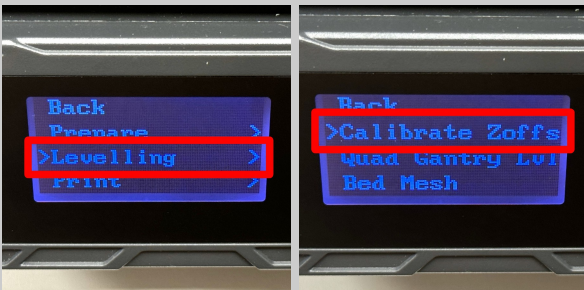

CALIBRATE

- Connect the power cable.
- Power on the 3D printer.
- Navigate the printer screen menus to "Leveling" and then select "Calibrate Zoffset".
- Wait for the calibration process to complete.

Installation Complete!

NOTE

NOZZLE REPLACEMENT PROCEDURE

The FlowTech nozzles can be swapped while the hotend is at room temperature.

- Pull the silicone sock off of the heater core.
- Use a 7mm wrench to unscrew the nozzle.
- Install and tighten the new nozzle until snug (15 inch-pounds of torque) using a 7mm wrench.
- Replace the silicone sock.