



**ROKR**

# Cuckoo Clock



LC901C Art in Time's Tick.

Cuckoo!  
Cuckoo!



Assembly Instruction

or hidden paths  
the dreamy hues,  
ways still  
what fall

## WARNING:

For battery powered products:

1. The product requires 3 "AAA LR03/AM4 1.5V" batteries. (Batteries for self-preparation.)
2. Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are only to be charged under adult supervision.
5. Rechargeable batteries are to be removed from the toy before being charged.
6. Different types of batteries or new and used batteries are not to be mixed.
7. Batteries are to be inserted with the correct polarity (+ and -).
8. Remove the exhausted battery in time.
9. The power supply terminal cannot be short circuited.
10. Do not connect the wire to a mains outlet.
11. The product is not to be connected to more than the recommended number of power supplies.
12. The product contains motor, motor may be a hot component. Do not touch it to avoid burns while operating.

13. Check each part before assembly. If the part is damaged, fix it well before assembly.


14. The instruction must be retained since it contains important information.

For USB connection products:

1. Not suitable for children under 3 years old.
2. The product shall only be used with a transformer for product or a power supply for it.
3. The transformer or power supply is not a toy or model.
4. The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
5. Do not connect the wire to output socket.
6. The product is not to be connected to more than the recommended number of power supplies.
7. The product contains motor, motor may be a hot component. Do not touch it to avoid burns while operating.
8. This product does not need liquid cleaning, and please clean the product with clean soft cloth.
9. Misuse of transformer can cause electrical shock.
10. This product is only to be connected to equipment of Class II. 
11. The product shall be used with the power supply supplied, if the transformer is supplied with the product.
12. The instruction must be retained since it contains important information.



video presentation

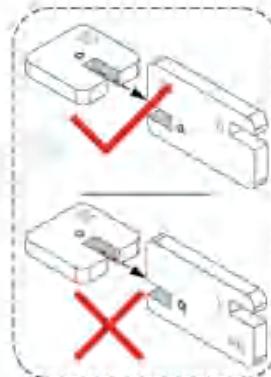

## NOTICE:

1. Children should be accompanied by adults while assembling.
2. The product contains small parts and electronic components. Adults should guide and supervise children in the correct use of the product to prevent ingestion or choking.
3. Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
4. Please carefully read the instruction book when assembling

and keep it properly for later verification.

5. There are letters on some parts as shown and assemble them together with the same letters.

6. For some complicated steps, please scan the QR code with remind for assembling videos.

7. There is a little difference between several parts and the pictures on instruction, subject to parts number.

8. Please don't clean this product with chemical cleaners:

alcohol, ammonia water, glass cleaner, etc.

9. Please clean the product with clean soft cloth, and sand the board bur lightly with sandpaper.

10. Please keep the product away from substances flammable and humid environments to prevent damage.

## Q&A:

| Problem                                           | Cause                                                                                                                                                                                           | Solution                                                                                                                                                                                                                                   |
|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. How to solve the fracture of parts?            | 1. Parts are fragile and applied with too much force.<br>2. Some parts are marked with pressure application point. Do not press nonpressure application point or at the end of the long pieces. | 1. Take off the pieces carefully.<br>2. Some fragile pieces have spare ones to replace.<br>3. Contact our customer service for free replacement parts.<br>4. Adhesive can be used if the decorative part (non-drive function part) breaks. |
| 2. It's hard to assemble parts. What should I do? | 1. Some transmission parts may fit tightly, and tools can be used to assist in pressing.                                                                                                        | 1. Check for assembling errors.<br>2. Press with the tool J15.                                                                                                                                                                             |

## Part list (Tips: suggest to put the parts in a box to prevent loss.)

Bag No. 1

| Name         | Steel shaft | Steel shaft | Spring | Screw-driver | Rocker gear | Magnetic lever | Round shaft sleeve | Screw | Screw | Screw | Screw | Screw | Dark brown cord |
|--------------|-------------|-------------|--------|--------------|-------------|----------------|--------------------|-------|-------|-------|-------|-------|-----------------|
| Item number  | P1          | P2          | P3     | P4           | P5          | P6             | P7                 | P8    | P9    | P10   | P11   | P12   | P13             |
| Illustration |             |             |        |              |             |                |                    |       |       |       |       |       |                 |
| Quantity     | 1           | 1           | 1      | 1            | 1           | 1              | 5                  | 6     | 5     | 10    | 6     | 2     | 1               |

Bag No. 2

| Power adapter | String light | Touch switch | Red-white wire | Green-white wire |
|---------------|--------------|--------------|----------------|------------------|
| P14           | P15          | P16          | P17            | P18              |
|               |              |              |                |                  |
| 1             | 1            | 2            | 1              | 1                |

Bag No. 3

| Steel wire | Hour hand | Minute hand | Second hand | Rubber ring |
|------------|-----------|-------------|-------------|-------------|
| P19        | P20       | P21         | P22         | P23         |
|            |           |             |             |             |
| 2          | 1         | 1           | 1           | 1           |

| Circuit board | 130 Motor | Clock movement | Upper shell |
|---------------|-----------|----------------|-------------|
| P24           | P25       | P26            | P27         |
|               |           |                |             |
| 1             | 1         | 1              | 1           |

| Lower shell | Loudspeaker | Battery box |
|-------------|-------------|-------------|
| P28         | P29         | P30         |
|             |             |             |
| 1           | 1           | 1           |

| Board K | Board L |   |
|---------|---------|---|
|         | 1       | 1 |
|         |         |   |
| 1       | 1       | 1 |

## Icon Illustration

U9 + " +" means the part has spare ones

3 P20 Part P20 in Bag No. 3

! Special attention in assembly

Perspective changed

Complete 2 same parts

Polish the parts with sandpaper

Printed side

Blank side

1 Step 1






2 Step 2

1

P24

P25

P28

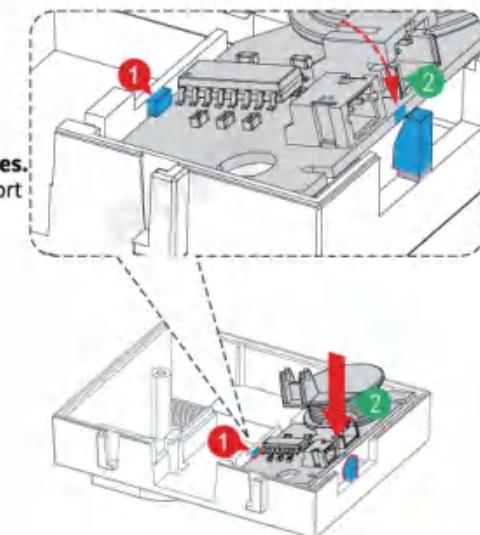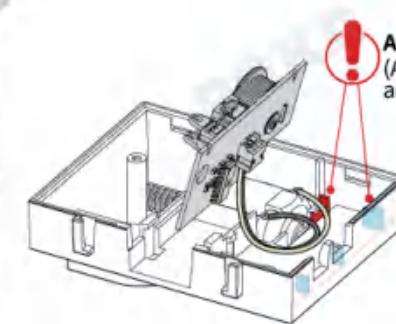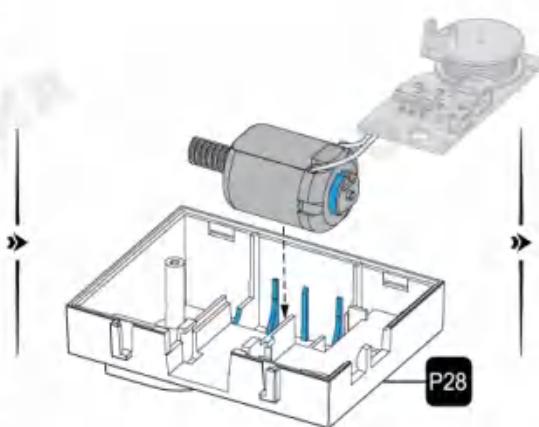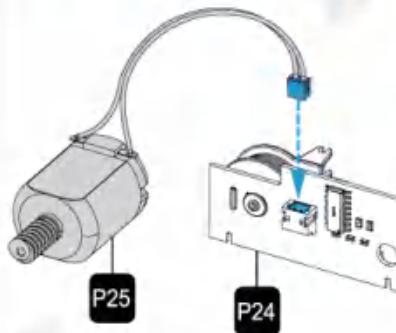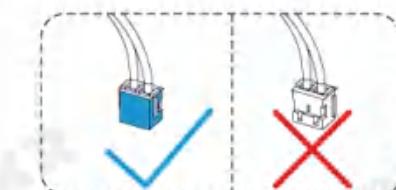

1

P3

1

P5

1


P12 x2

3



P19 x2

K1



K3

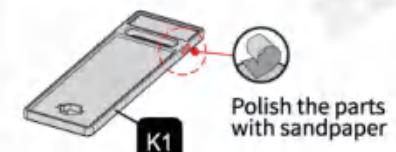

Polish the parts with sandpaper

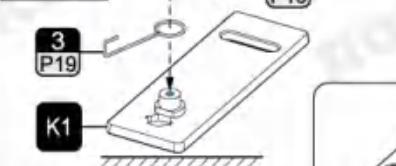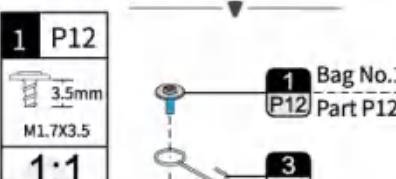

Put flat on the table to assemble.

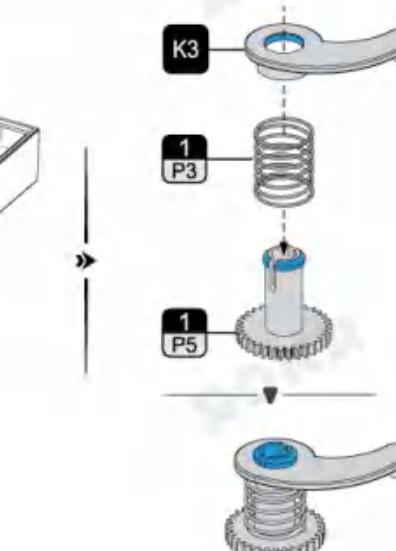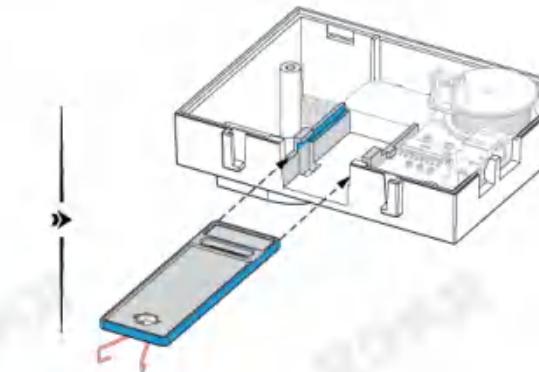

1

P12

3.5mm

M1.7X3.5

1:1


1

P12



3.5mm

M1.7X3.5





1:1

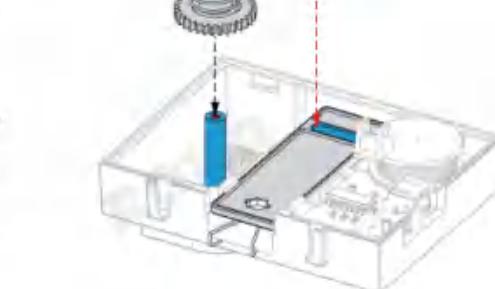

1 P6  
L6  
L7  
L8  
L9  
L10  
L11

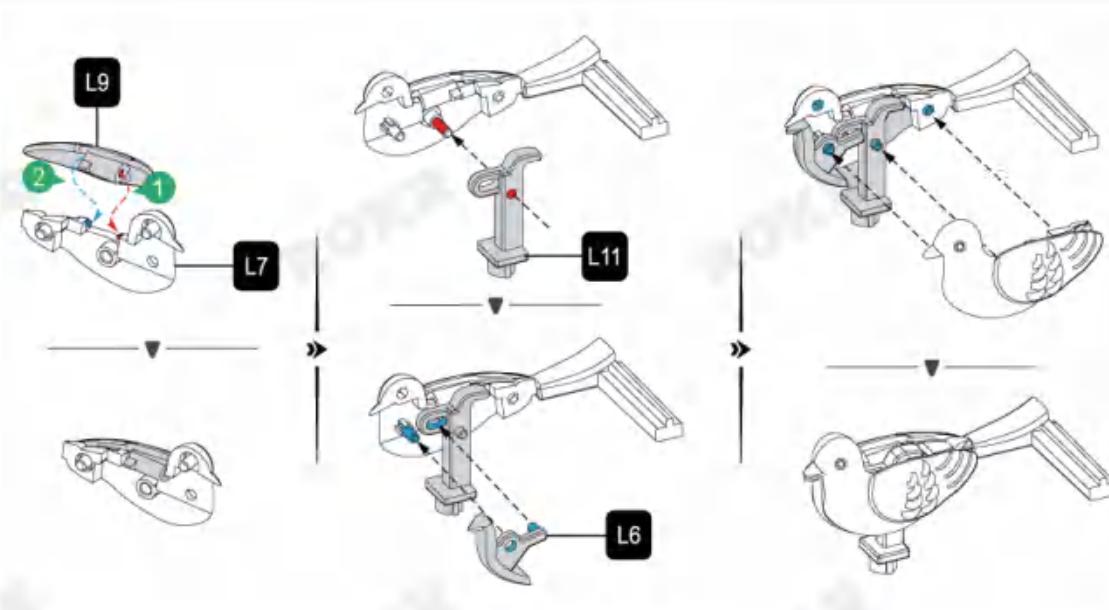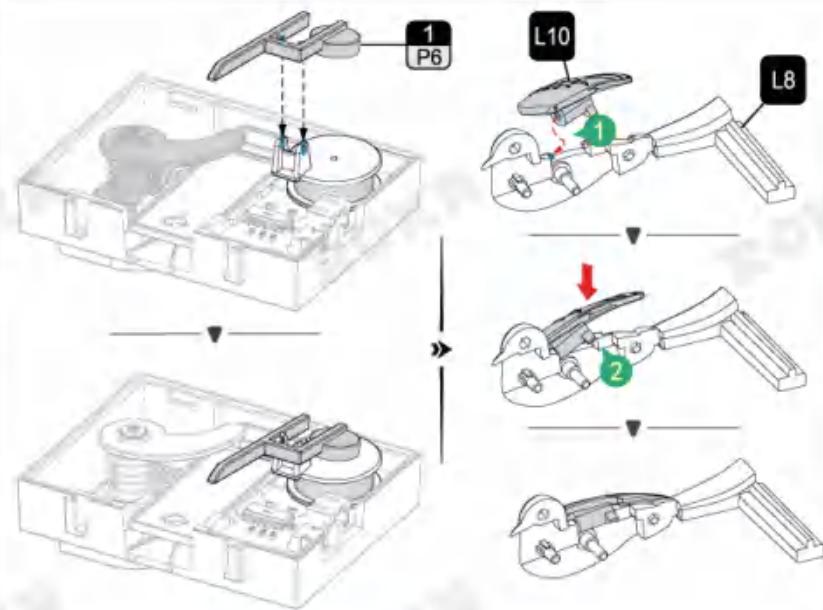






1 P10 x2  
P27  
K2

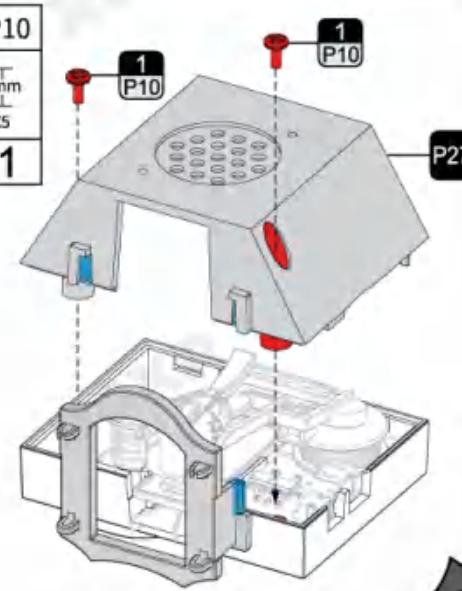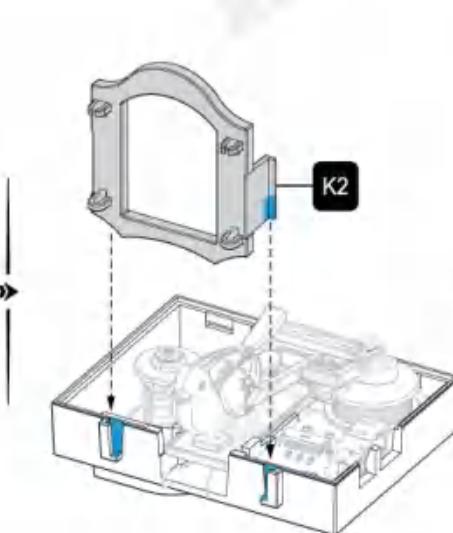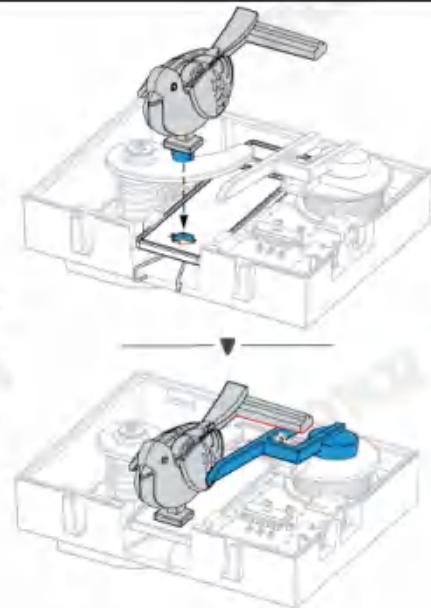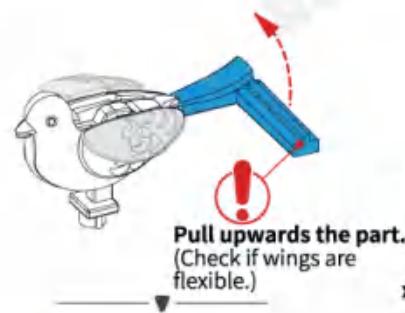

Paint the bird as preferred.  
(Paint and brushes not included.)

K4

K5

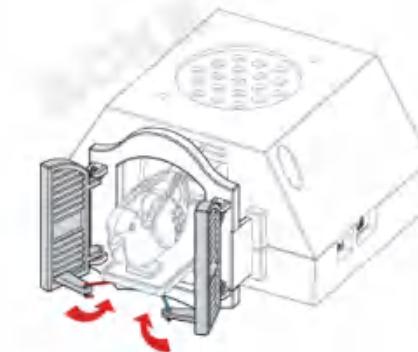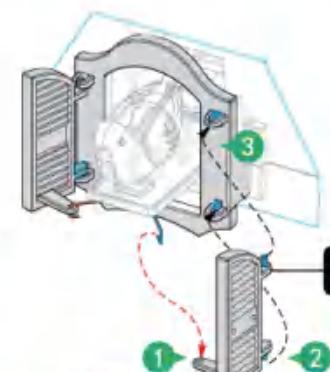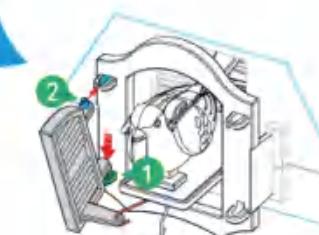
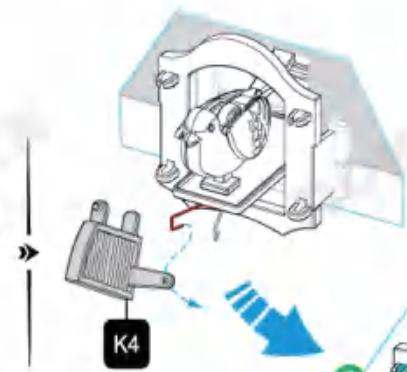
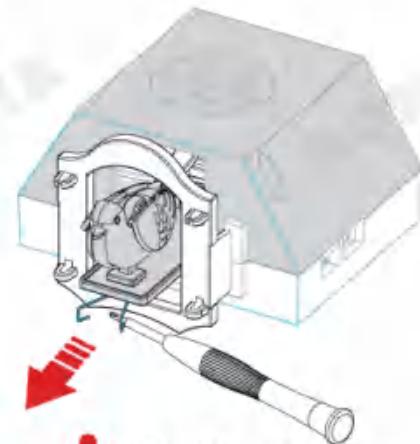


G15




G16

1  
P10 x2

P29

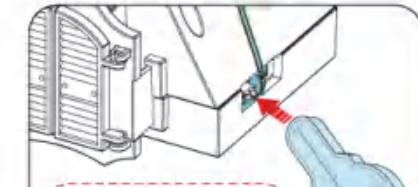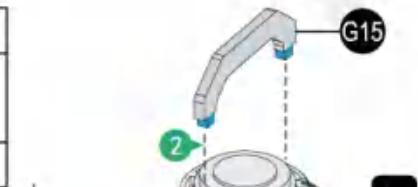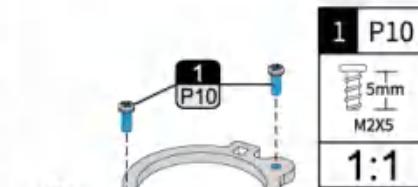



2

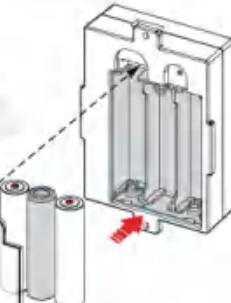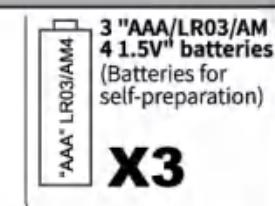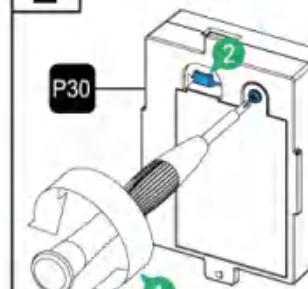

3 "AAA/LR03/AM4 1.5V" batteries  
(Batteries for self-preparation)


**X3**

## 1. Test Hourly Chime

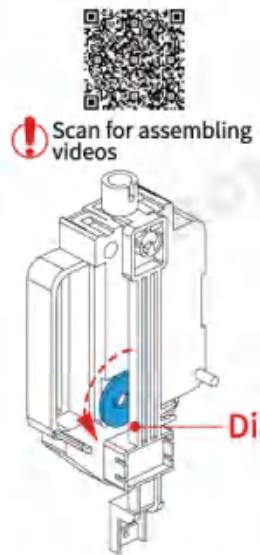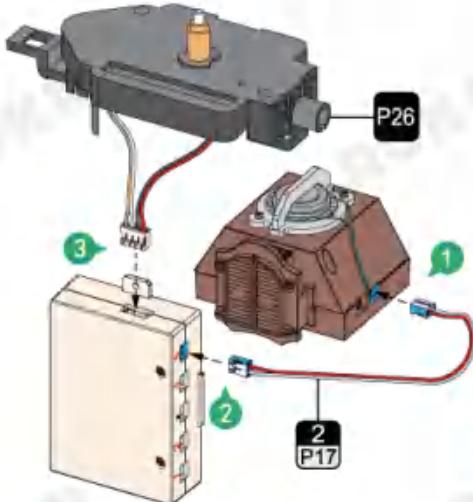



1. Slowly turn the **dial** counterclockwise. A "click" indicates the hour, and the cuckoo will chime.  
(After the "click" is about to trigger, adjust gently for clearer hourly chimes.)
2. After chiming, remove the end of movement **P26**. Do not drag the dial, otherwise chime accuracy will be affected.

## 2. Test Functions

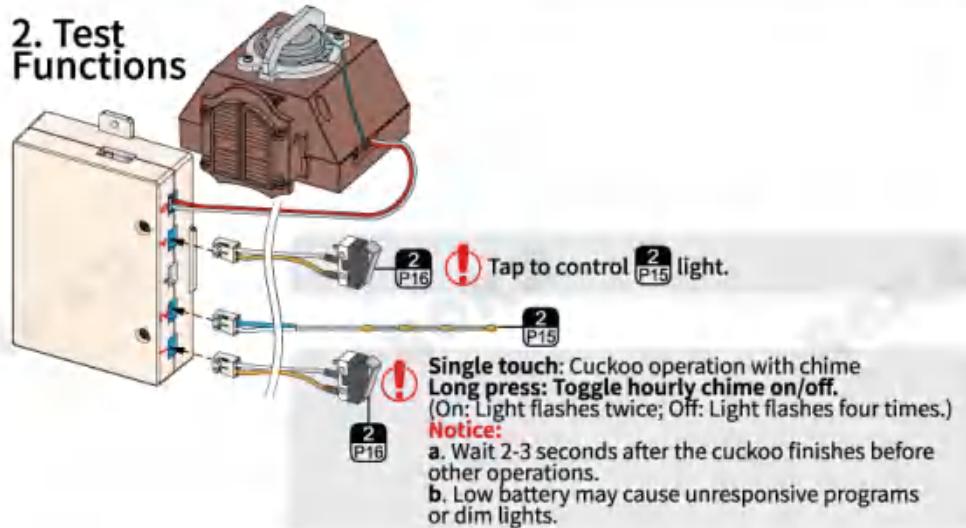

## Test Type-C Adapter Power Supply

(Repeat the above Test Functions.)

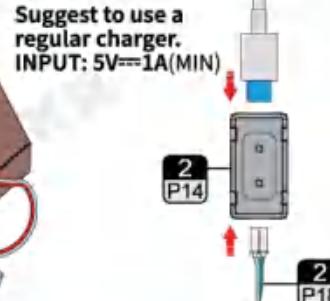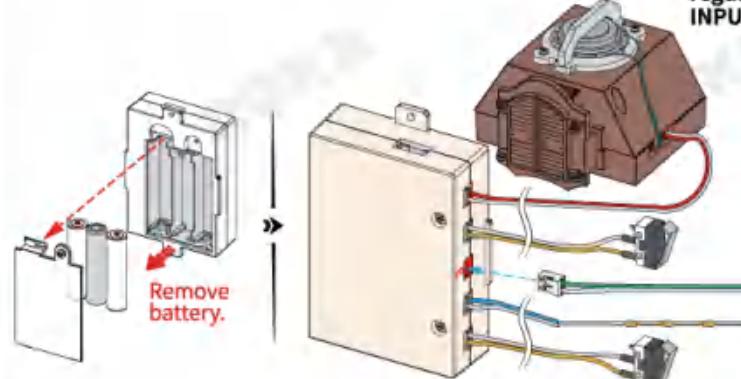


1. Type-C and battery power **can be used simultaneously.**
2. If using Type-C for a long time, remove the battery.


## 3. After testing, remove all electronic components

(Place them in the corresponding bag/box.)

Bag No. 2

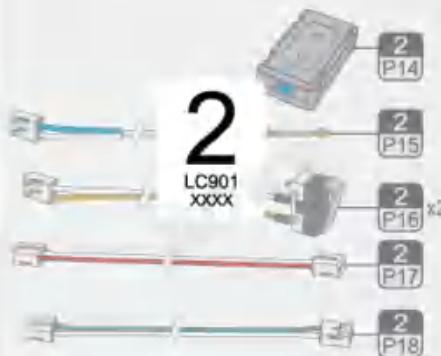

Box

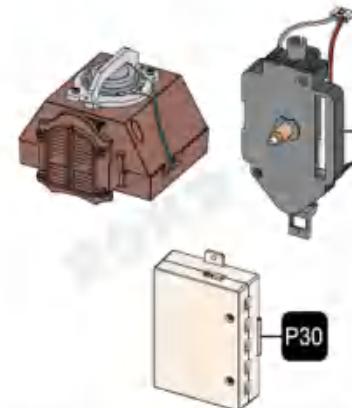

3




D14 x4

D15 x4

D20

D22

E1

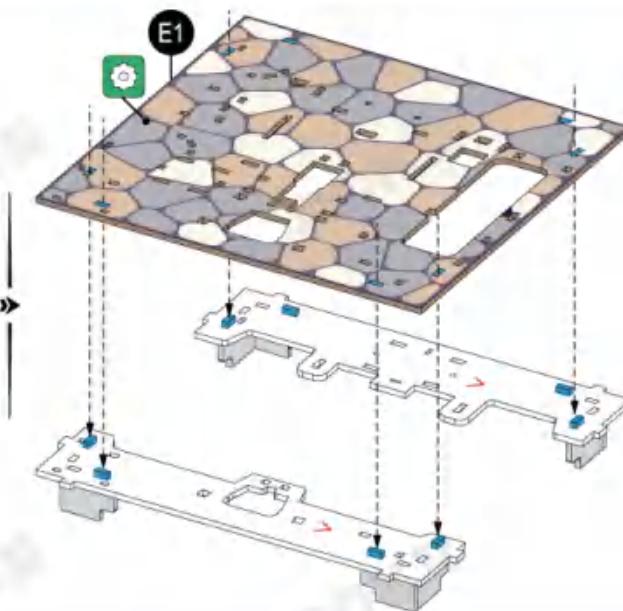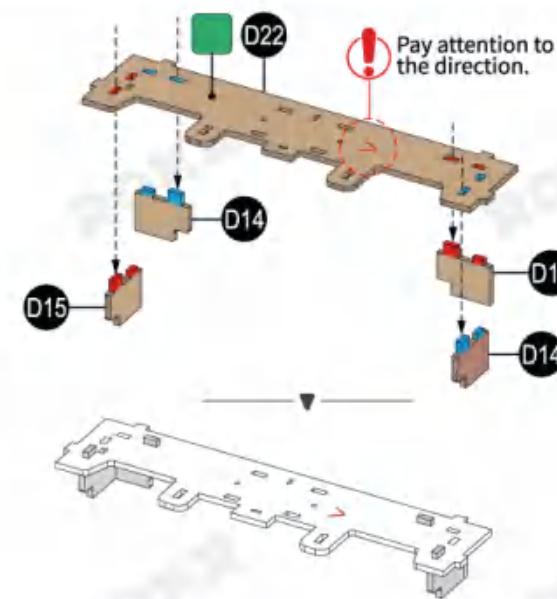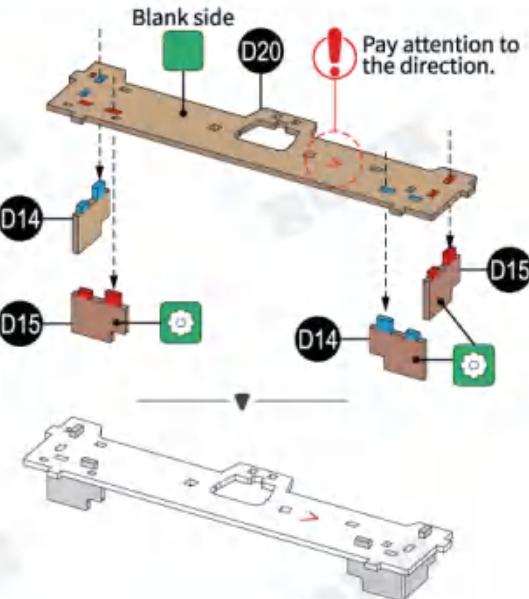

D5

D7

J6

J15

1 P1

1 P7 x2





1 P8 x2

2 P16




1 P8

12mm  
M2X12




1:1

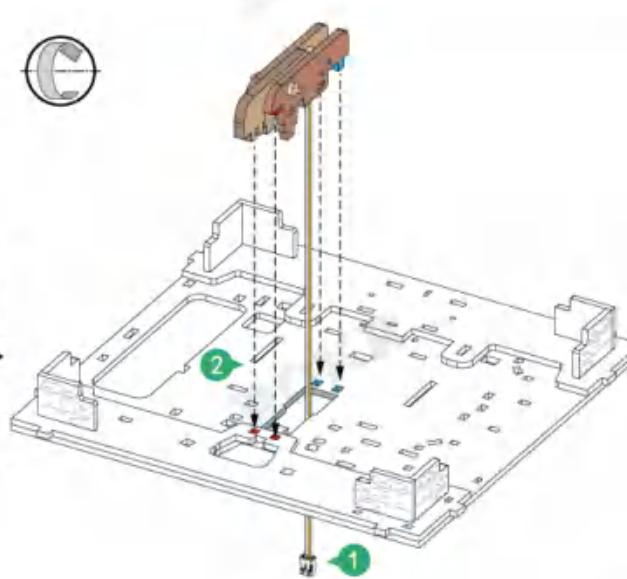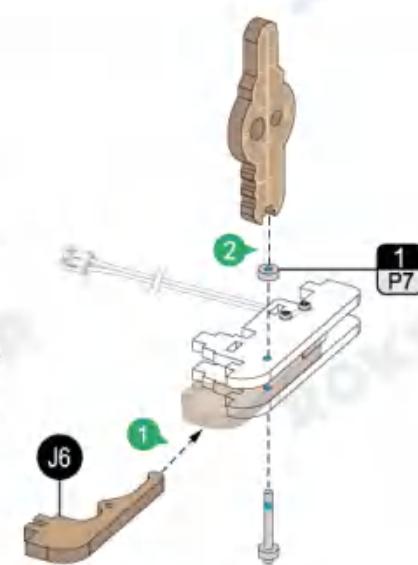
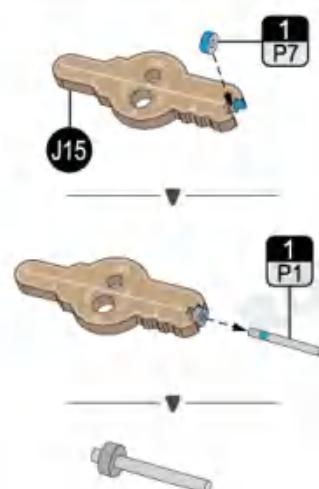
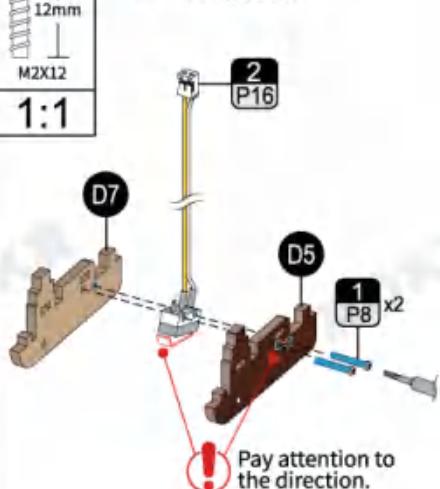
P1  
x1 20mm 1:1

A7 x2  
J3  
J4  
J5  
J7  
J12  
J13  
J14

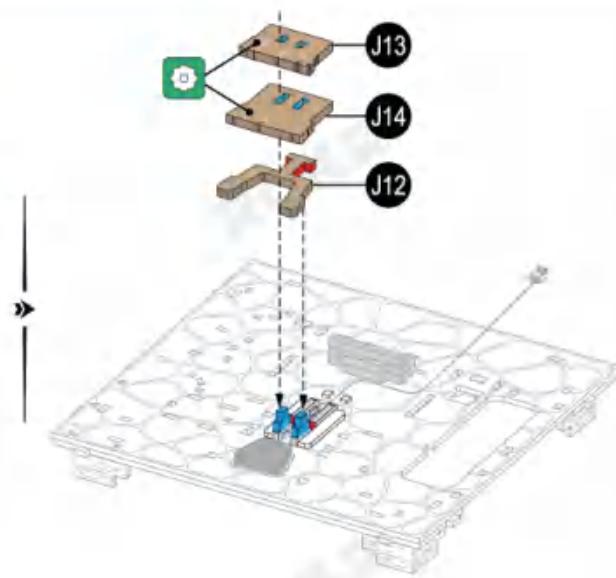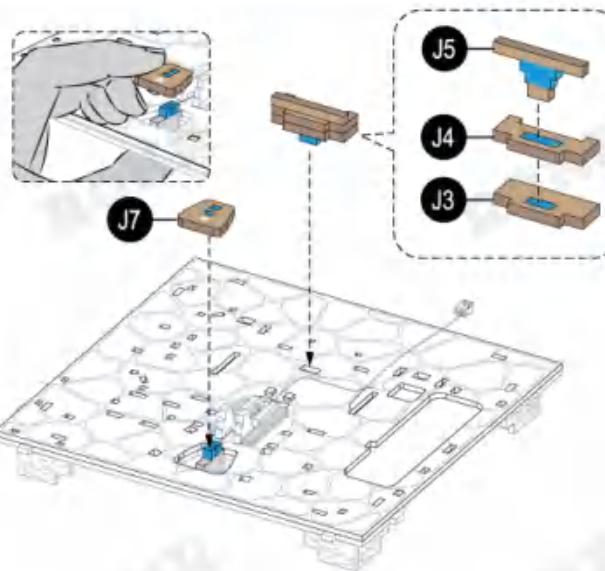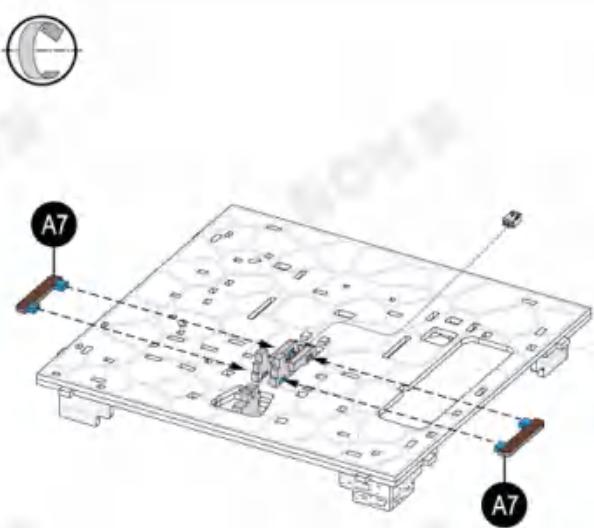


B28  
D8  
D21x2  
H17  
J1  
J2  
J26  
J27

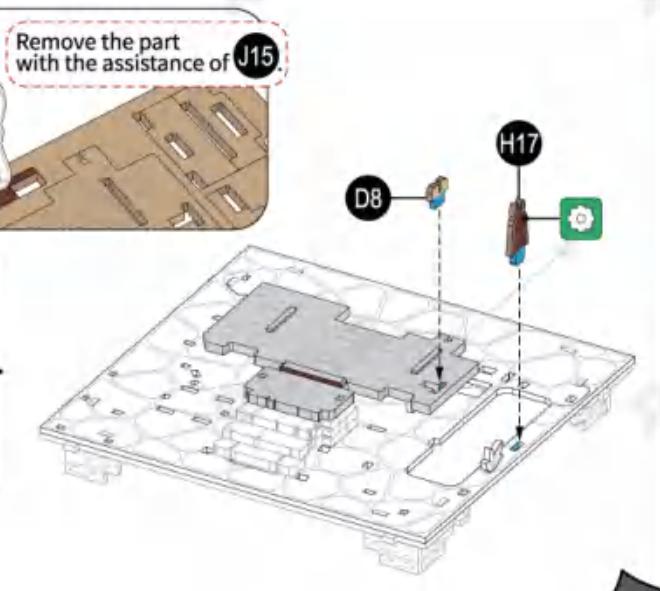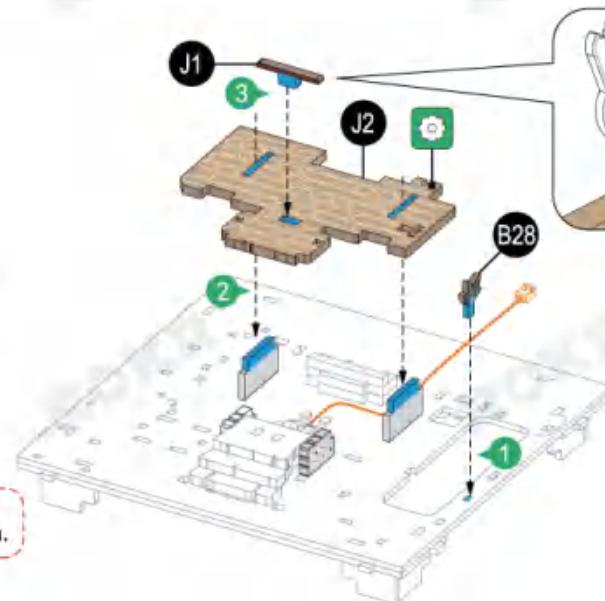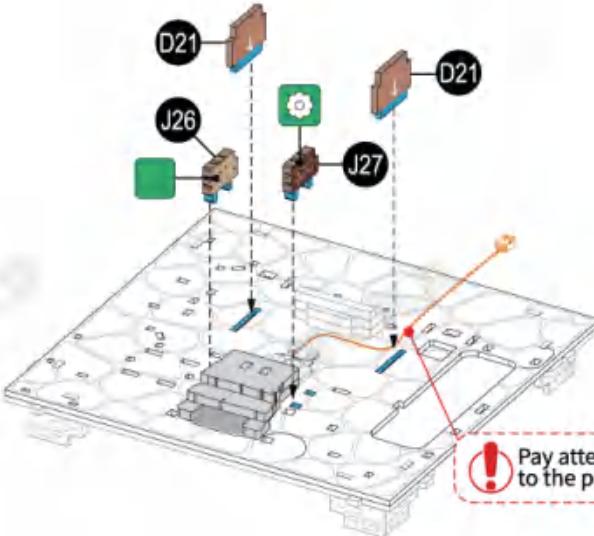

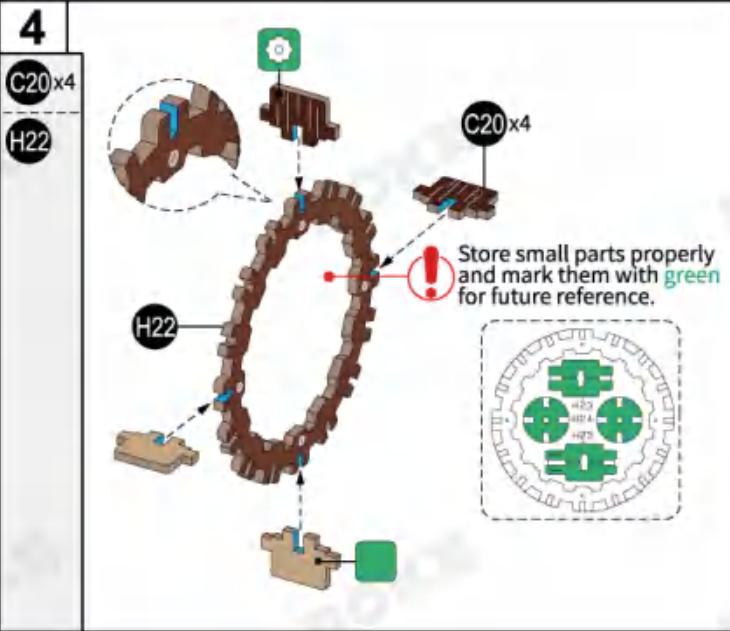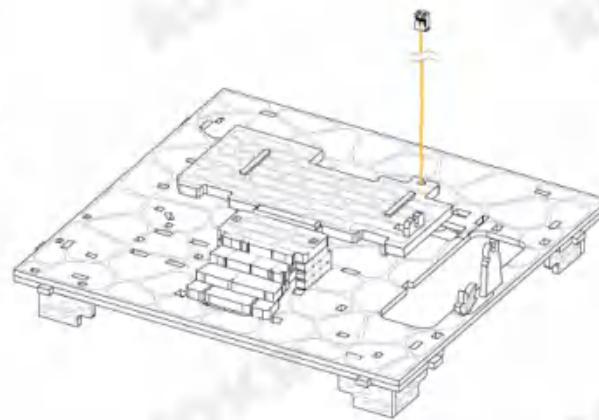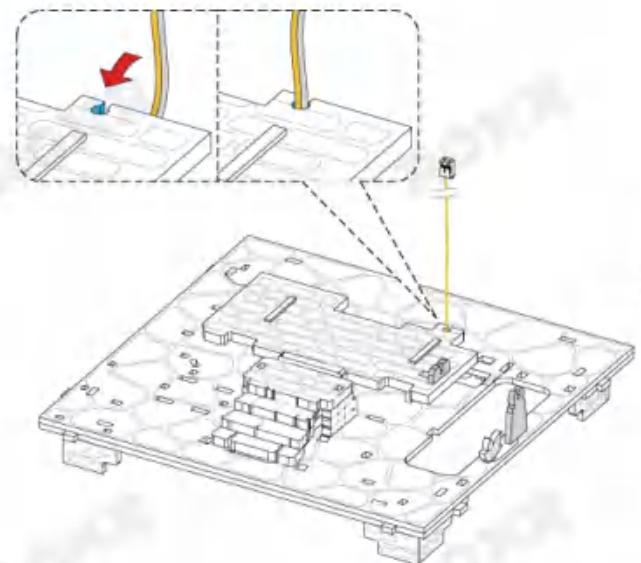

**C19x12**  
**H15**  
**H23x2**  
**H24**  
**H25x2**  
**H26**

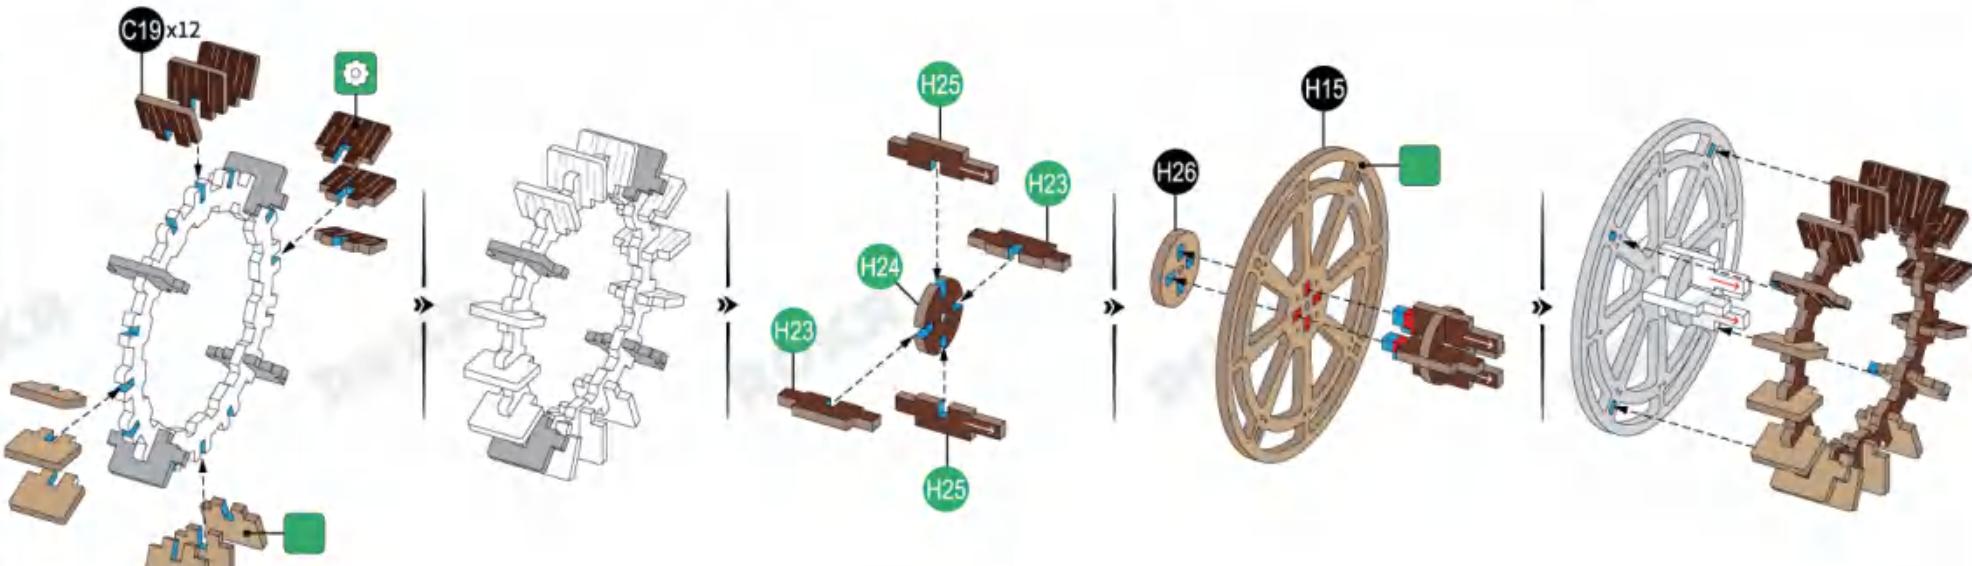

A24x2


E2

H15



H16

1 P2




1 P7x3

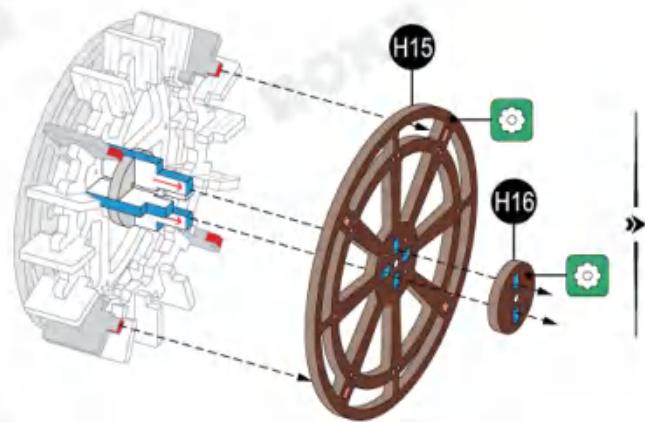




P2  
x1 45mm 1:1

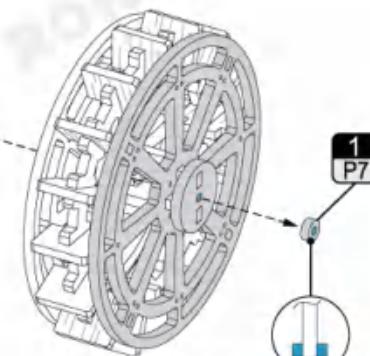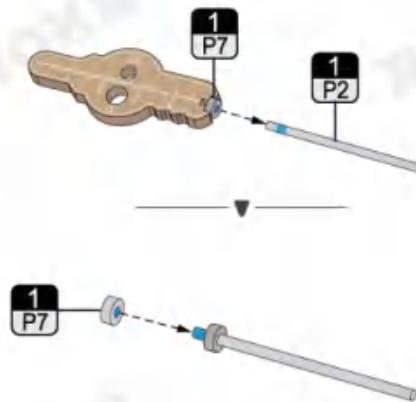

Ensure that it is  
pressed flush here.



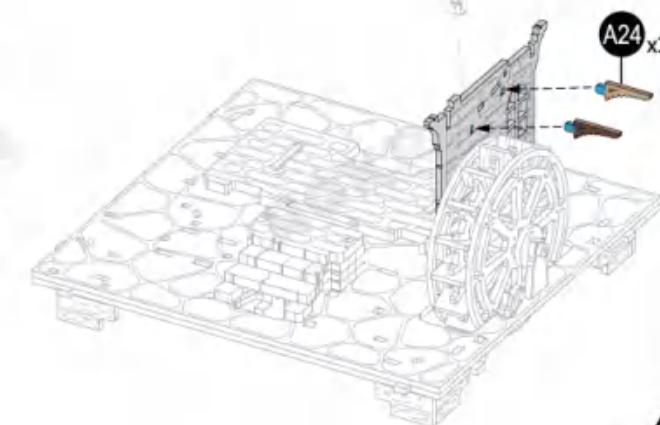
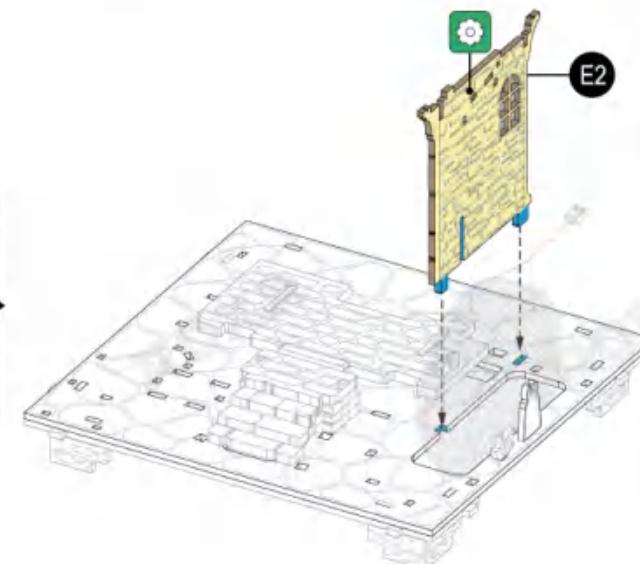
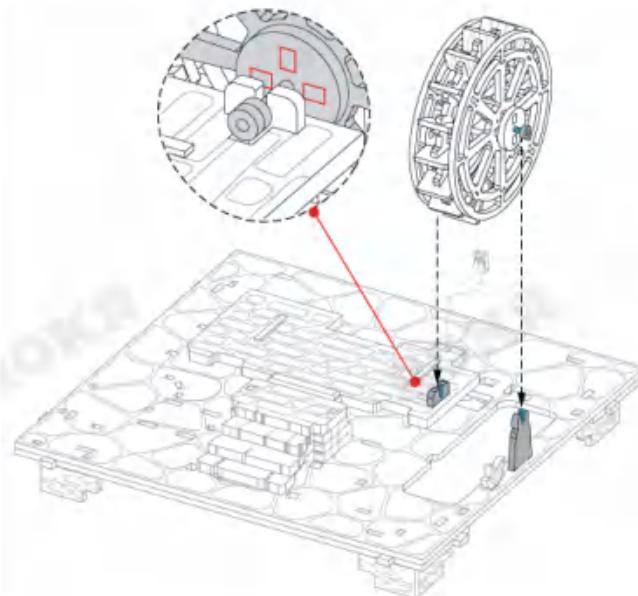


A23  
A25  
A26  
A27  
A32  
J8

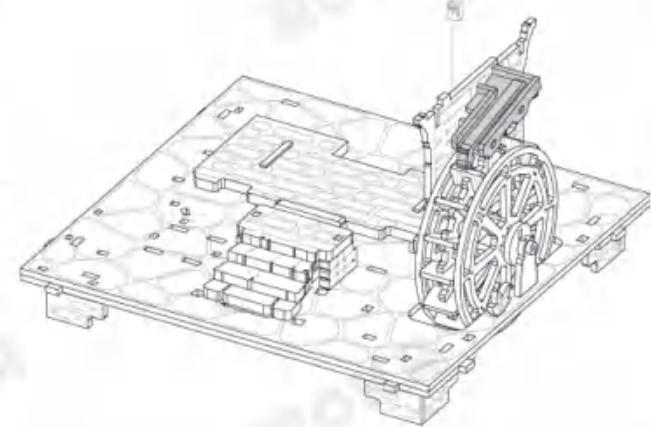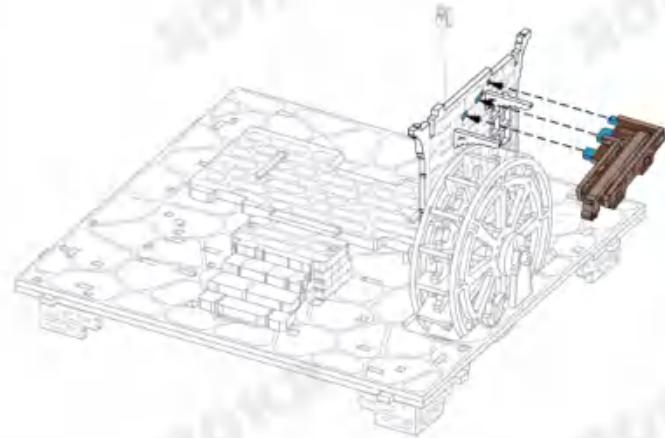
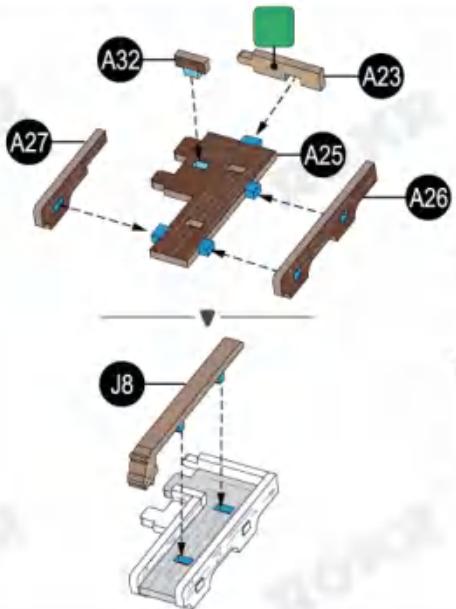


5

A28 x2  
A33 x2  
C10 x2  
C17  
C18  
D1  
D2 x2  
D16 x4  
D19 x2

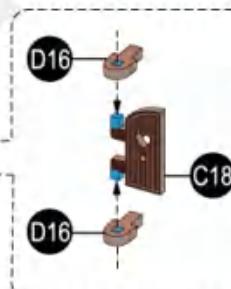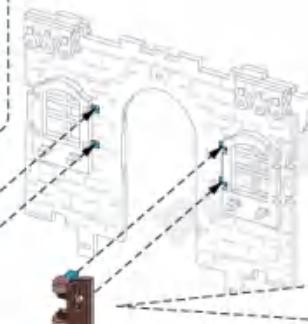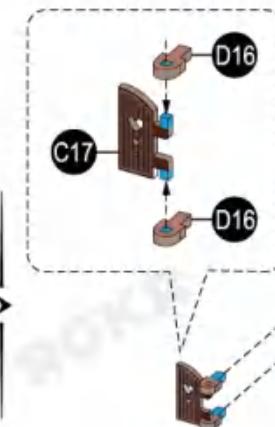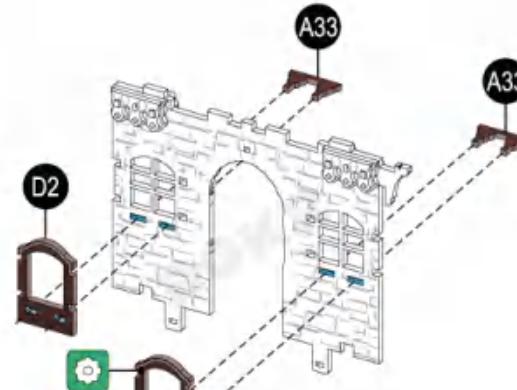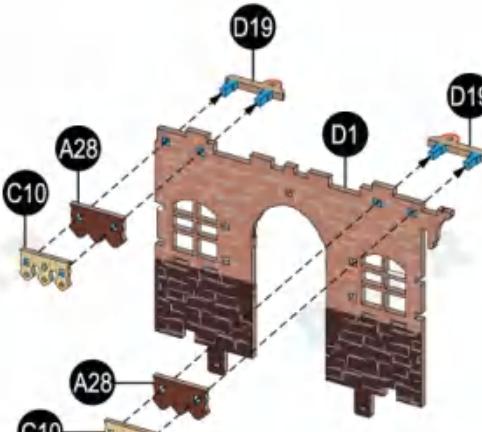


A15  
B14x2  
B15x2  
C17  
C18  
D6  
D12  
D13  
D17ax2  
D17bx2  
J25x2


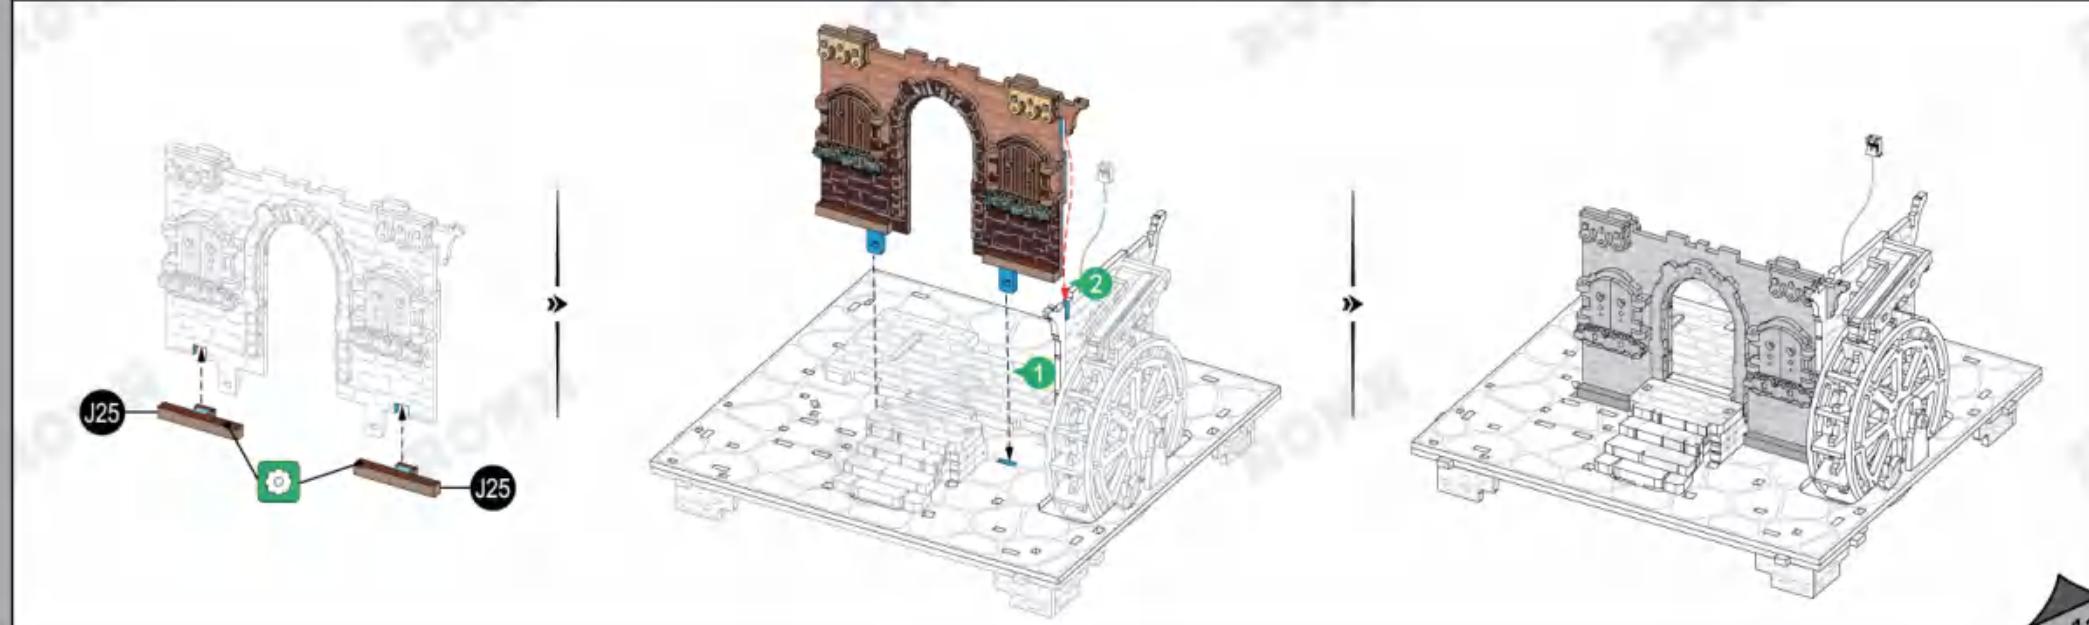
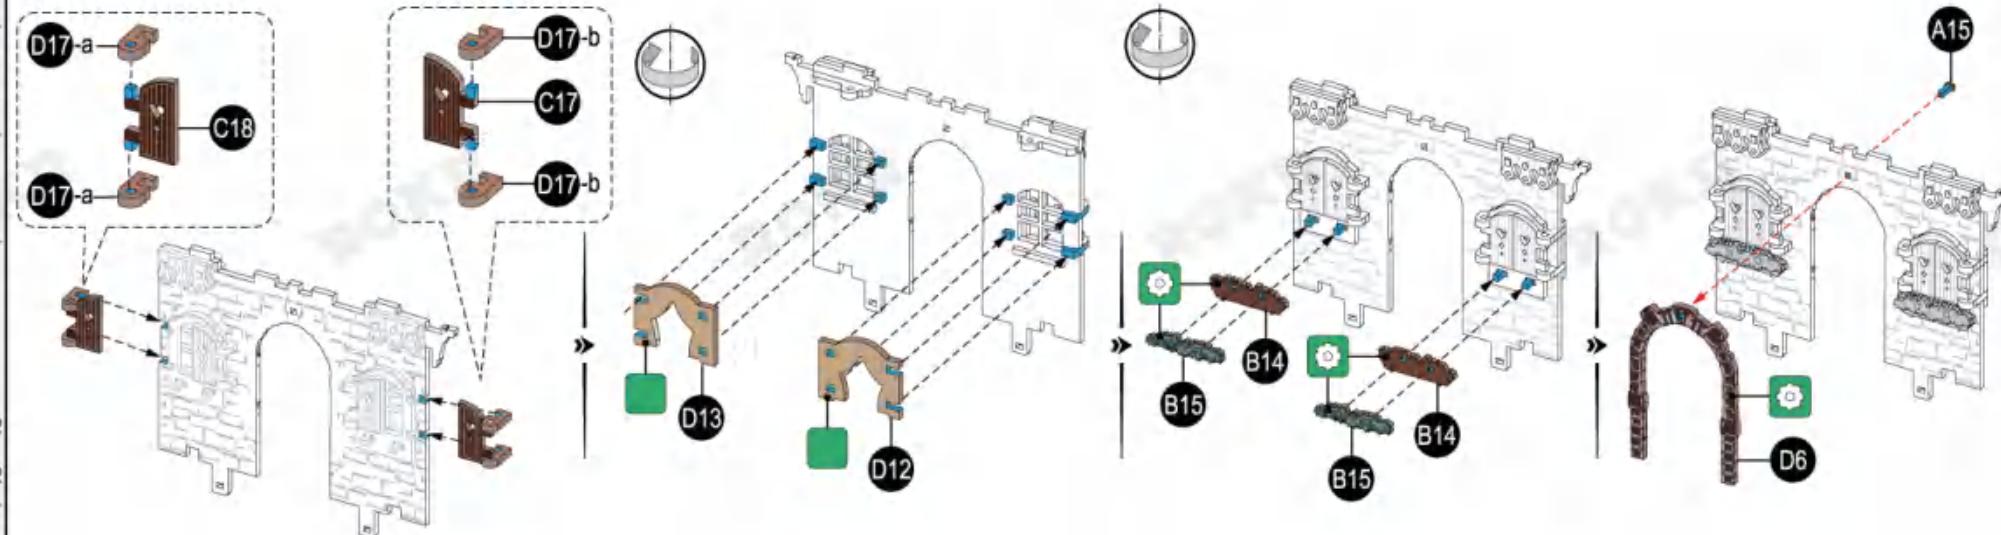


6

A18  
A19  
C8 x3  
D18  
E14 x2  
E16 x2  
F14  
J10  
J21


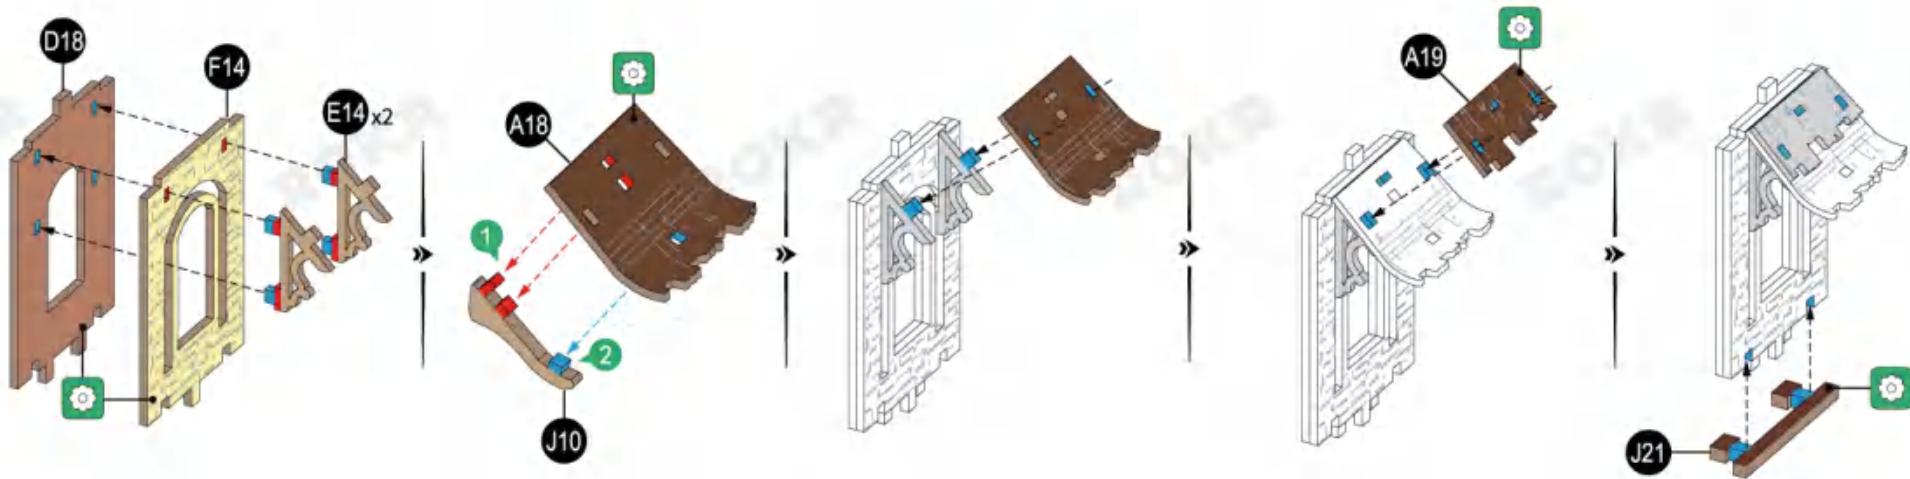


⚠️ Notice: Avoid interference.

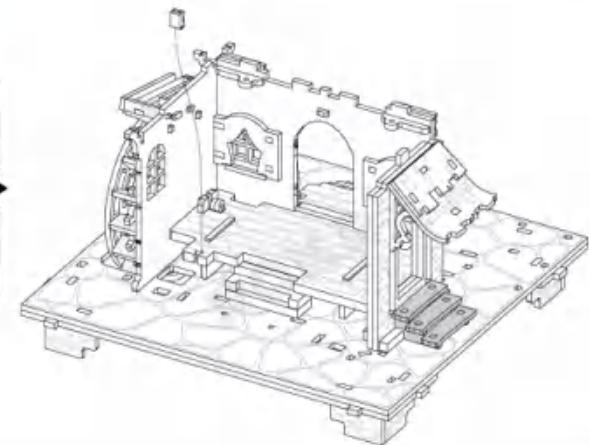
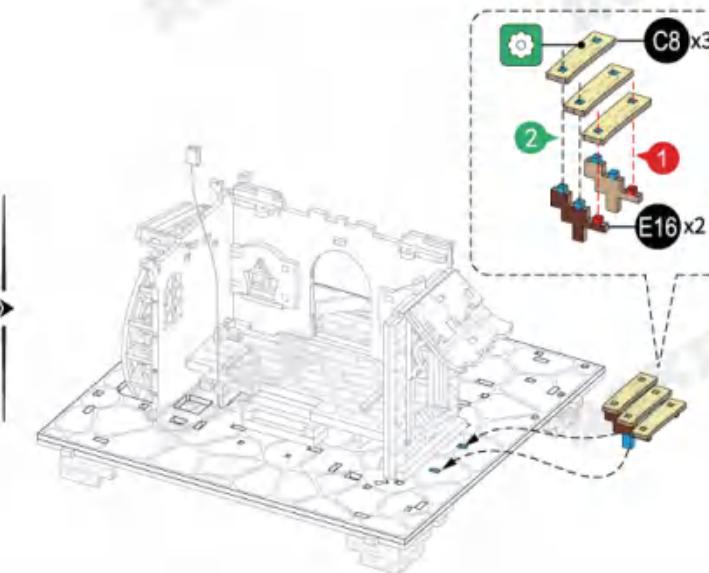
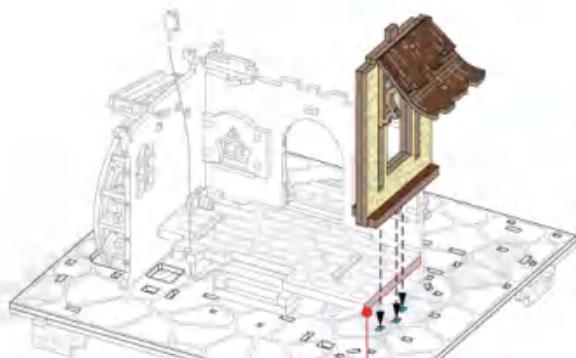


7




A15x4  
 A20  
 A35  
 C5  
 C9x2  
 C14x2  
 C38x2  
 C39x2  
 D3x2  
 E6  
 E7x2

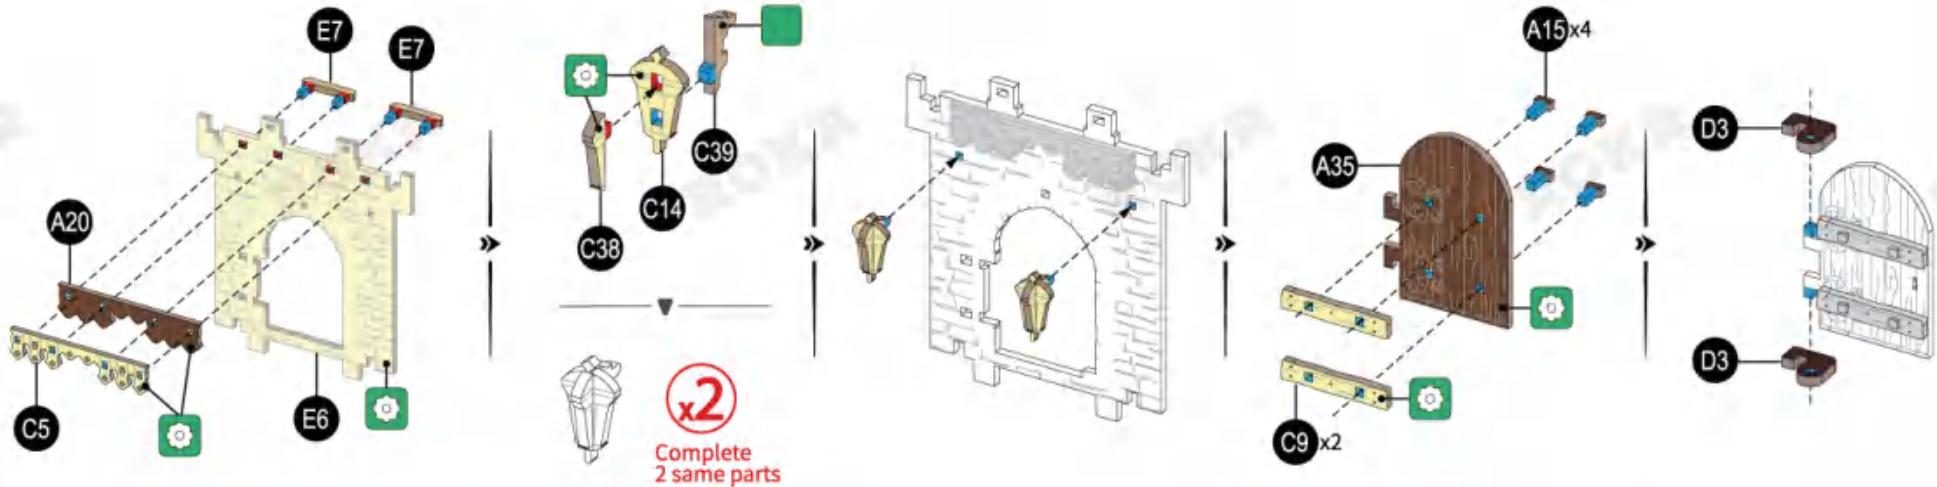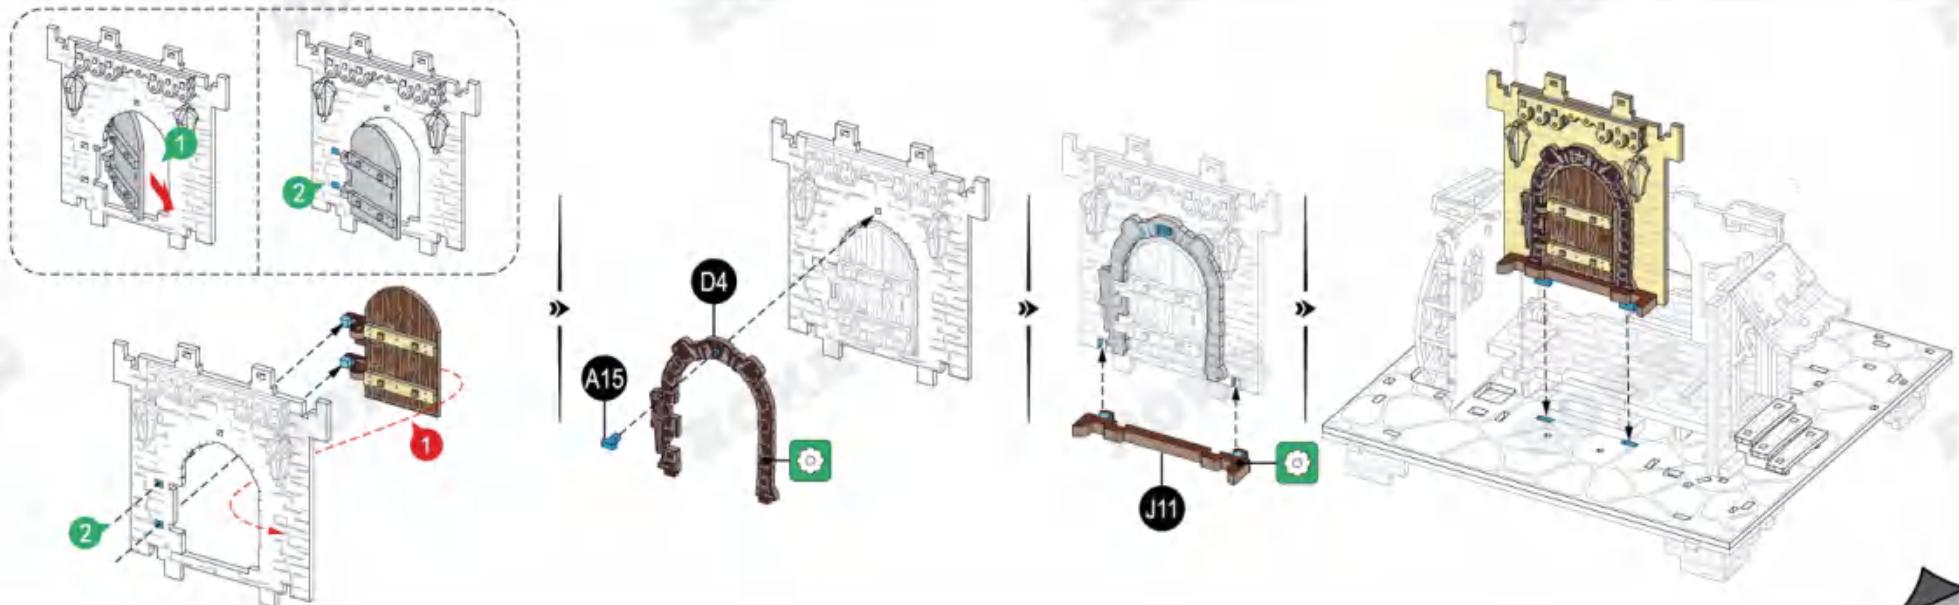A15  
D4  
J11







A15x2  
C6  
C7  
E3  
E5  
E13  
J9 x2

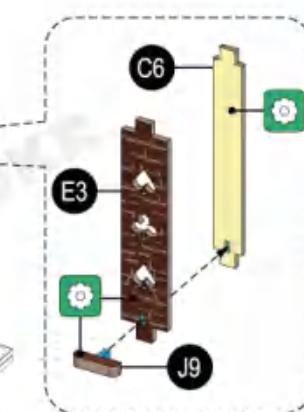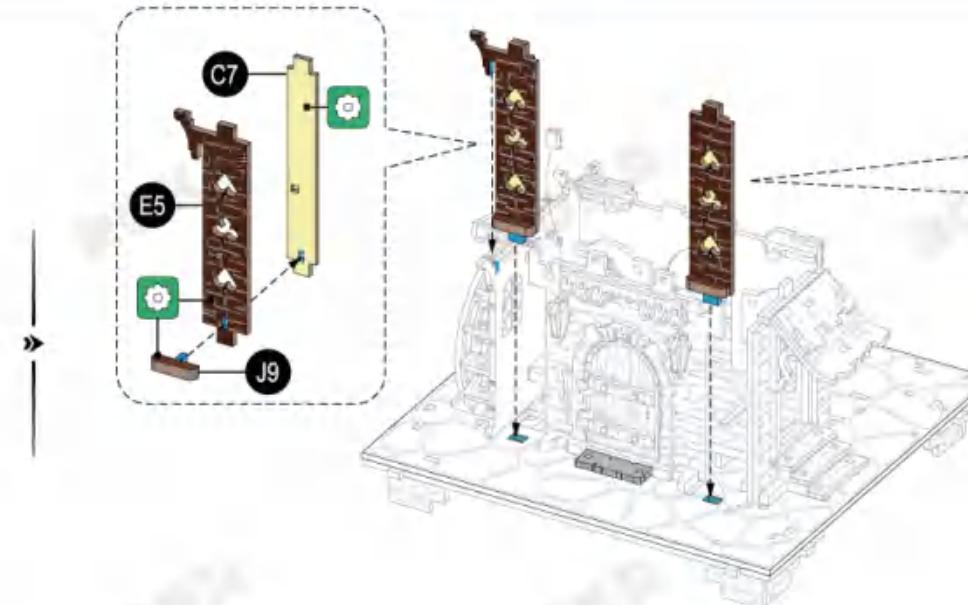
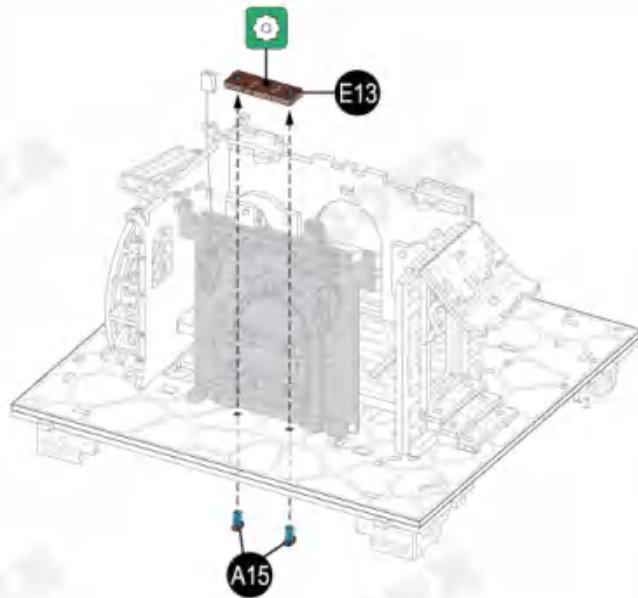


E4 x2  
E9  
E12  
E15  
E17  
E18  
J17 x2

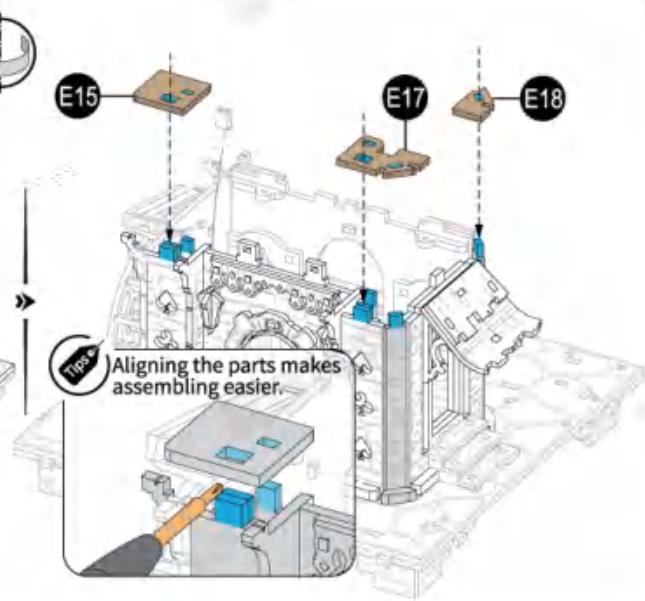
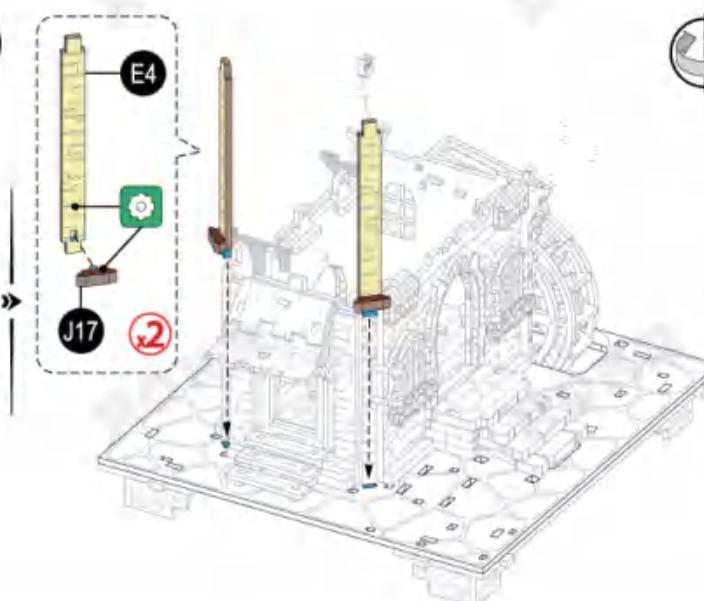
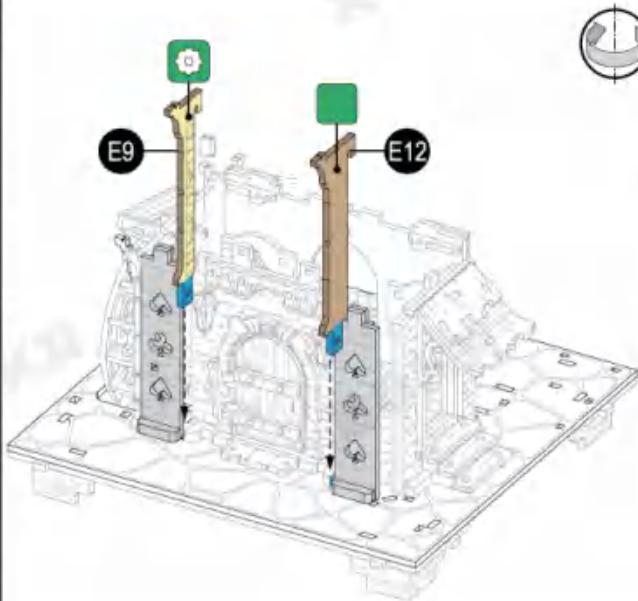


E10x4  
E11  
H14  
H18  
2  
P15

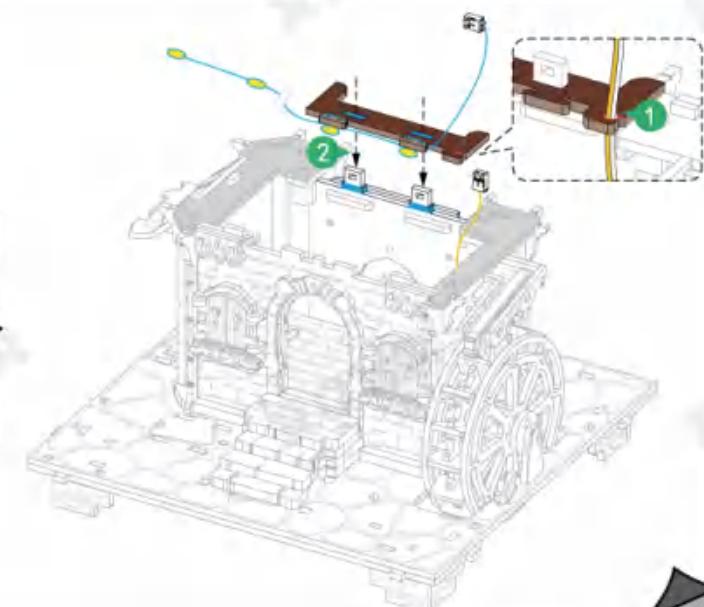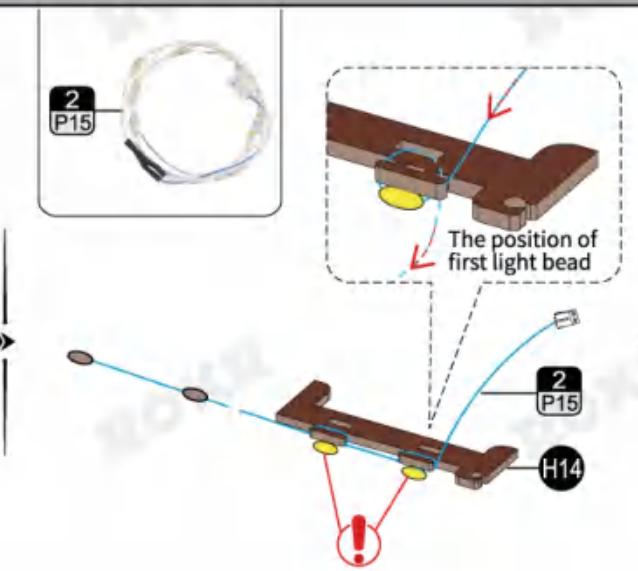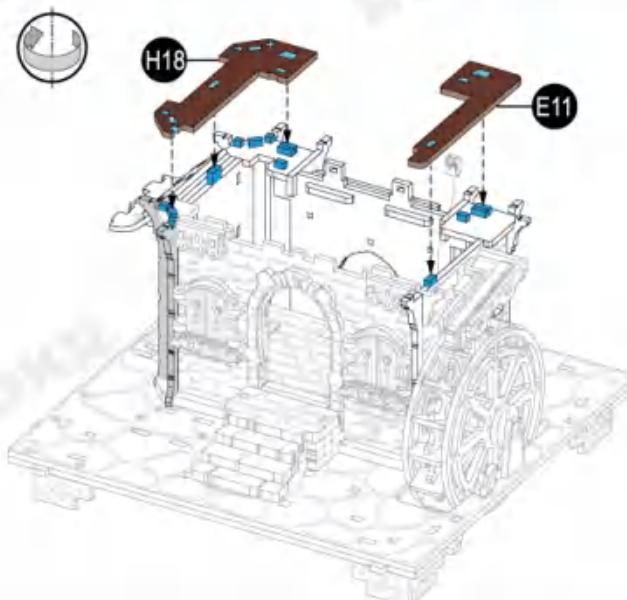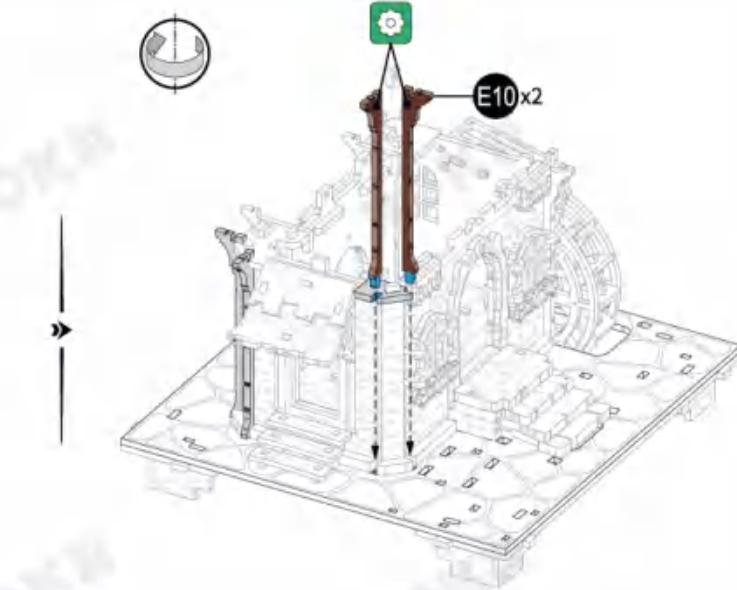
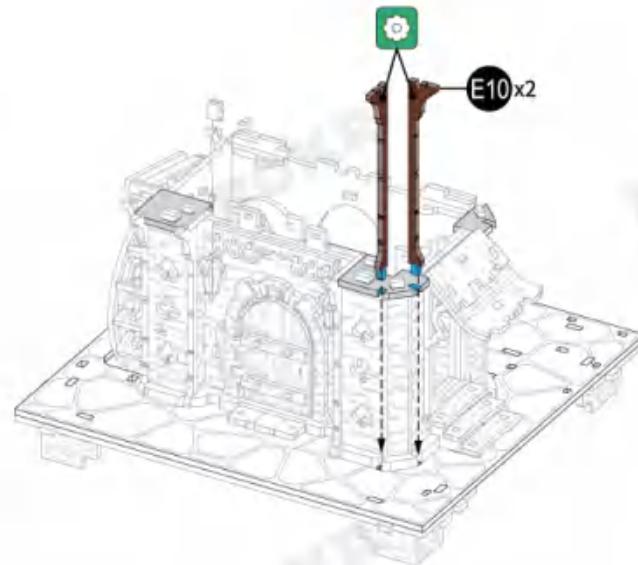
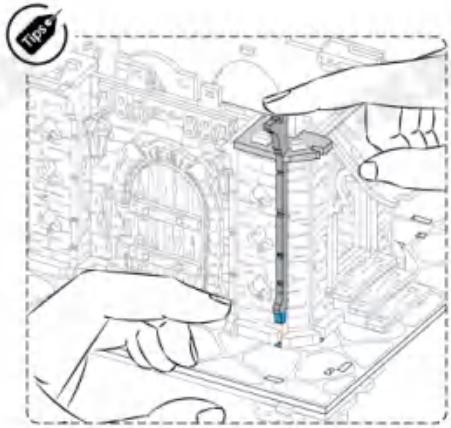


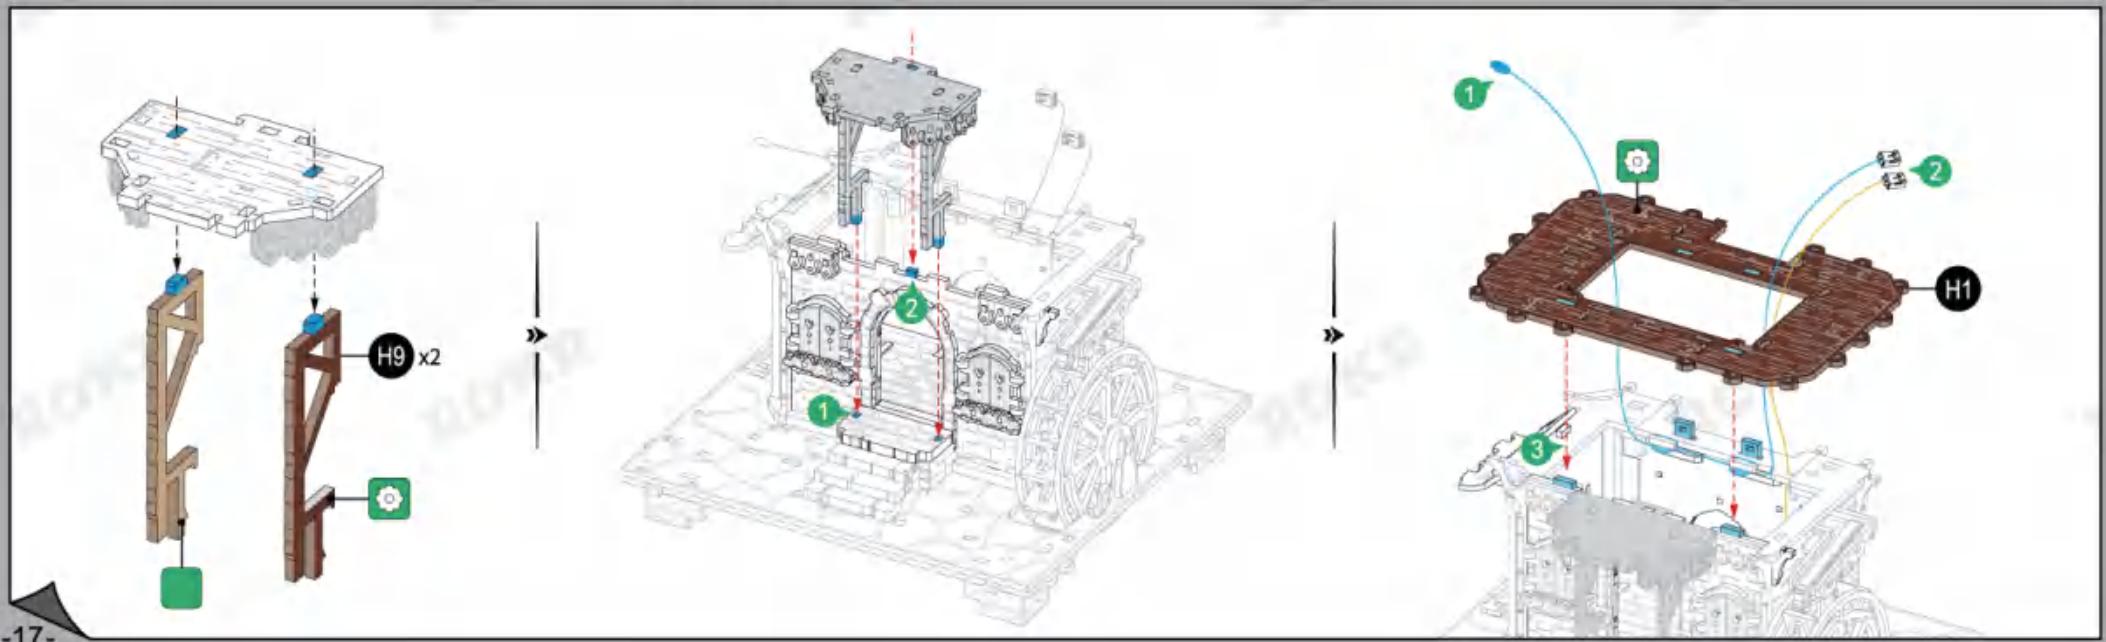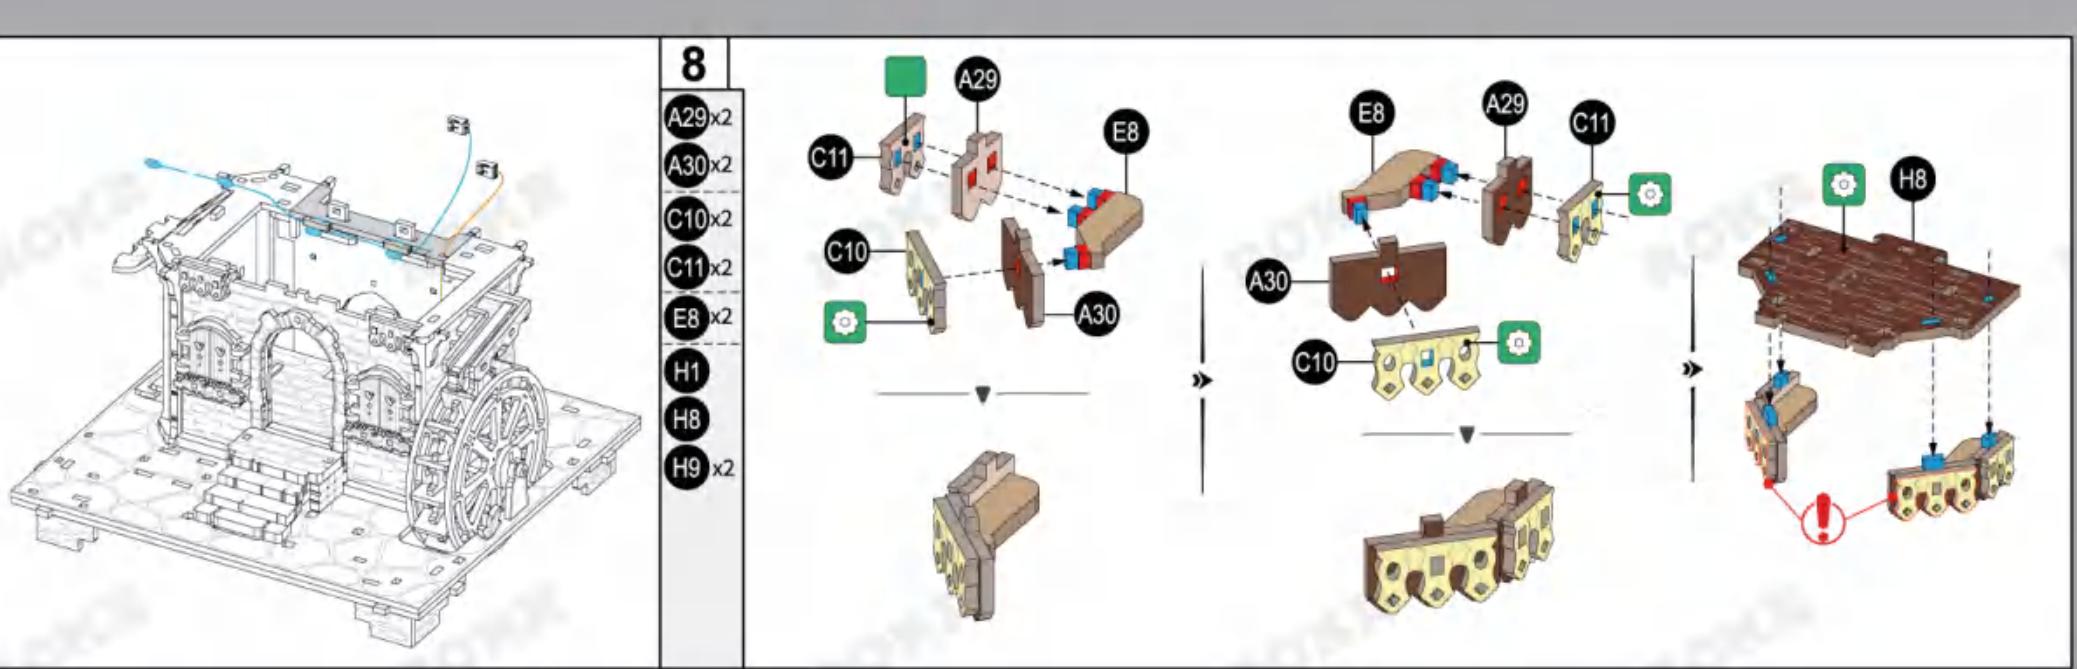


|        |      |
|--------|------|
| A13 x6 | 1 P8 |
| 1 P8   | x2   |
| 12mm   |      |
| M2xL2  |      |

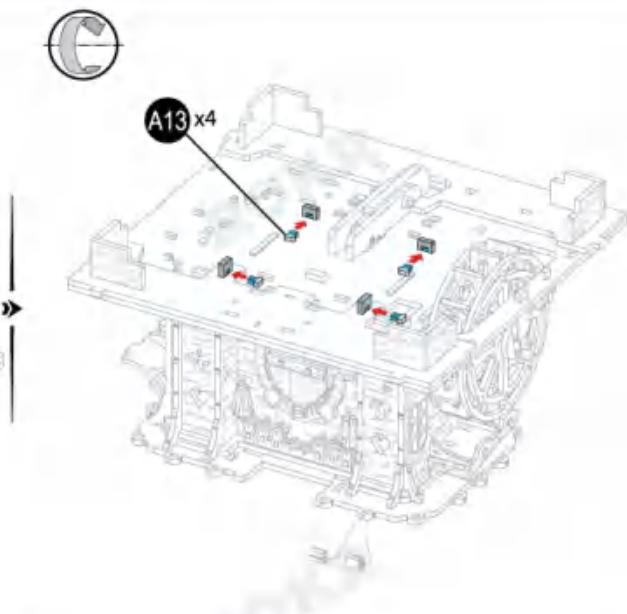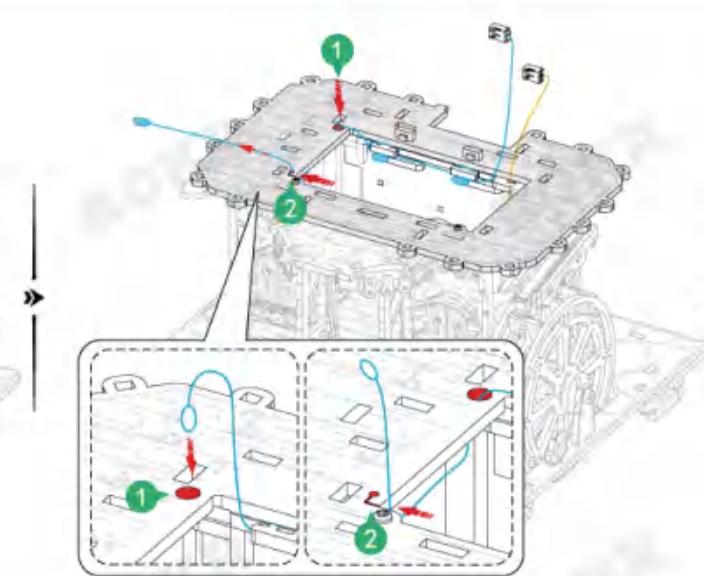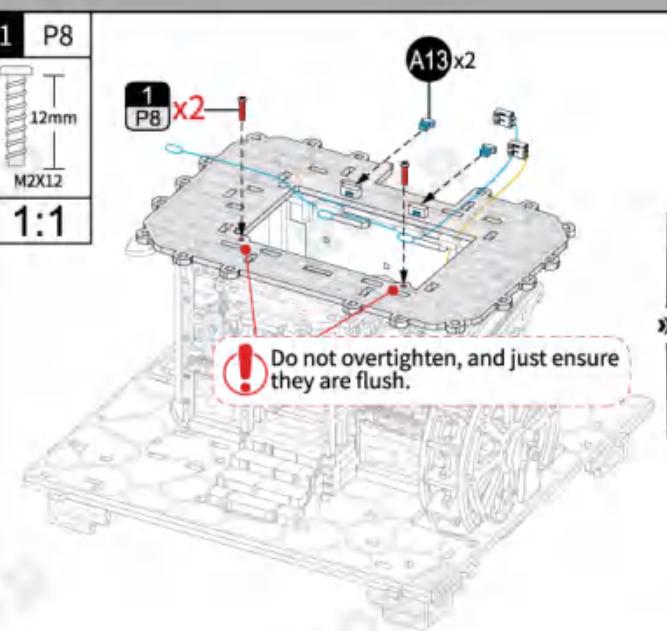



|          |
|----------|
| D10 x2   |
| D11 x2   |
| 1 P10 x2 |
| 2 P14    |

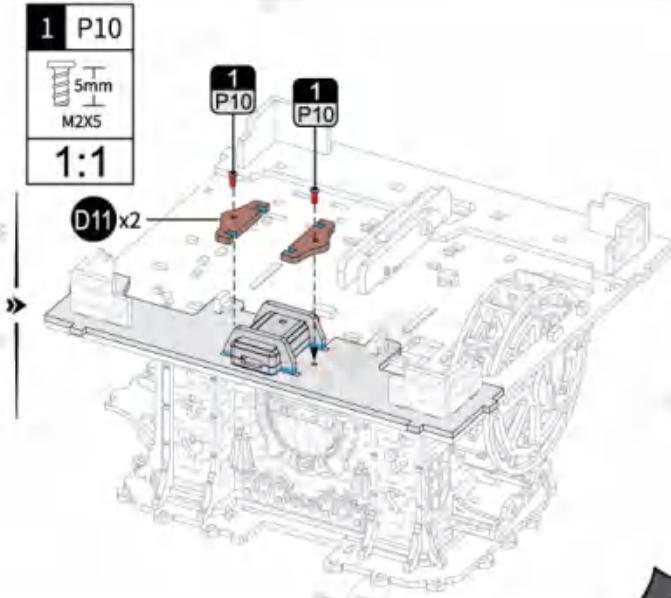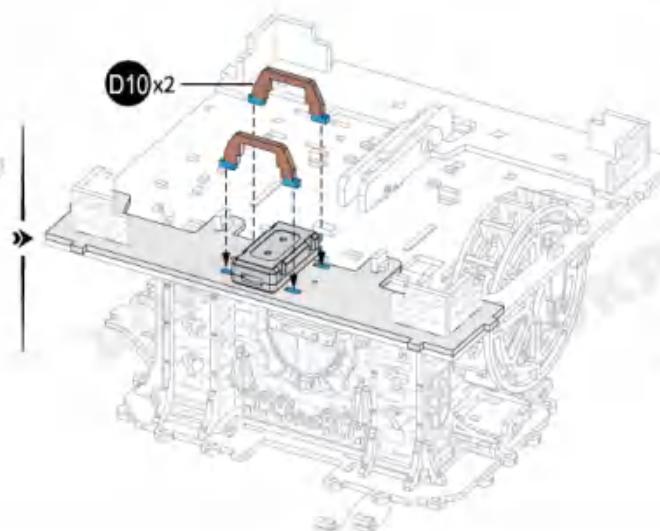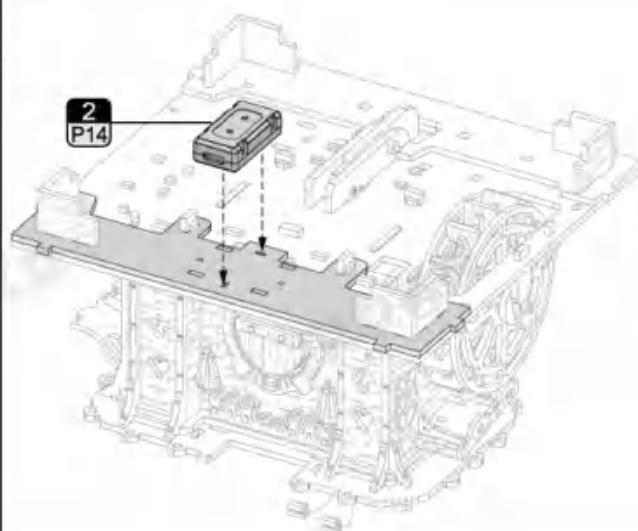




D23  
D24  
D25 x2

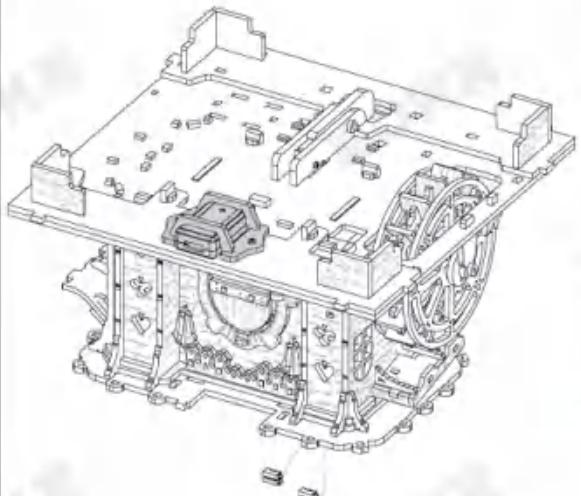

C

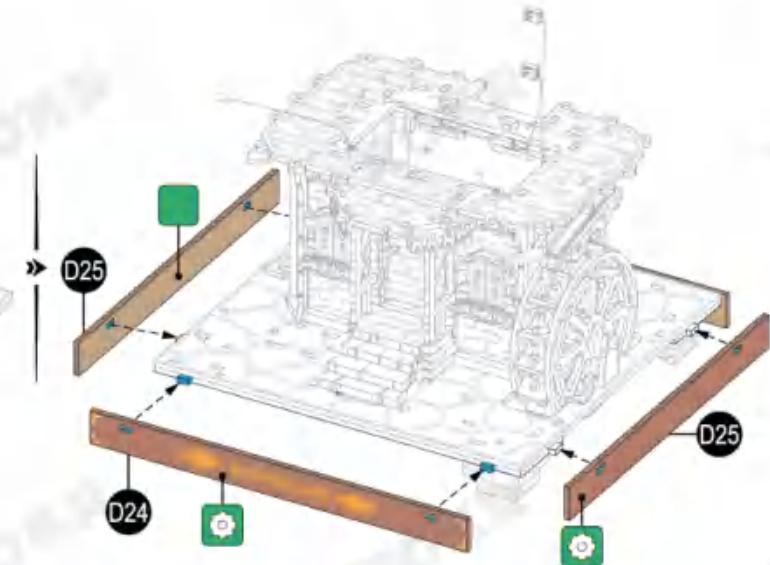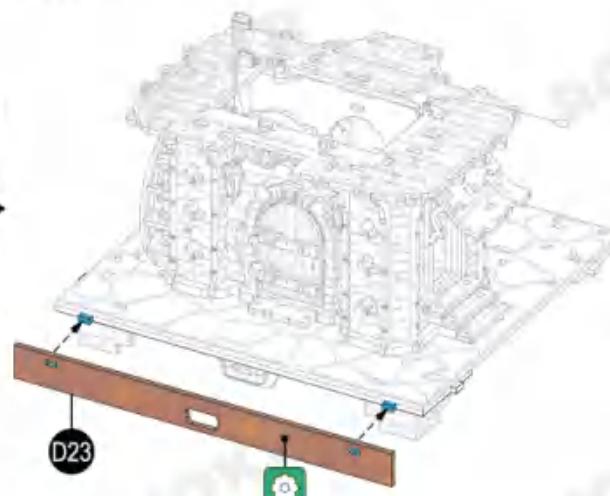

F4  
F5 x2  
F13 x2  
J22  
J23

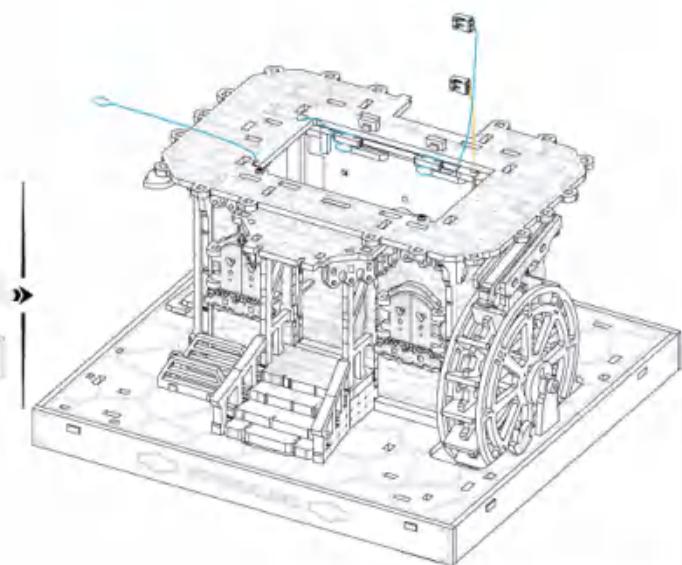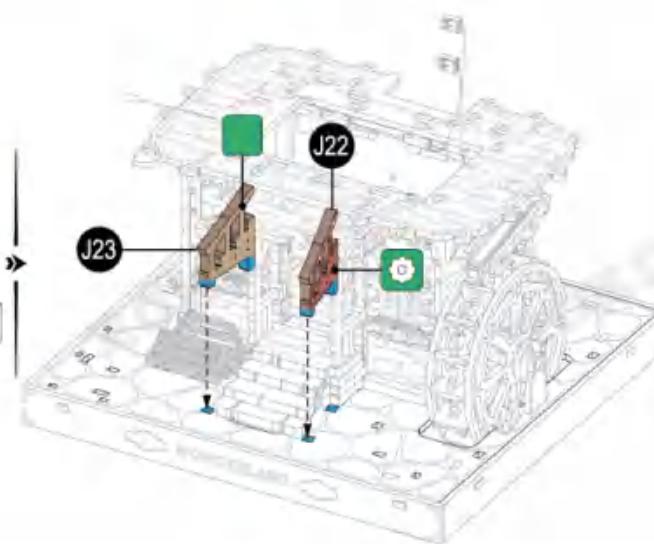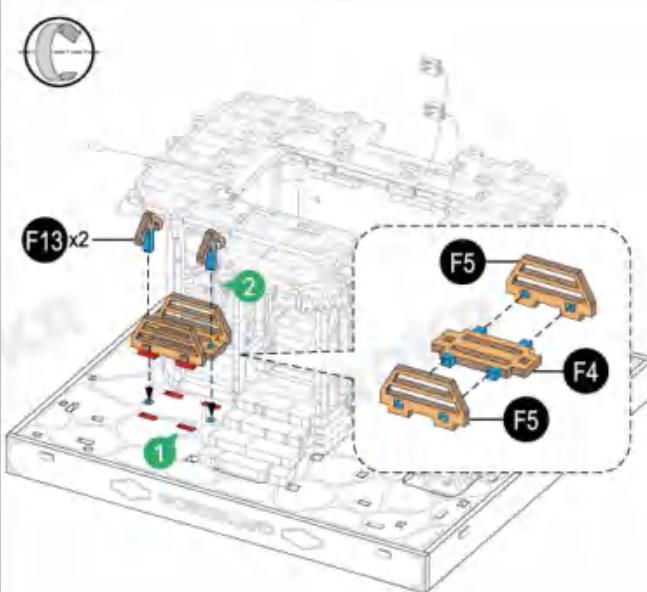

9

C13

F1

F8

F9

F10

F11x4

G6




1 P9 x2

1 P11 x5

1 P9  
8mm  
M2X8  
1:1



1 P11  
6mm  
M1.4X6  
1:1

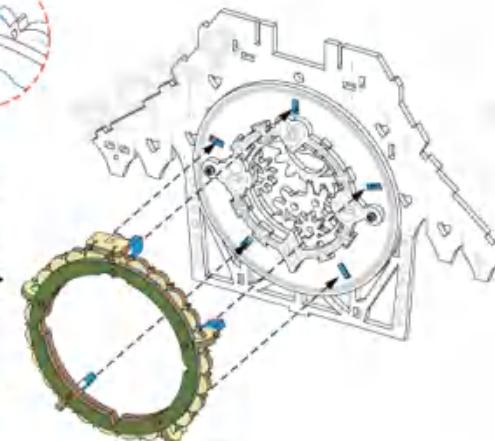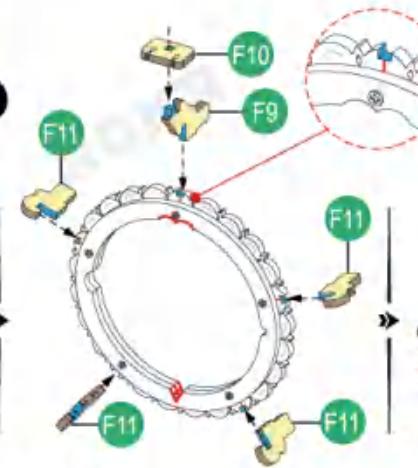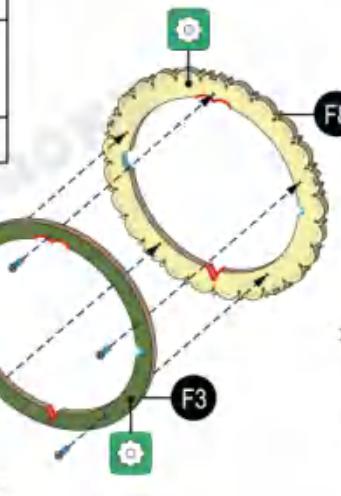

F22

G2



G3

G26


1 P8 x2

1 P10

P26





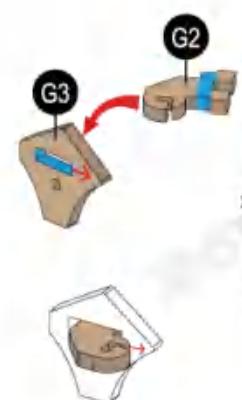
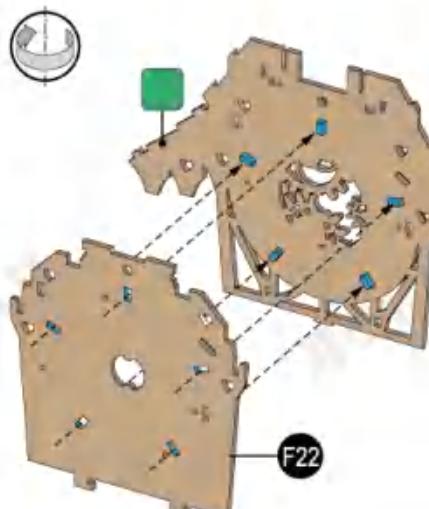


1 P10  
5mm  
M2X5  
1:1

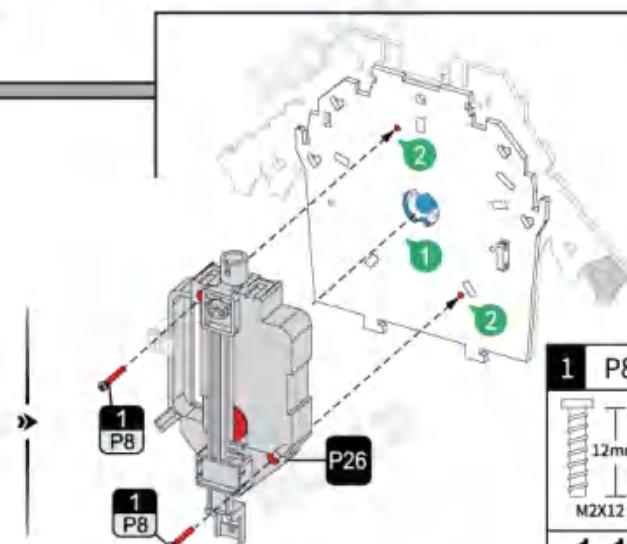


1 P8  
12mm  
M2X12  
1:1

If the dial rotates, readjust it to the hourly position.  
**Slowly** turn the dial counterclockwise until a faint "click" is heard, indicating the hour.  
(After the "click" is about to trigger, adjust gently for clearer hourly chimes.)

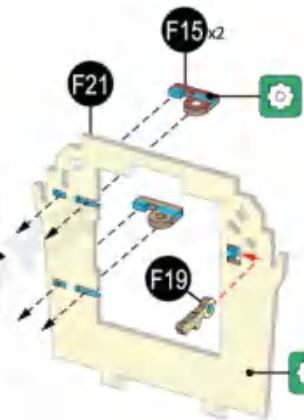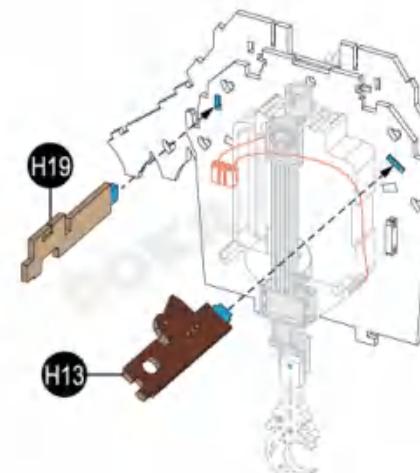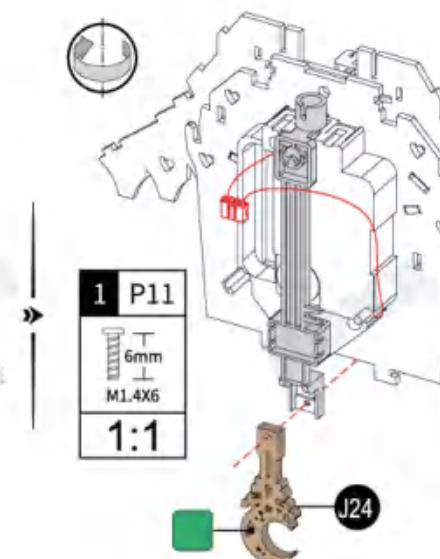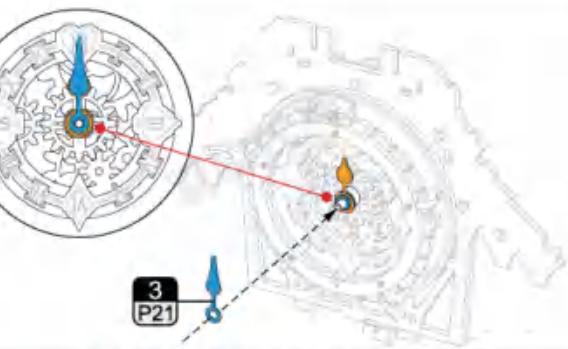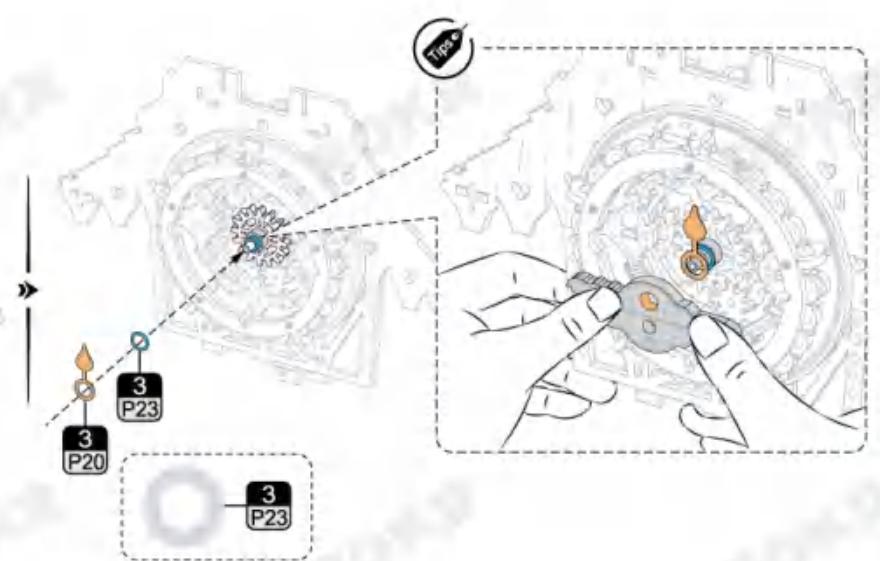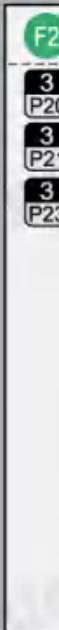


G19




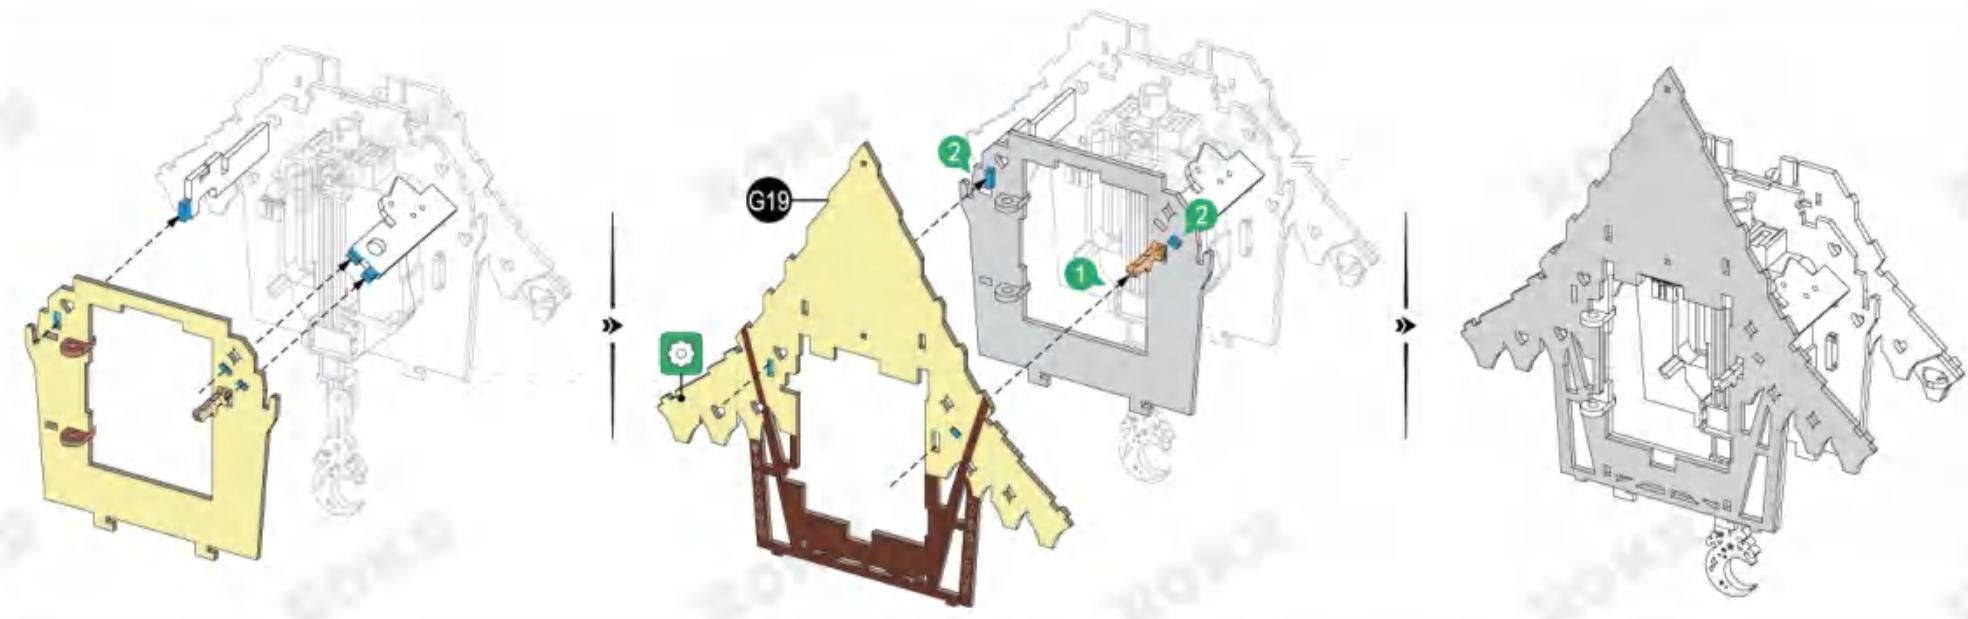


10


H21x4

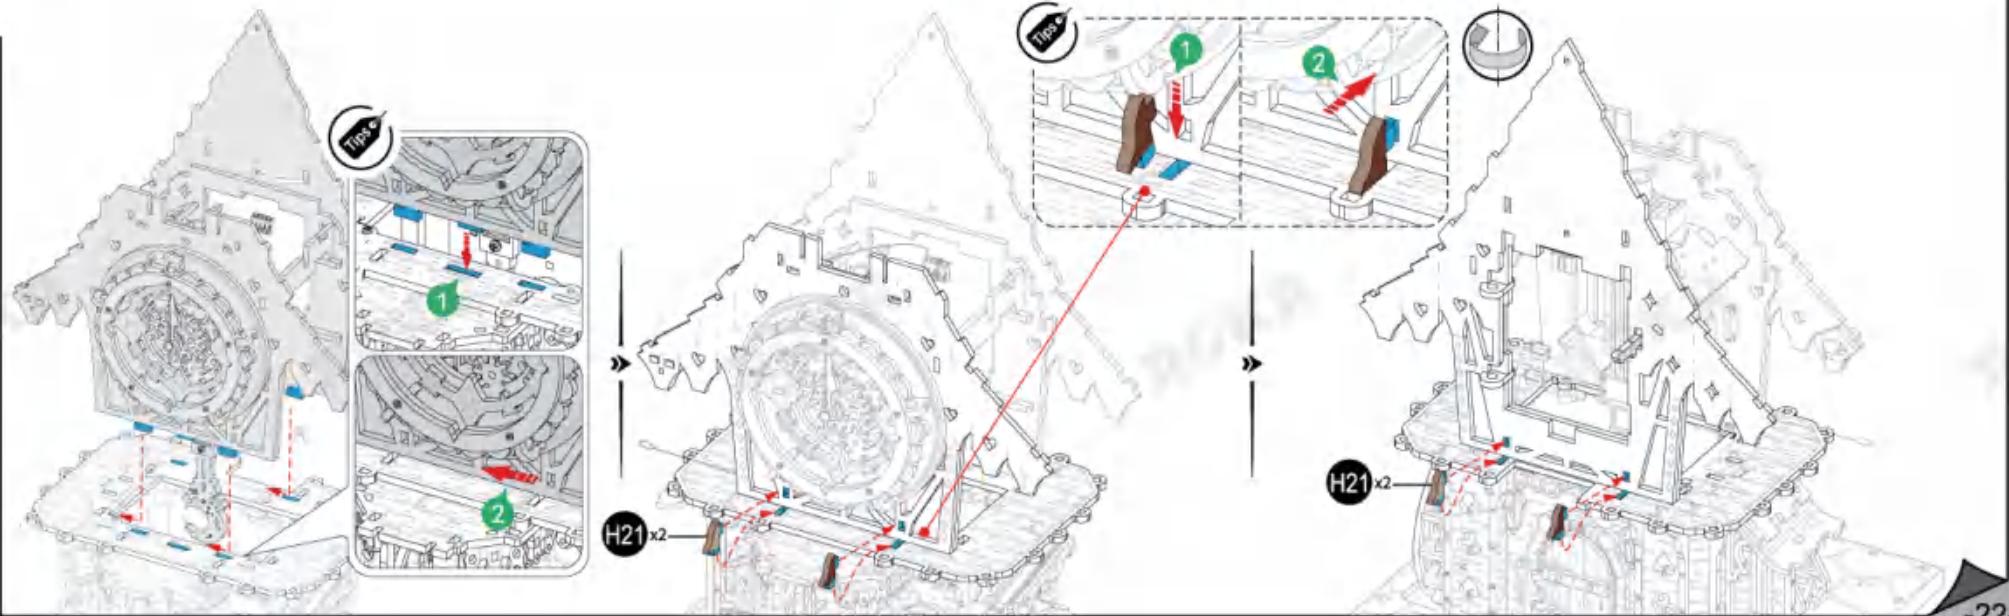

C21  
C22x2  
G18x2  
J16

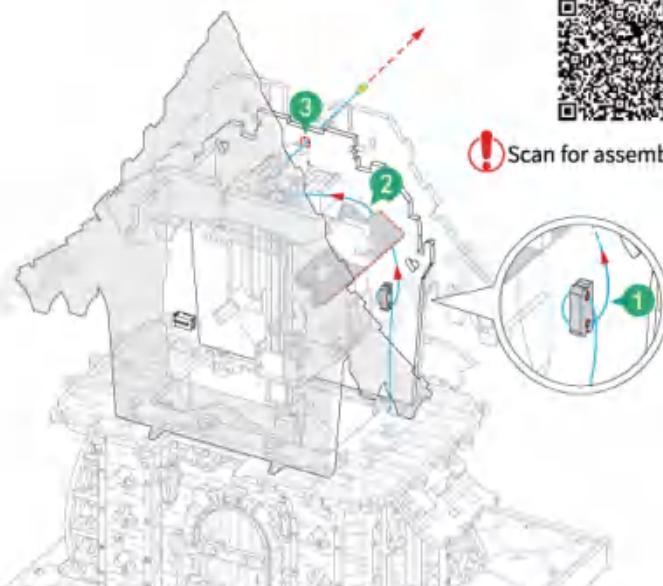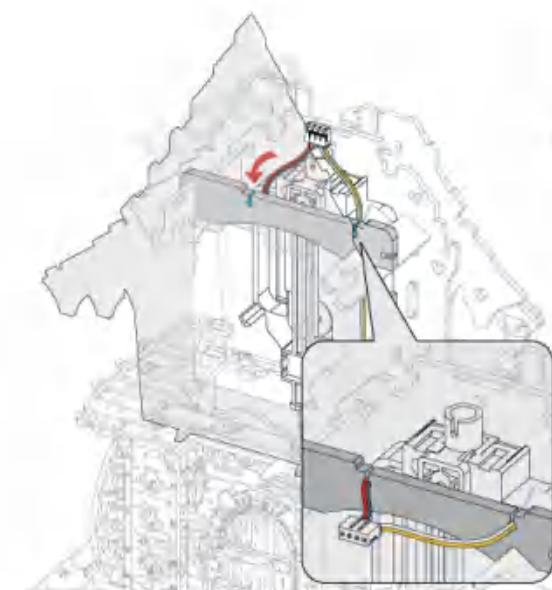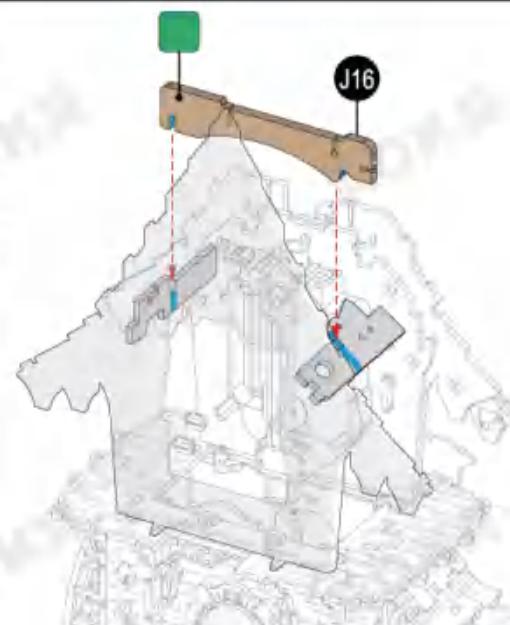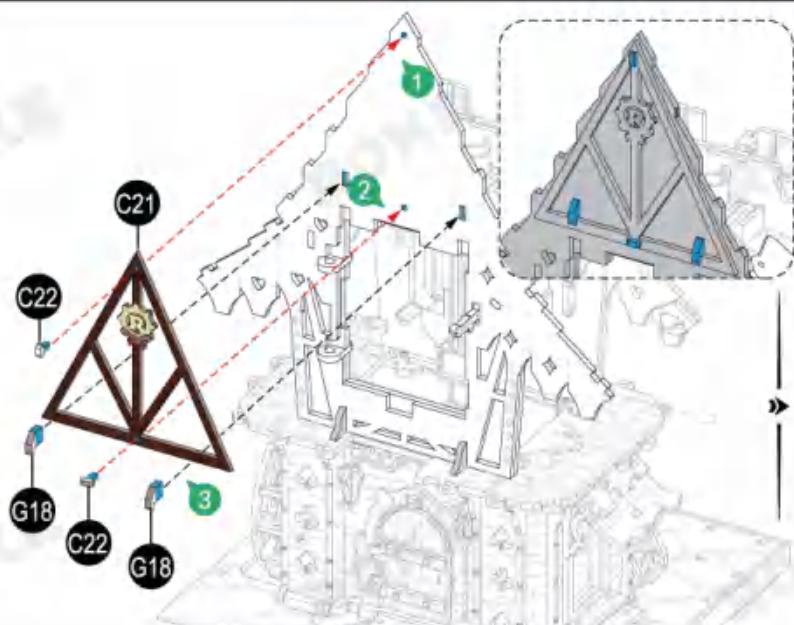


Scan for assembling  
videos


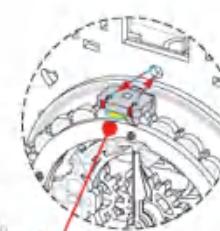




Scan for  
assembling  
videos



The light bead is deflected to the left, avoiding the pendulum.

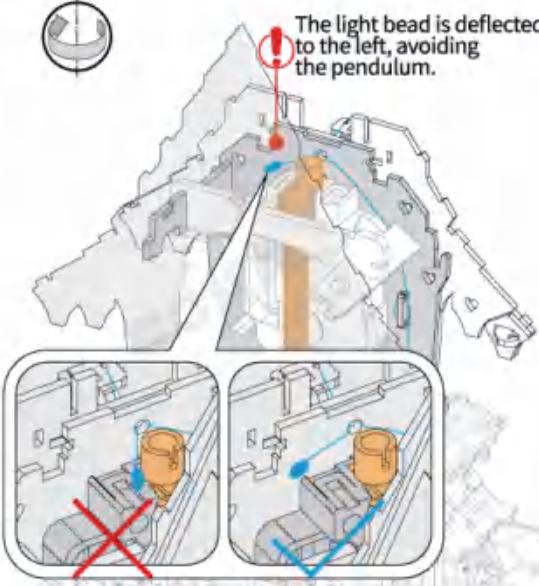


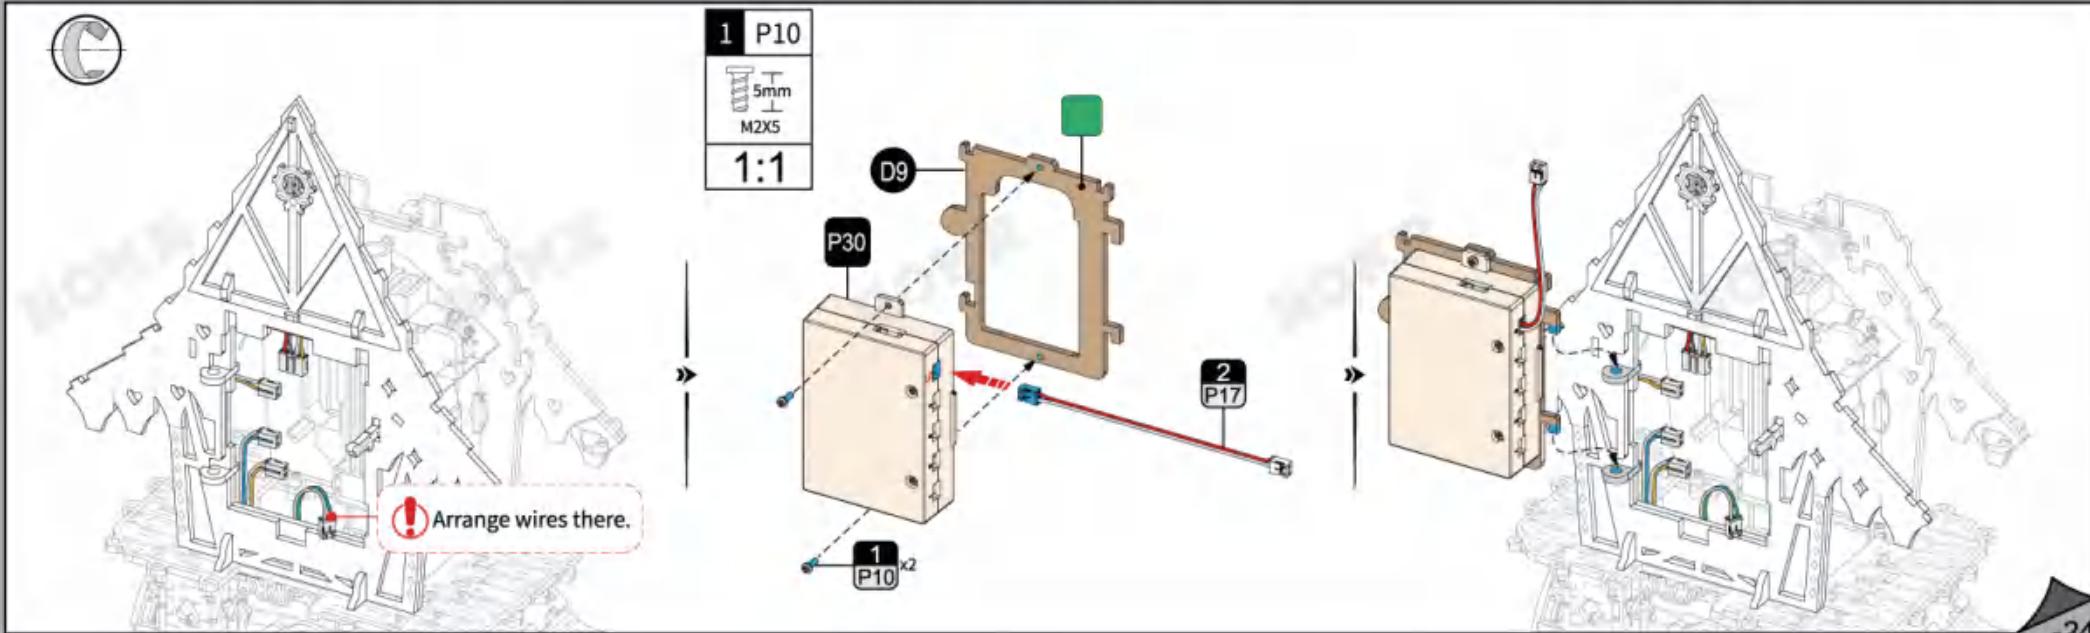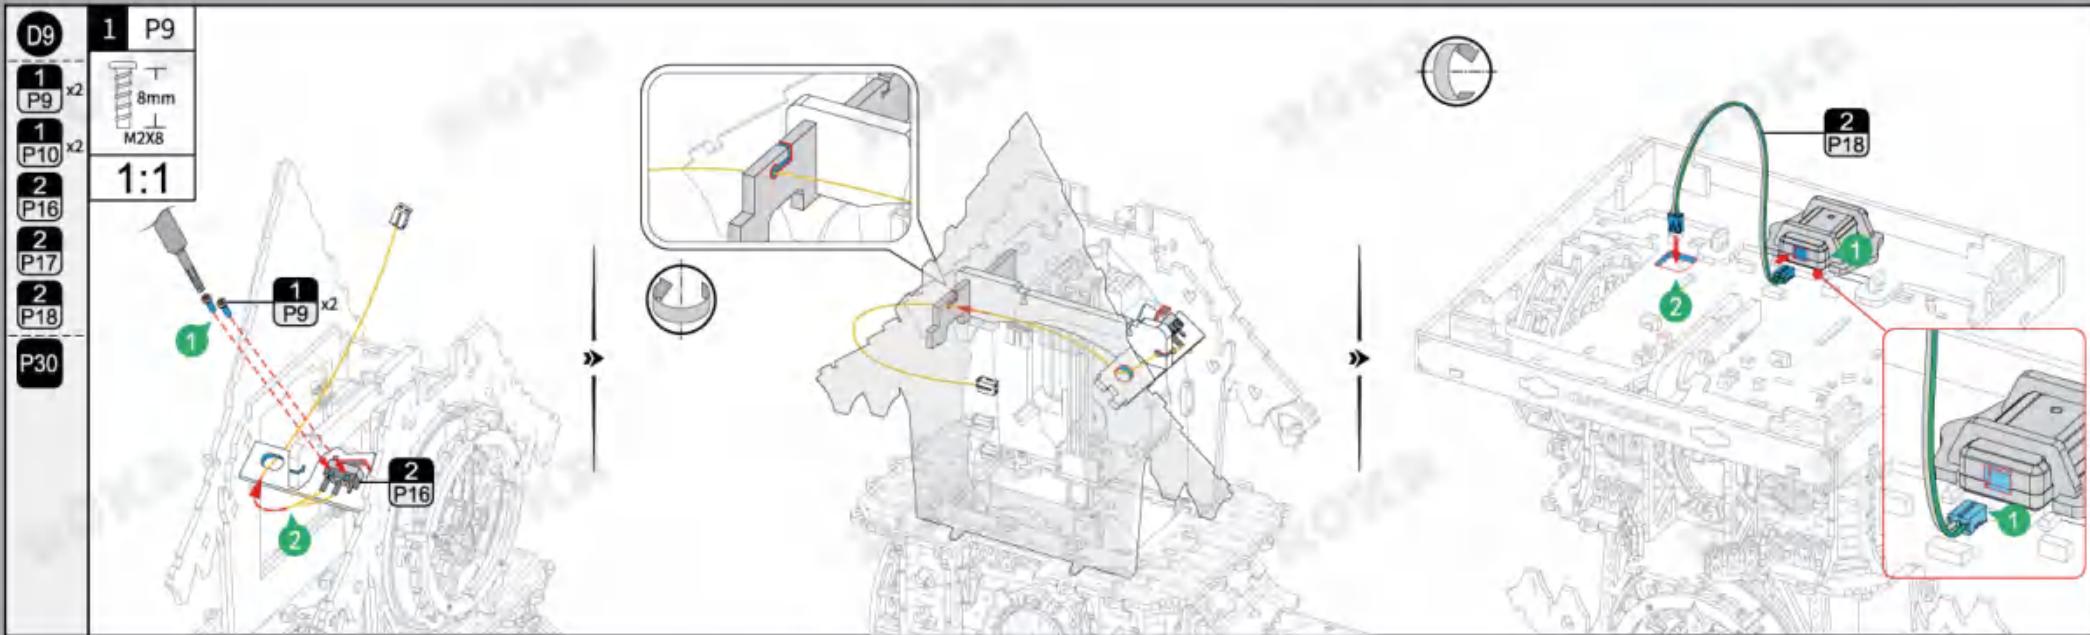

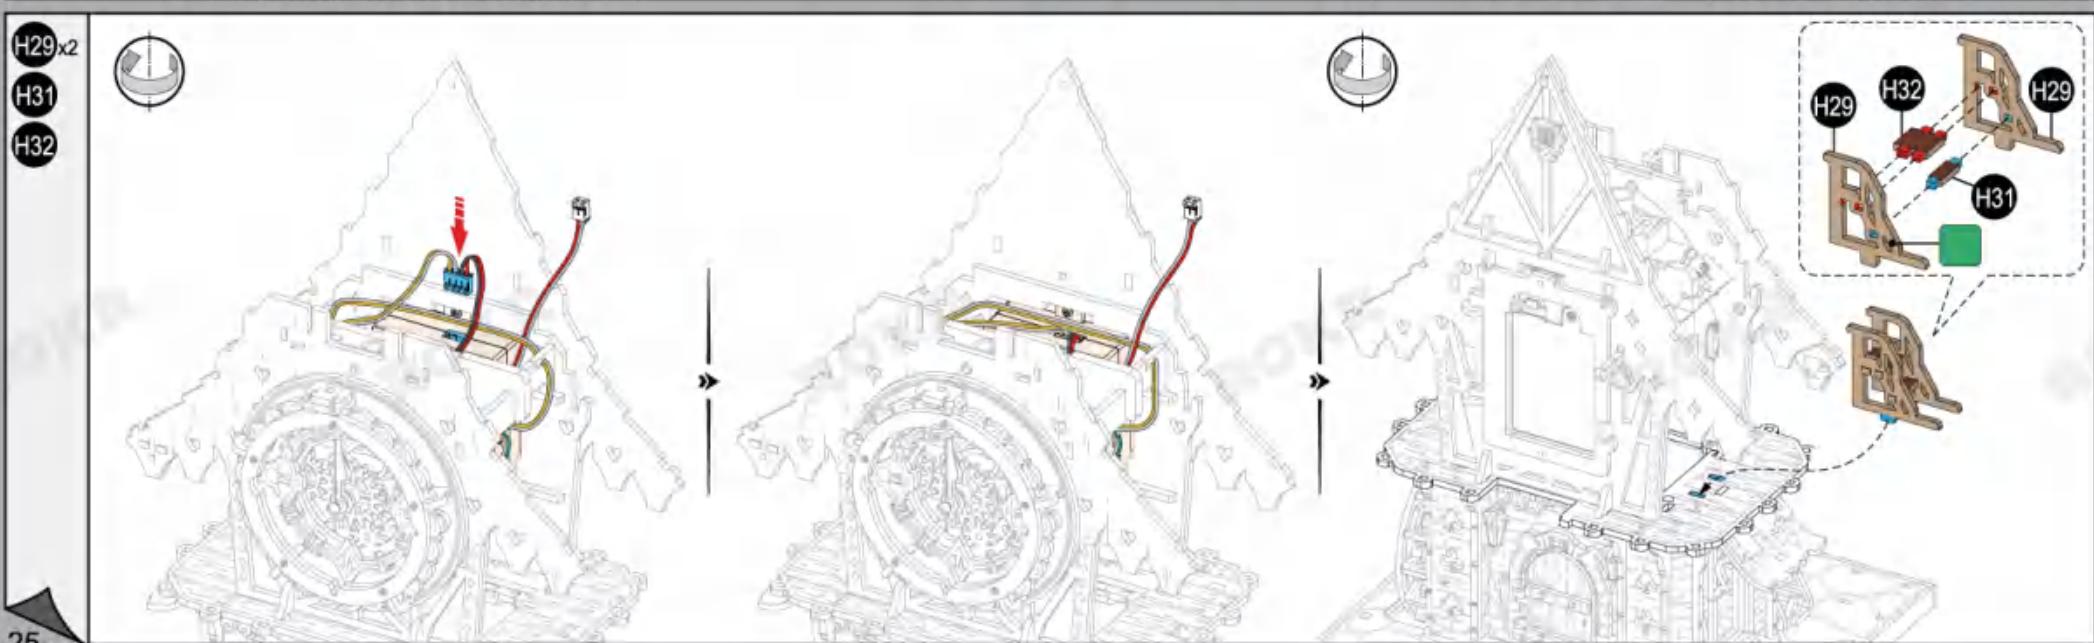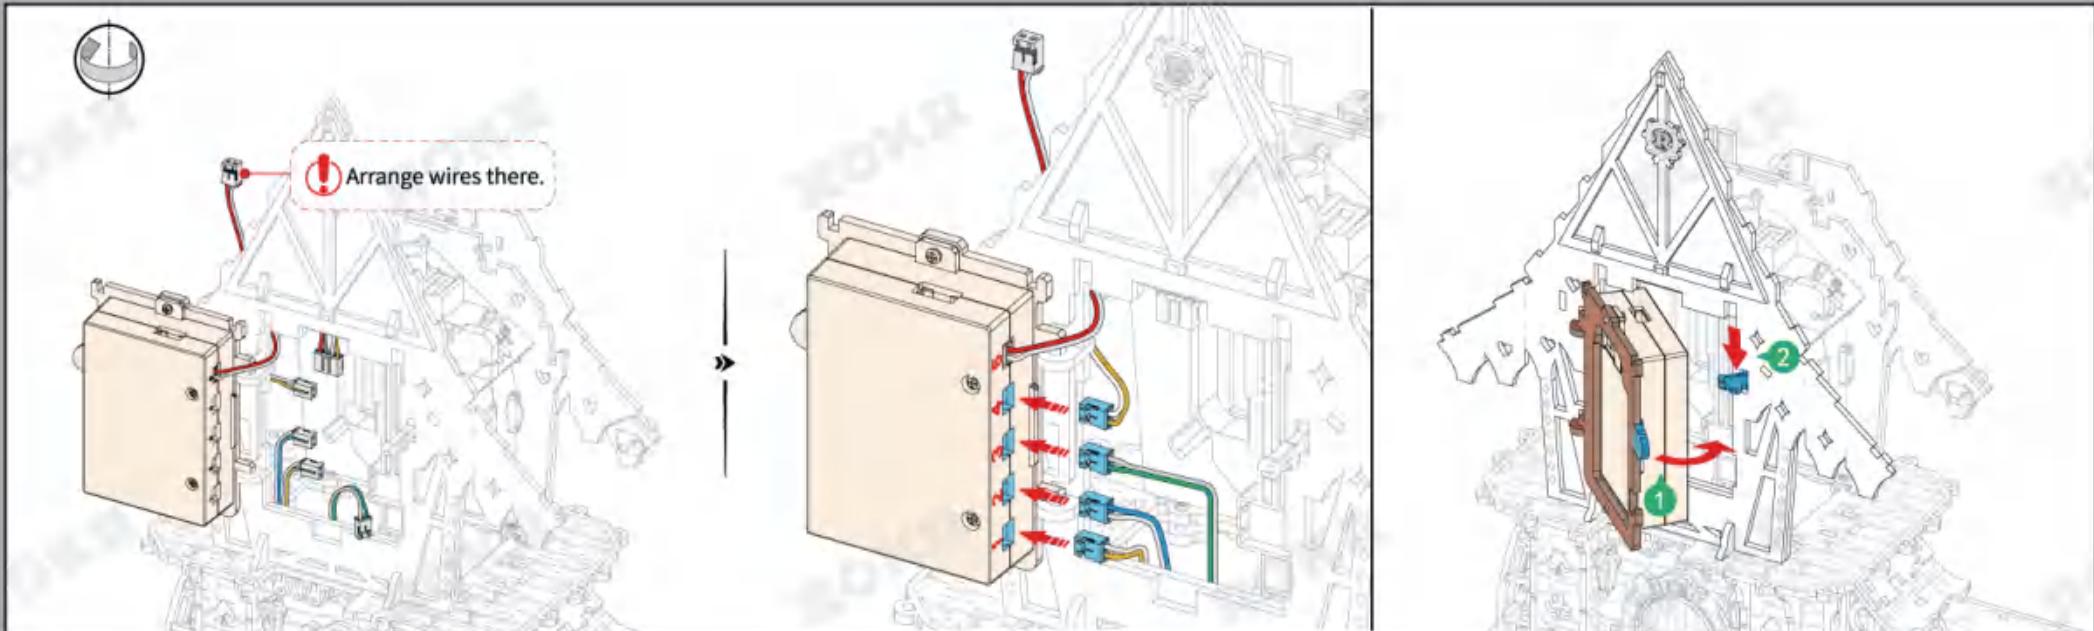


11

A14  
A15x3  
A17x2  
F18  
G12  
J19  
1 P9  
1 P10  
1 P13

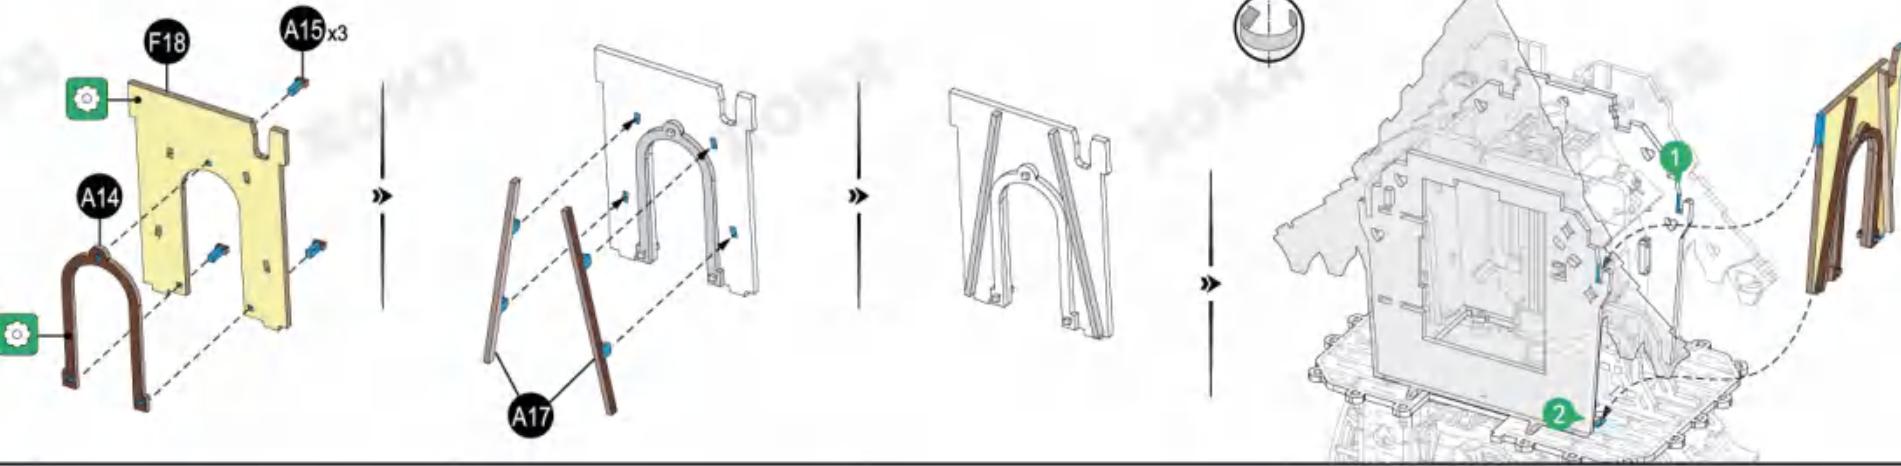



Cut a piece of rope about 18 cm long.

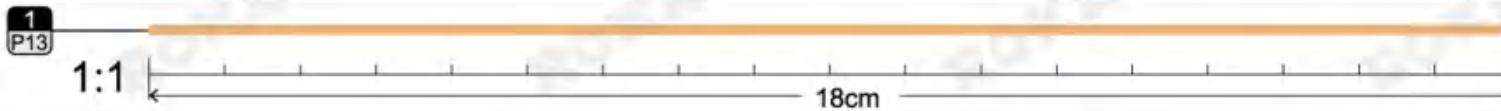


1 P10

5mm  
M2x5


1:1

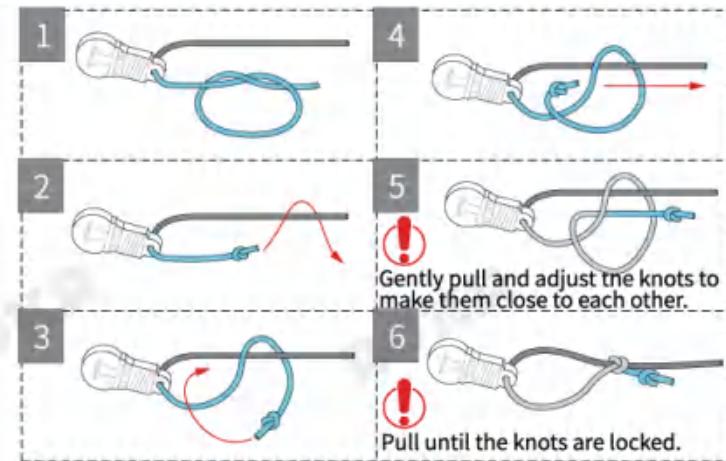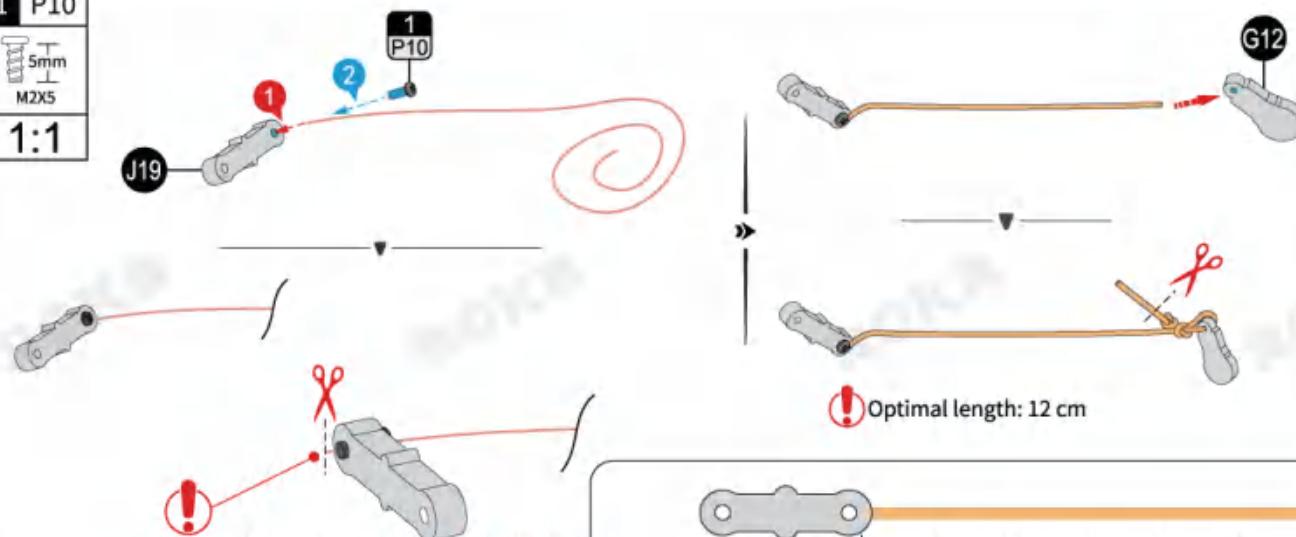

1. The wire must **pass through the hole**.  
2. Excess wire can be cut off.






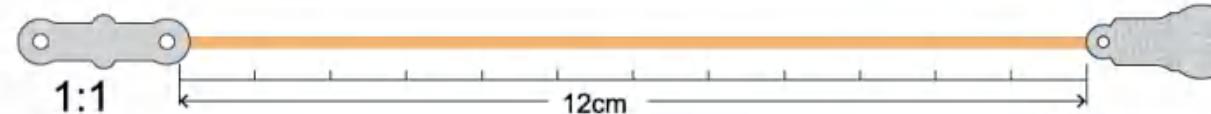


1 P9  
8mm  
M2x8  
1:1




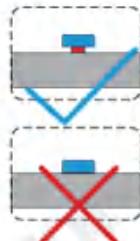


! Do not overtighten!


A14  
A15x3  
A17x2  
F17  
H3 x8

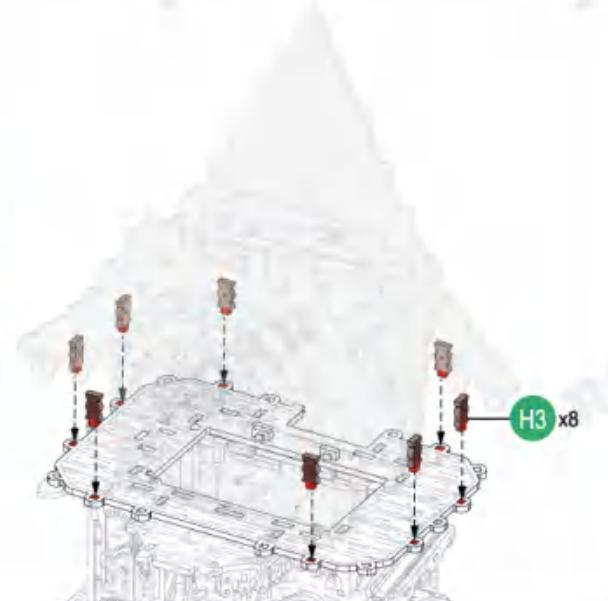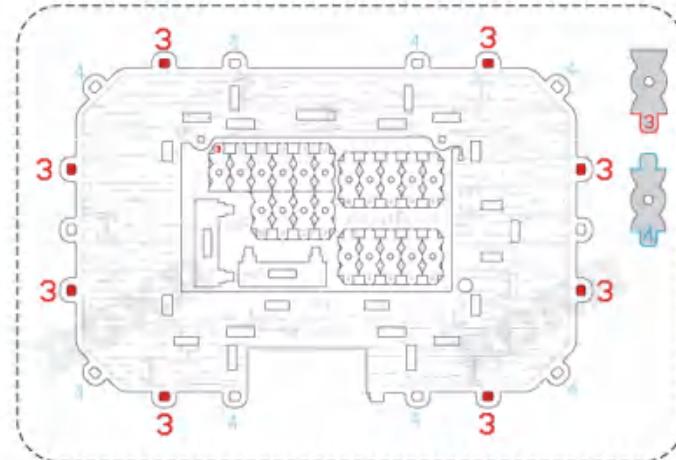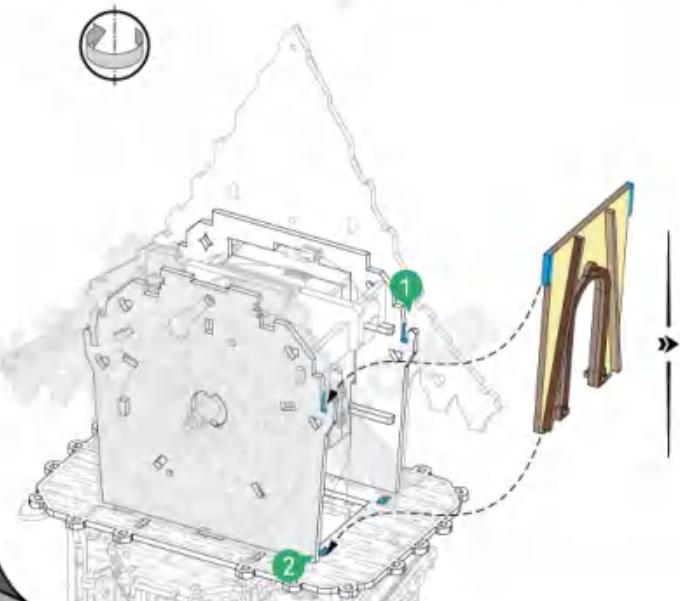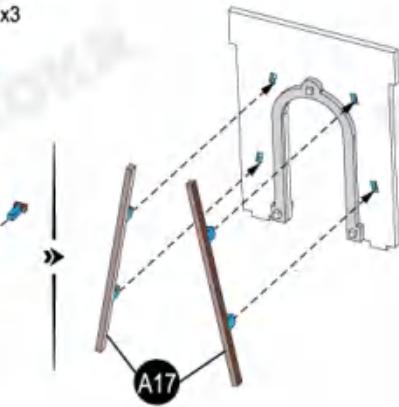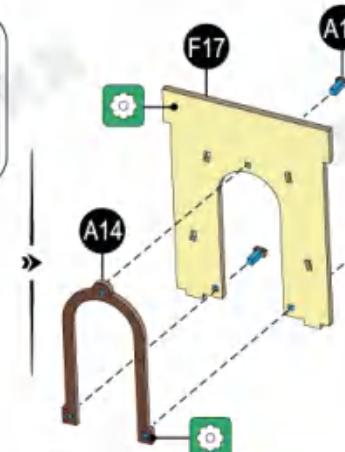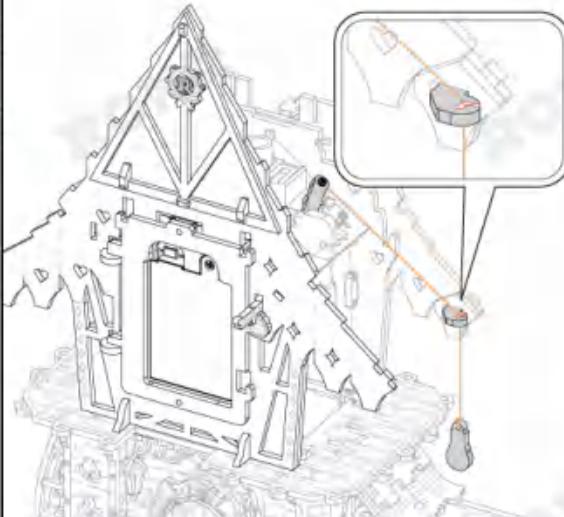


A8 x2  
B16 x2  
H2 x2  
H4 x8  
H12 x2

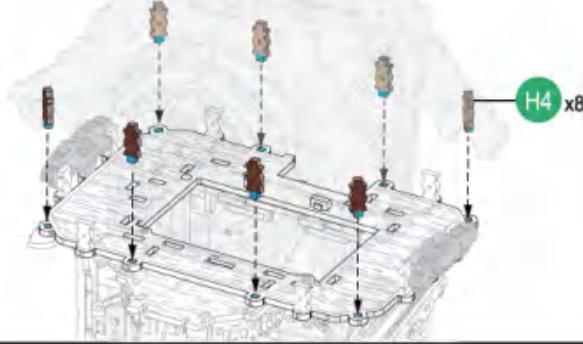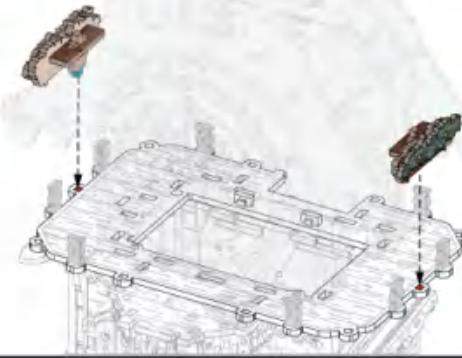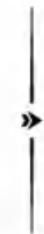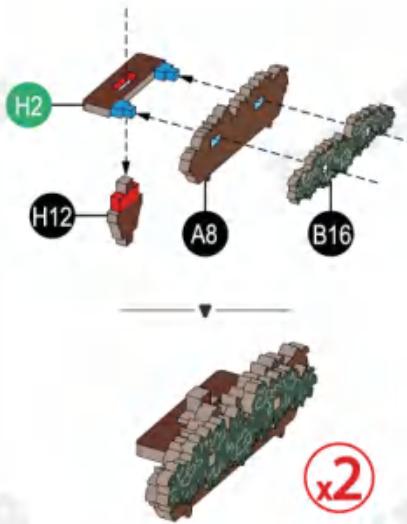


H7 x2  
H10 x4  
H11 x2

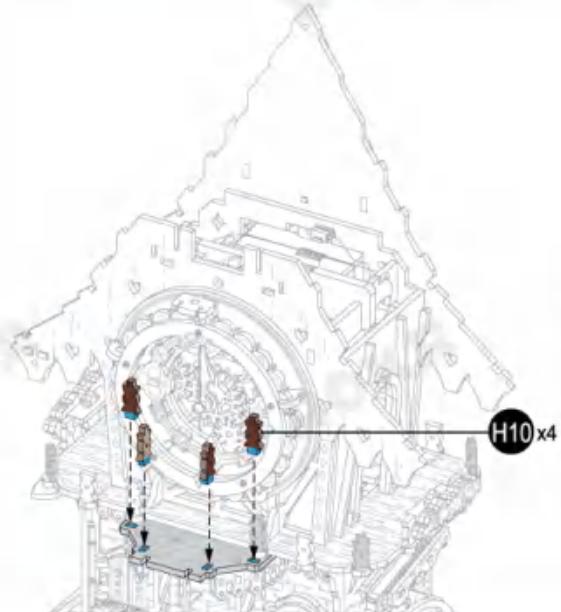




B8  
B10  
B11  
B19  
B20

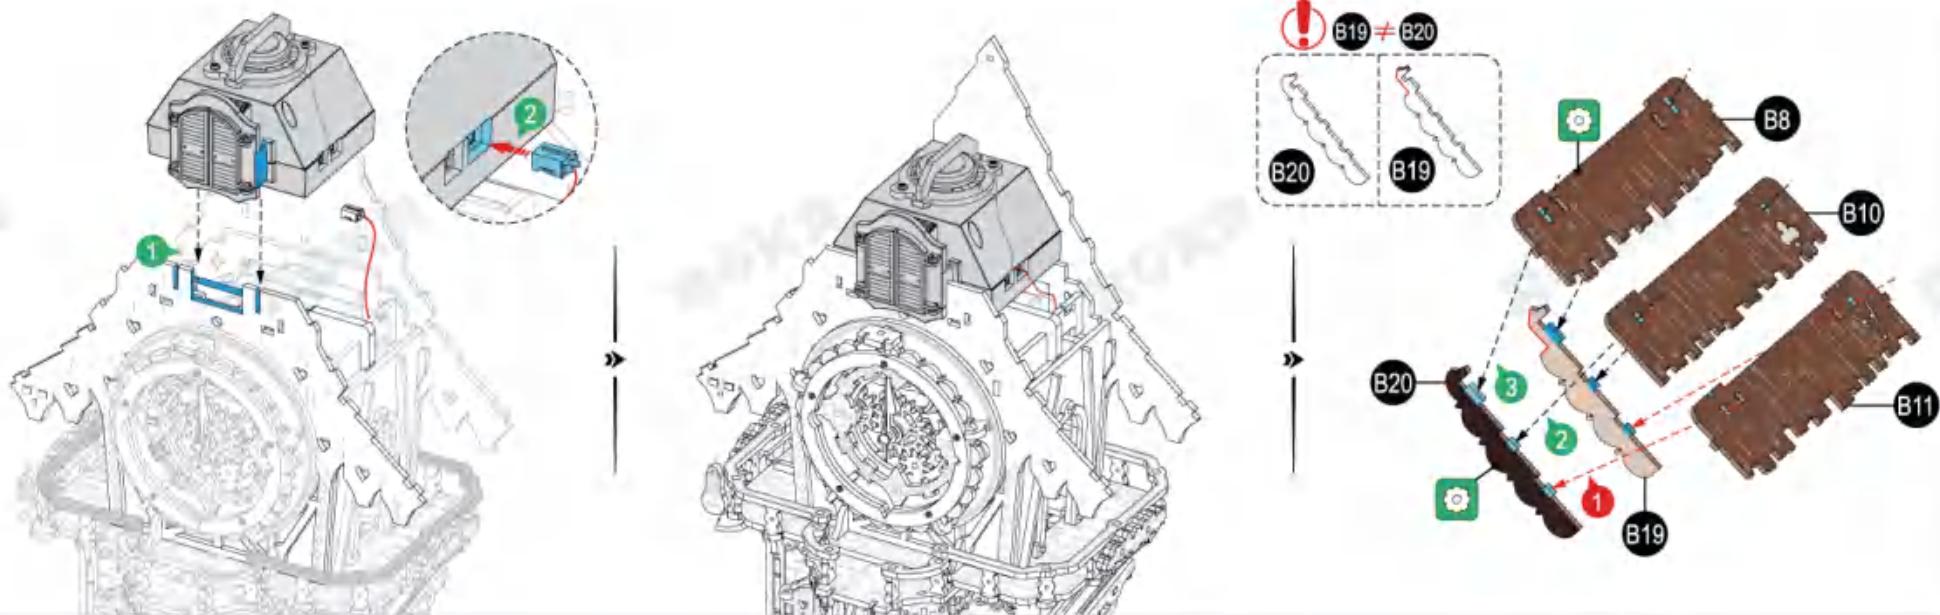

A12  
B30



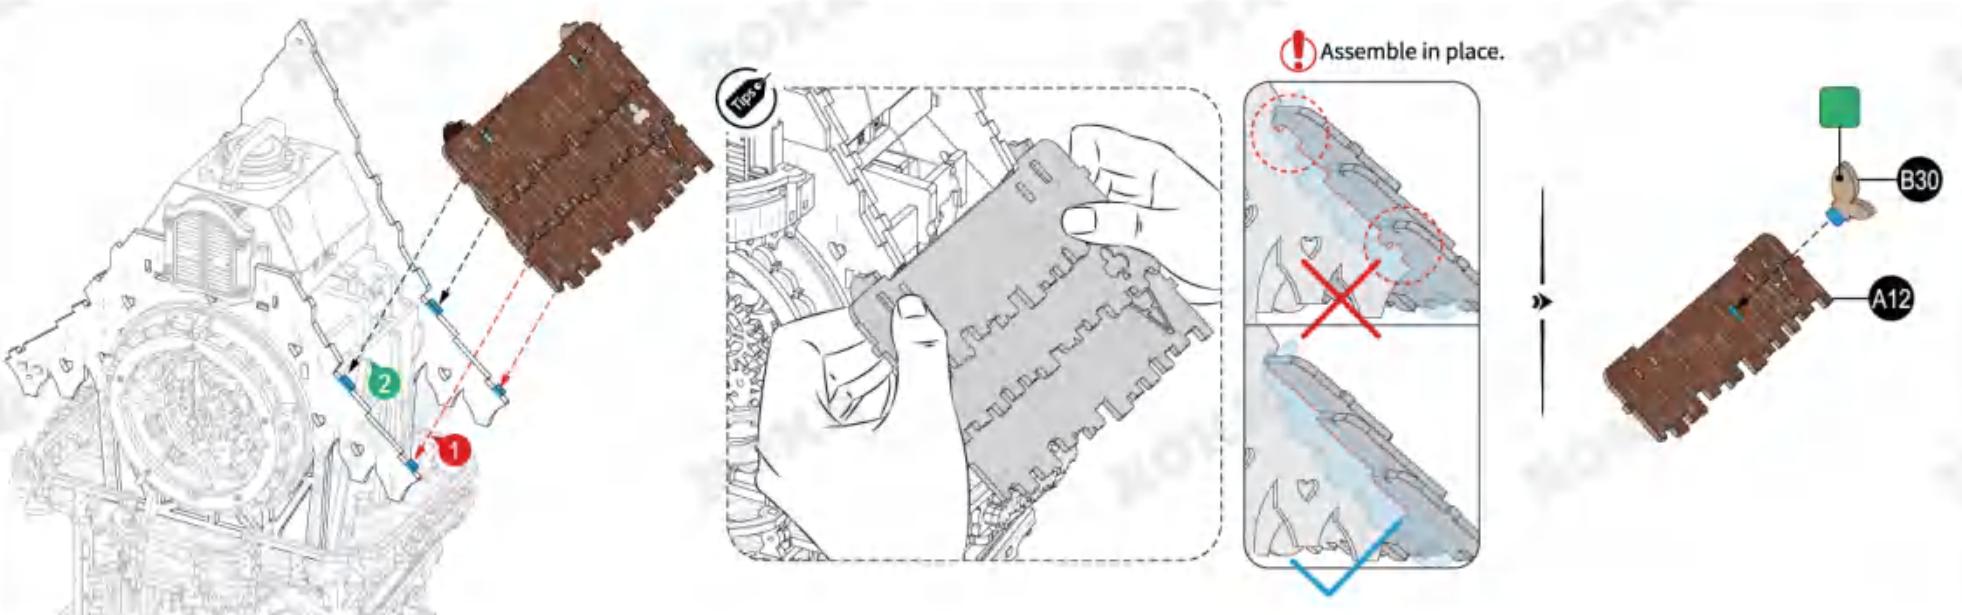


A10  
A11  
B18  
B20

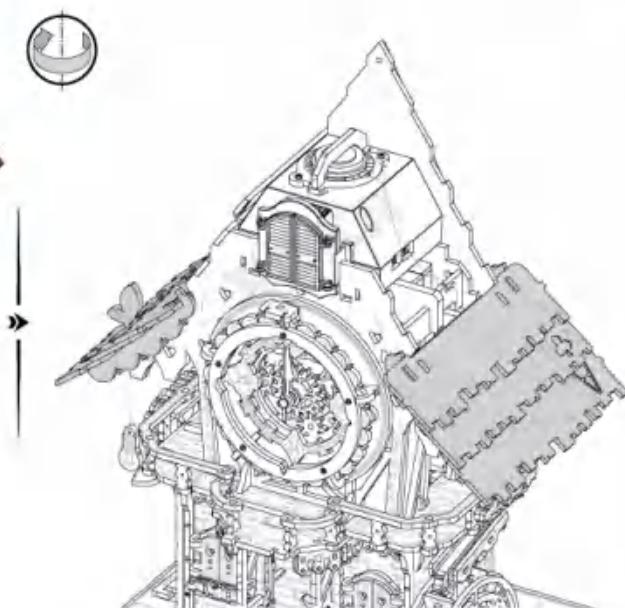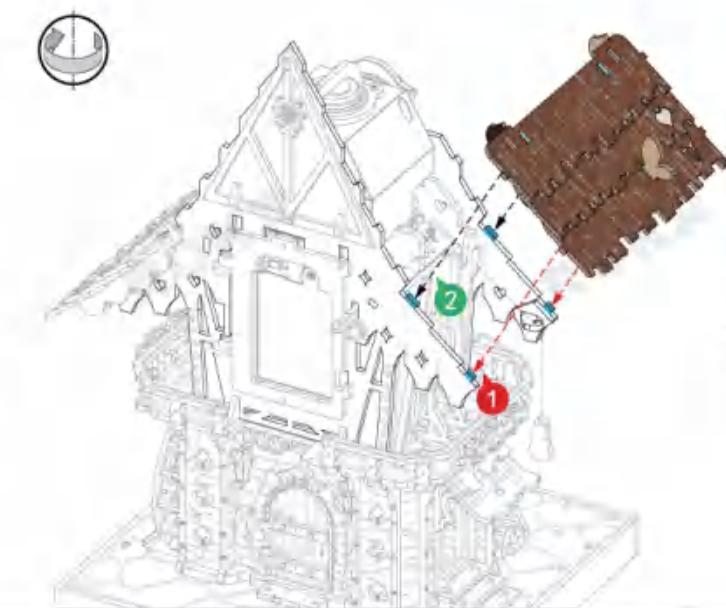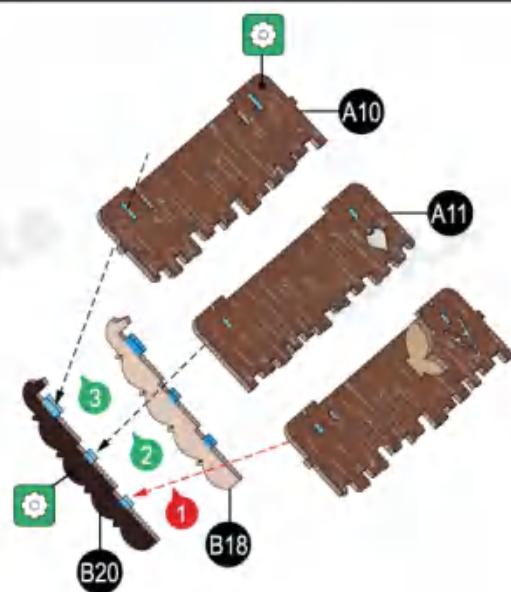


12


A5  
A6  
A9  
B21  
B22  
C1  
C2  
C3  
F7  
G1  
G13  
G17<sup>x2</sup>

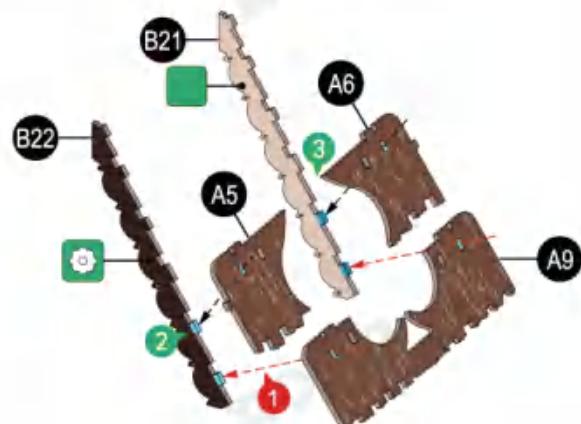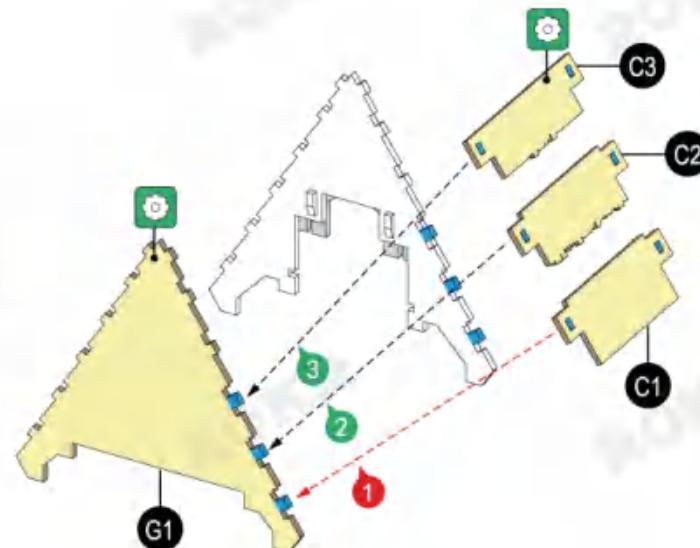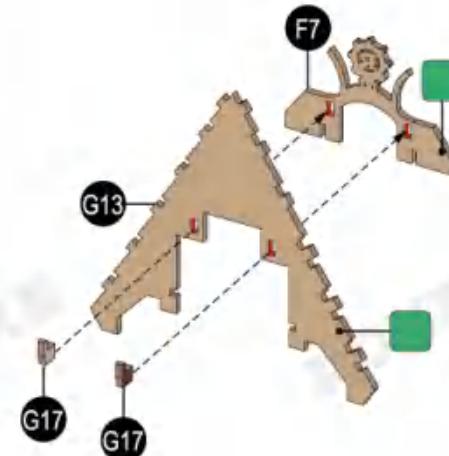


A1  
A2  
A3  
A4  
B5  
B6  
B7  
B21  
B22

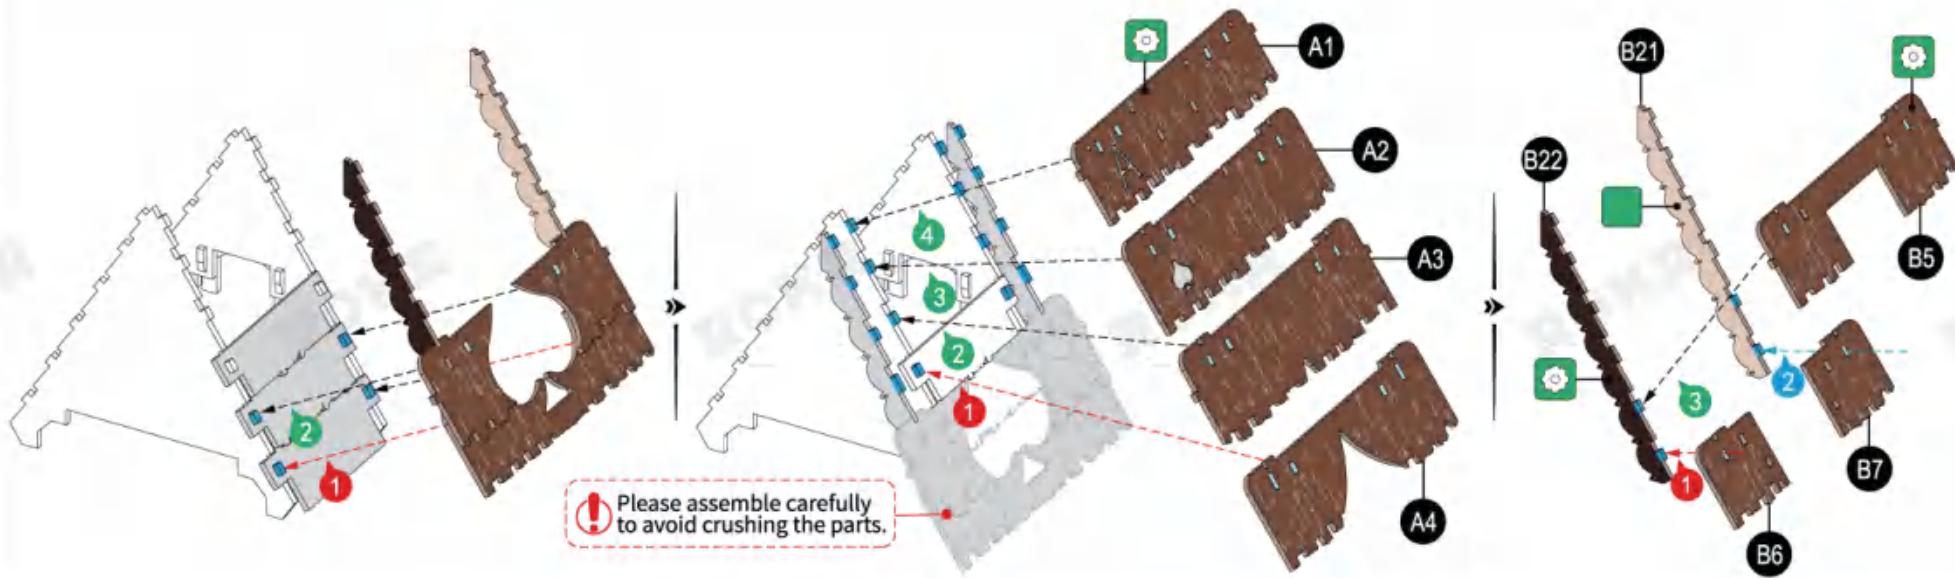


B1  
B2  
B3  
B4

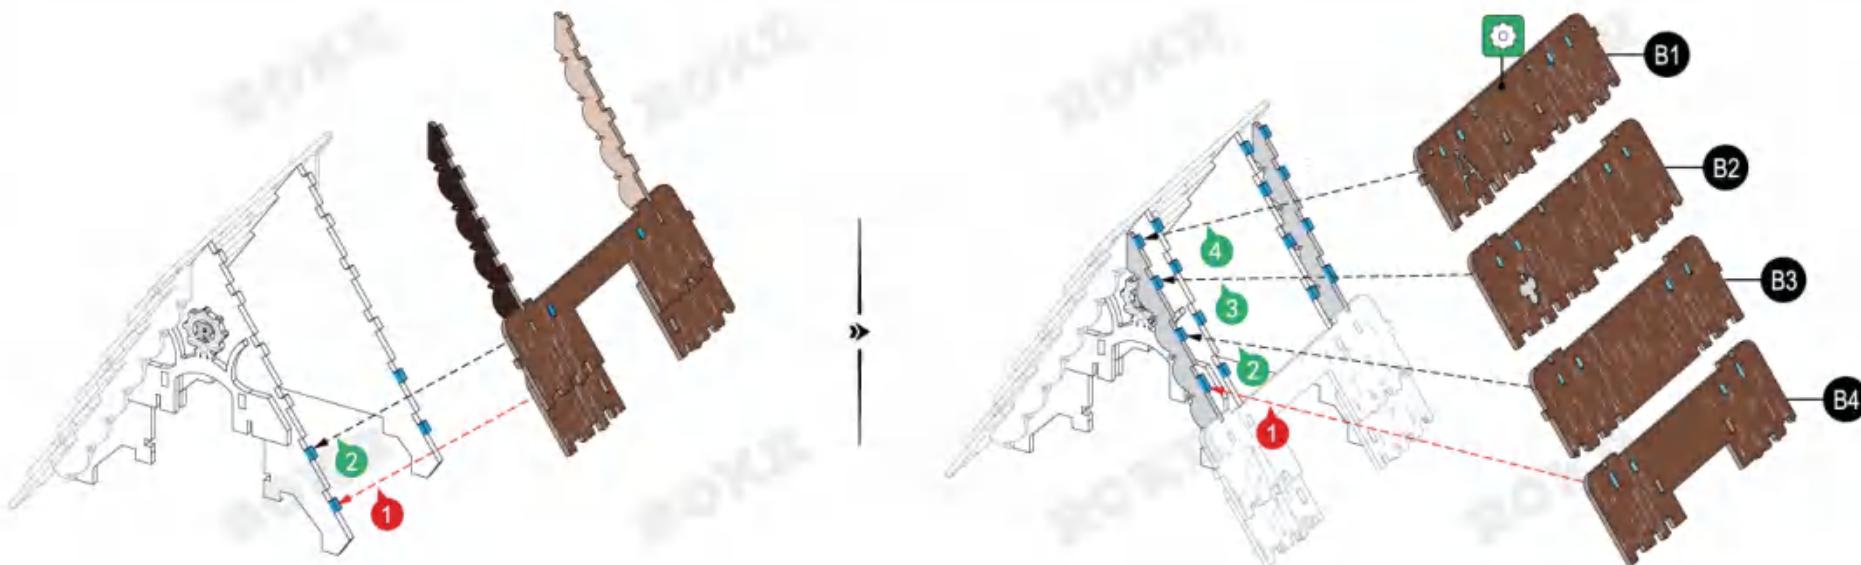

A15x7  
B9x2  
C34

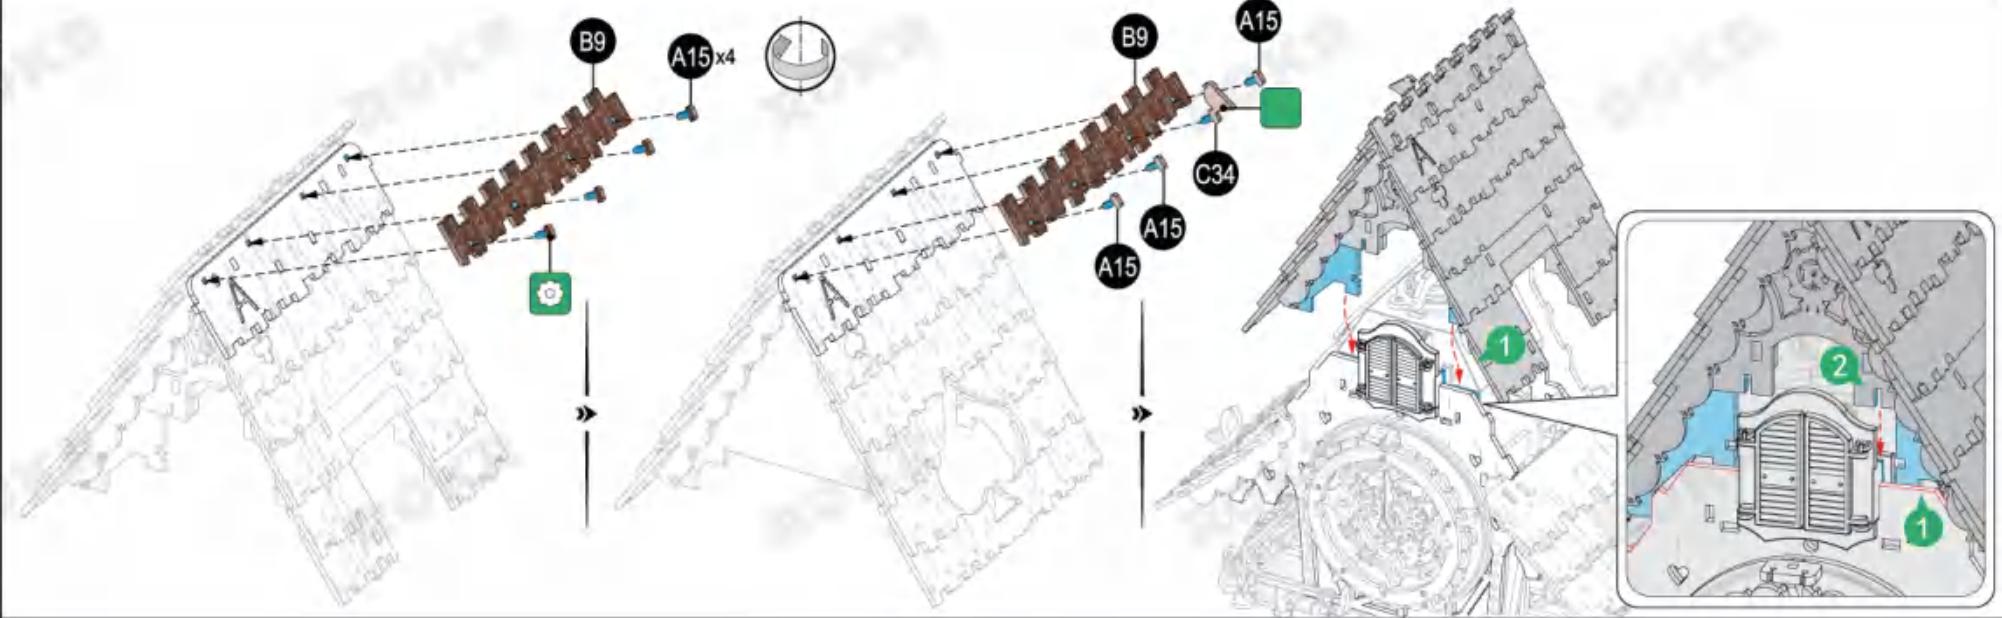


B17x11  
B25  
B26  
C36  
H30

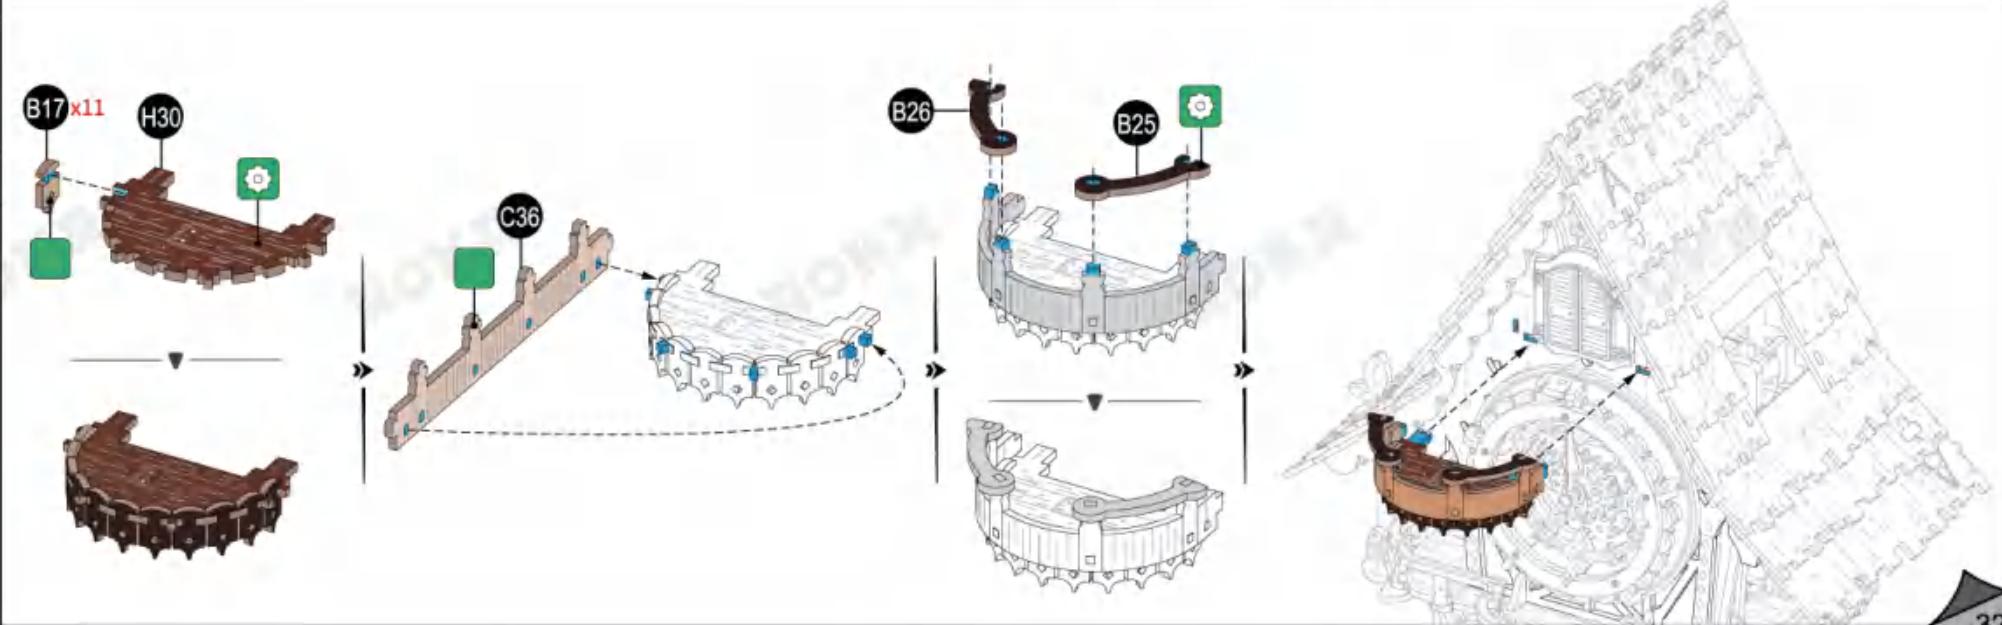


13

A34  
 B14  
 B15  
 F16  
 F20  
 G4 x2  
 G5  
 G7  
 G8 x2  
 G20

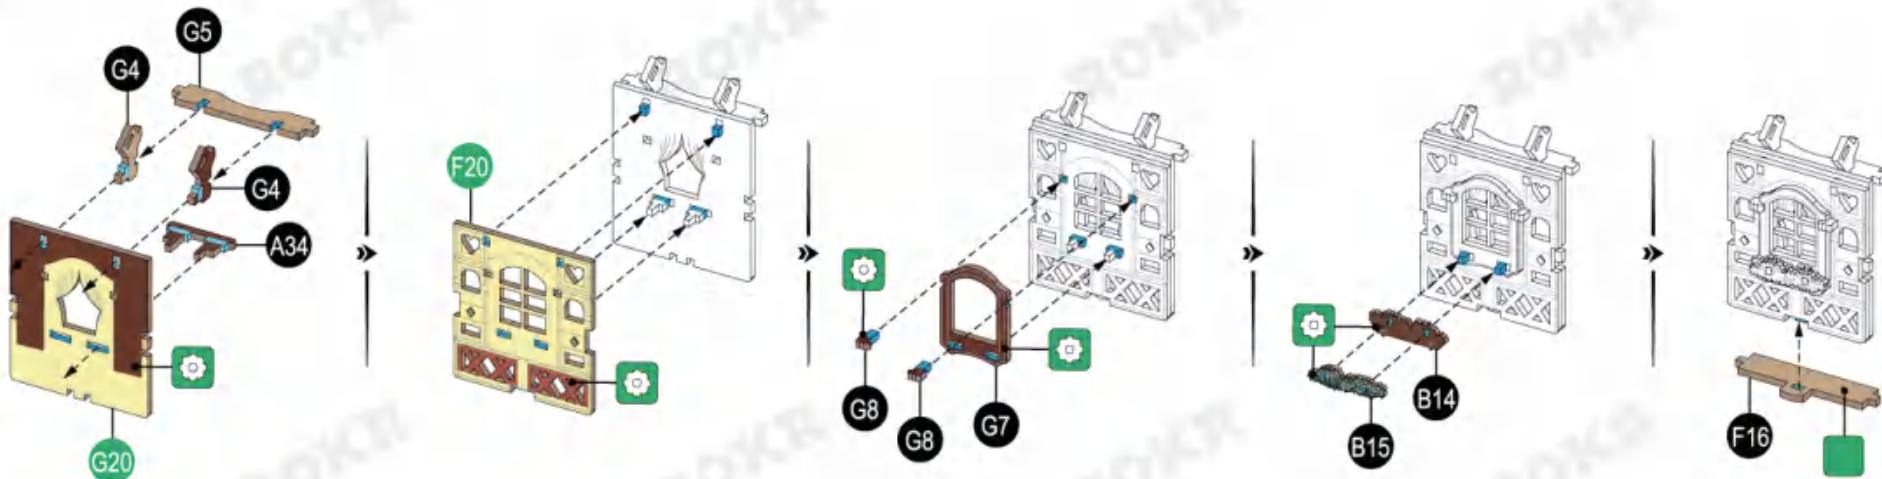


A36



C29  
 G24  
 G25

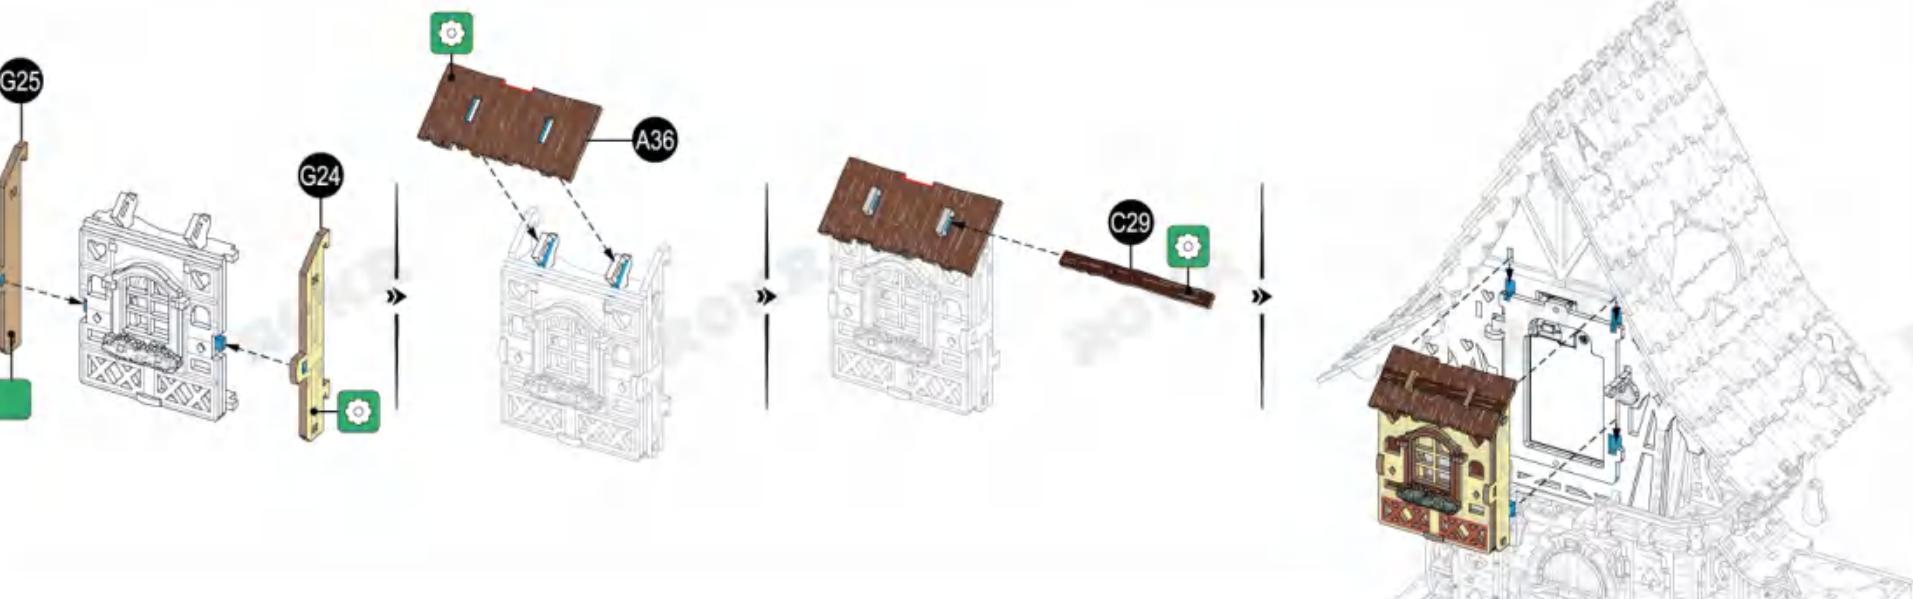




A22x4  
C16x2  
C26  
C32  
J18  
J20

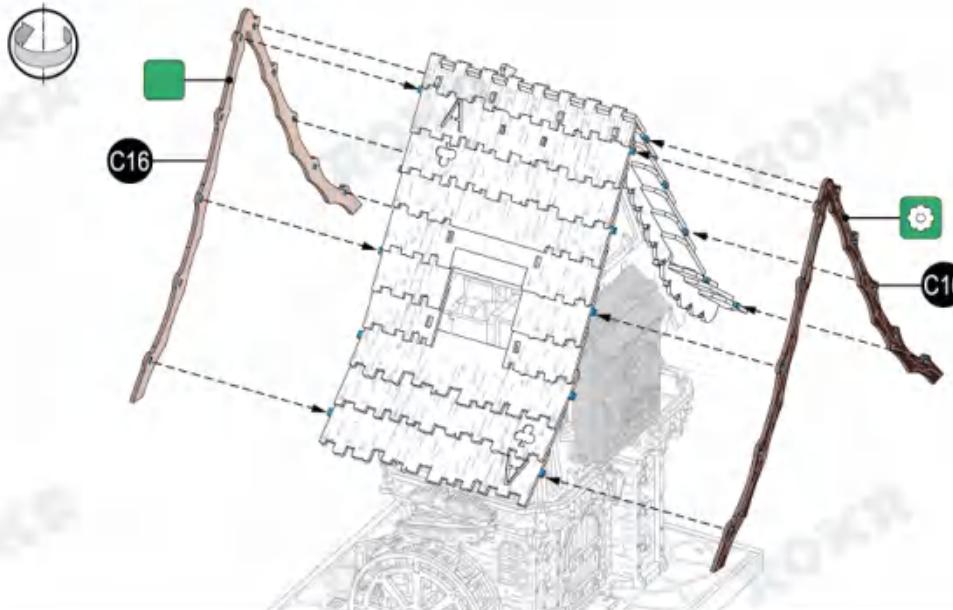




C30  
C31  
C37x2  
F12

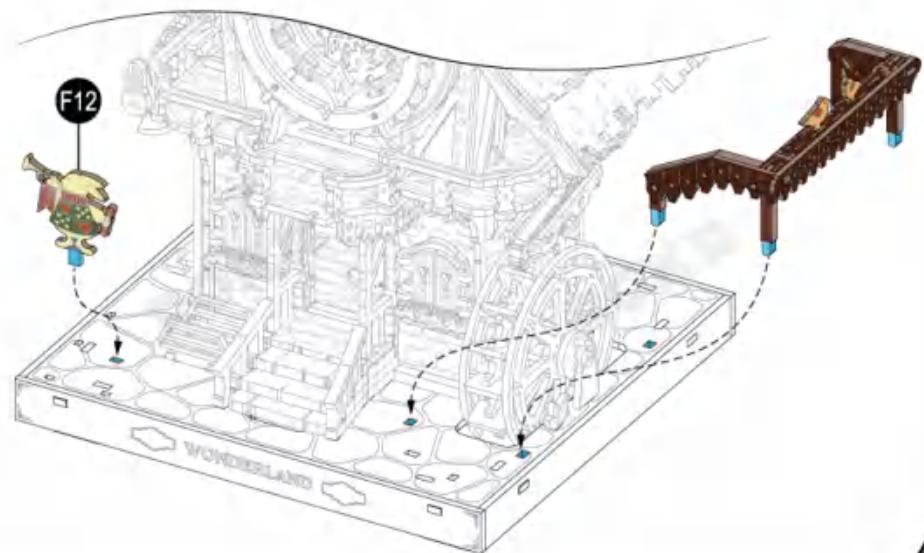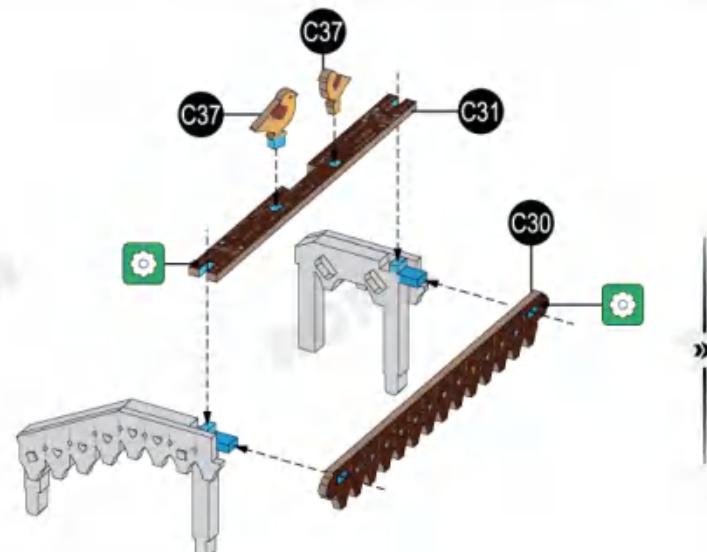




B23  
B24  
C27  
C28x2  
F6  
F23  
F24  
F25x4  
G11

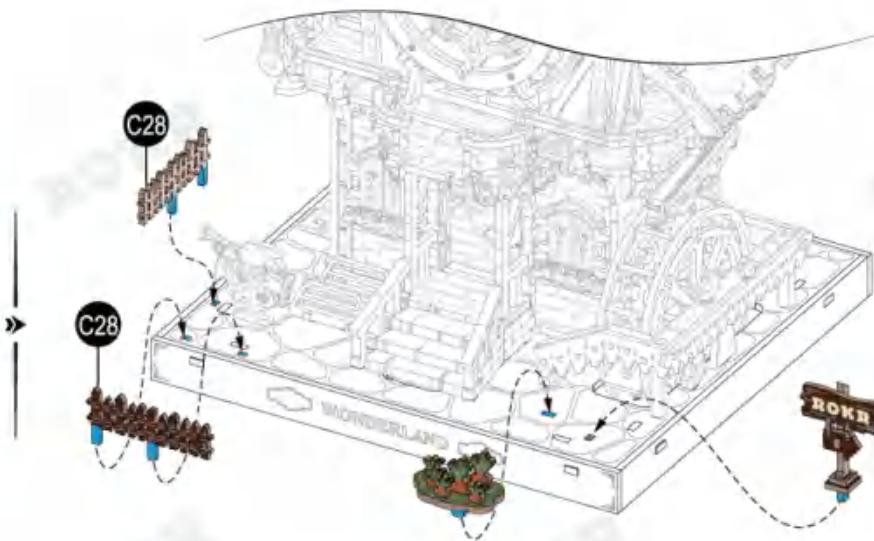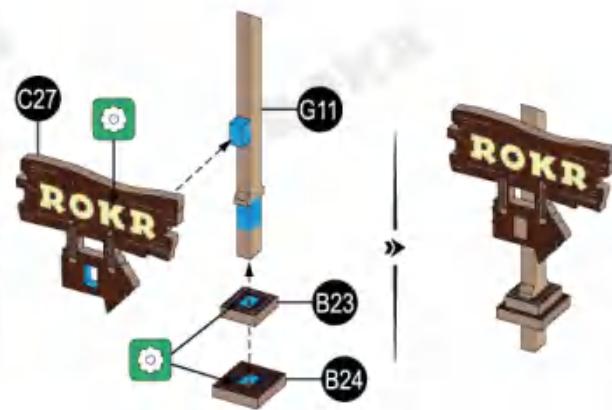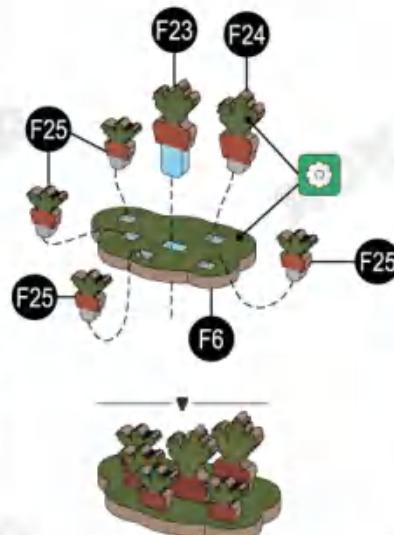



B27  
B29  
H20  
H27  
H28x5  
H34  
H35

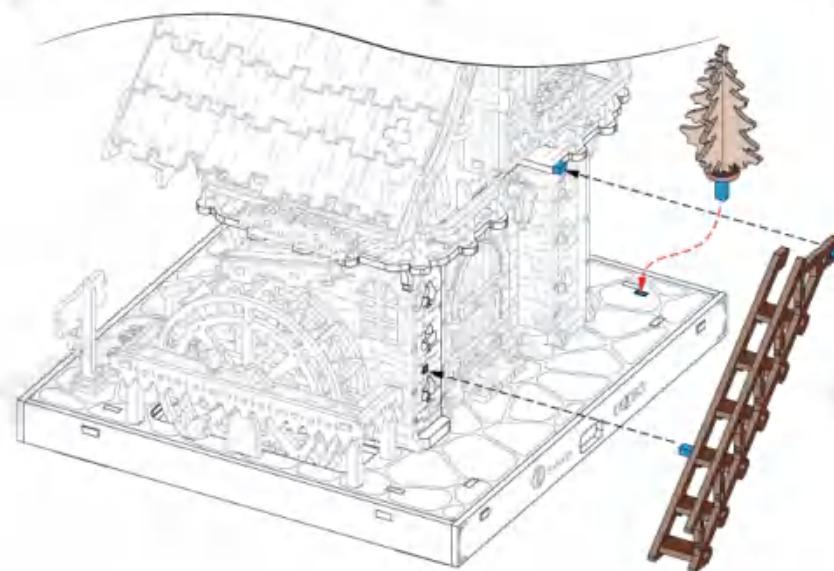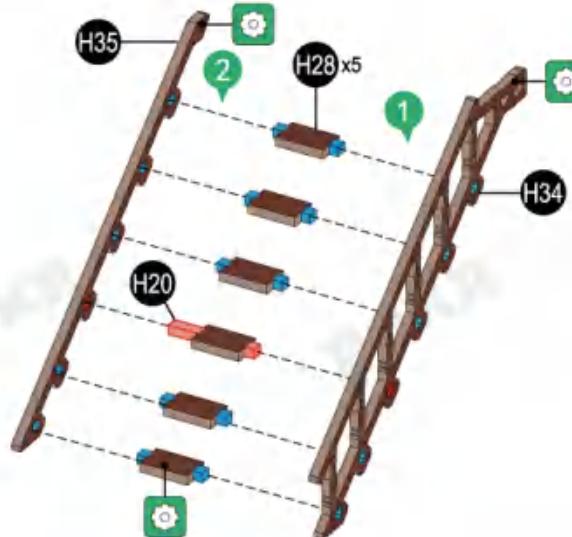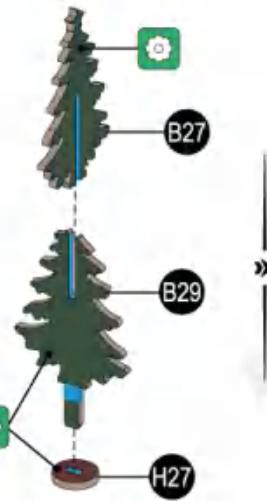


A16  
 A31  
 C12  
 C25x2  
 C33  
 C35  
 C40  
 H5  
 H6

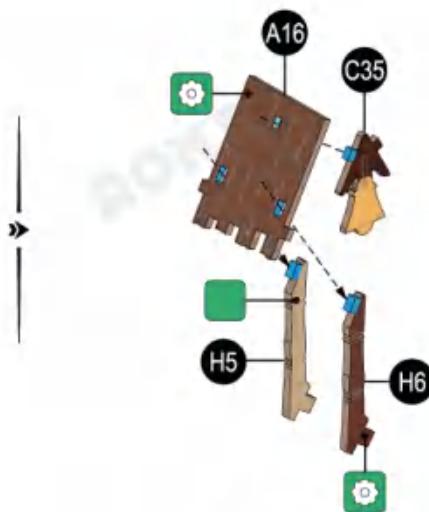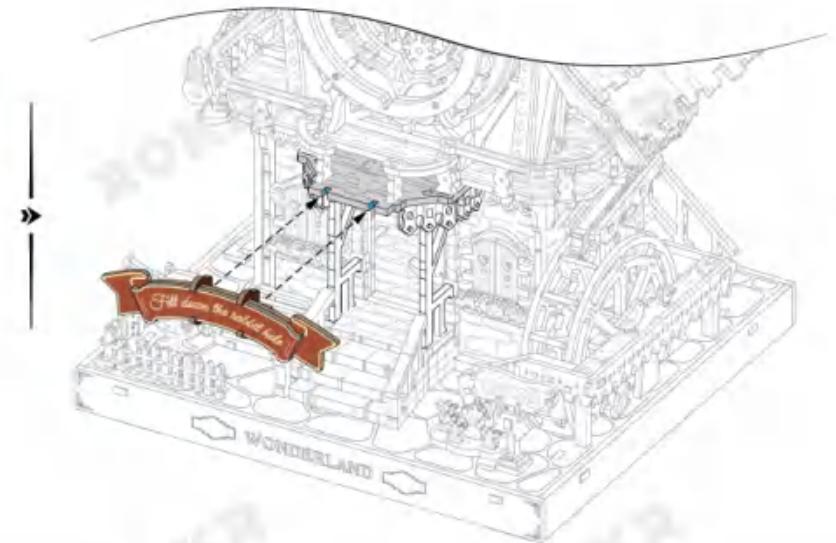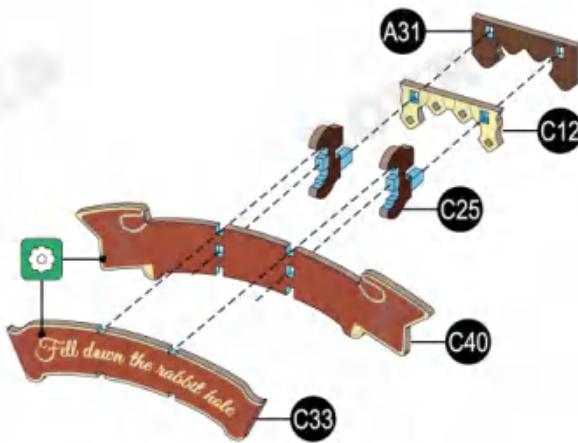


A16  
 A21  
 C15x2  
 H5  
 H6

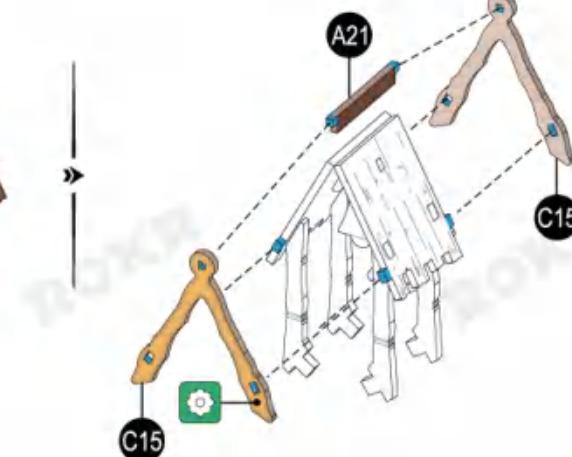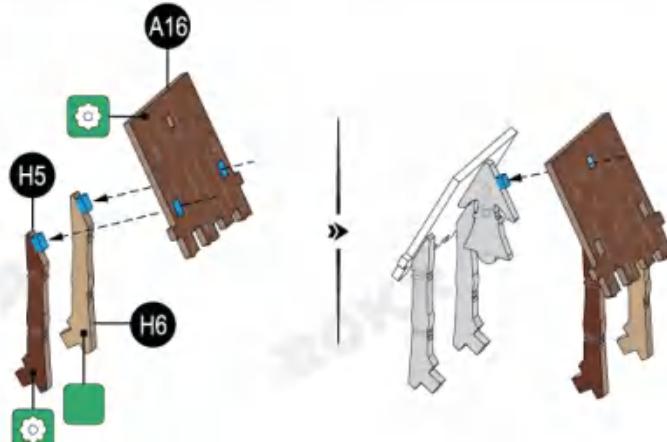





B12  
B13  
C4 x2  
C23  
C24  
G9  
G10  
G14  
G21  
G22 x2  
F26  
F27

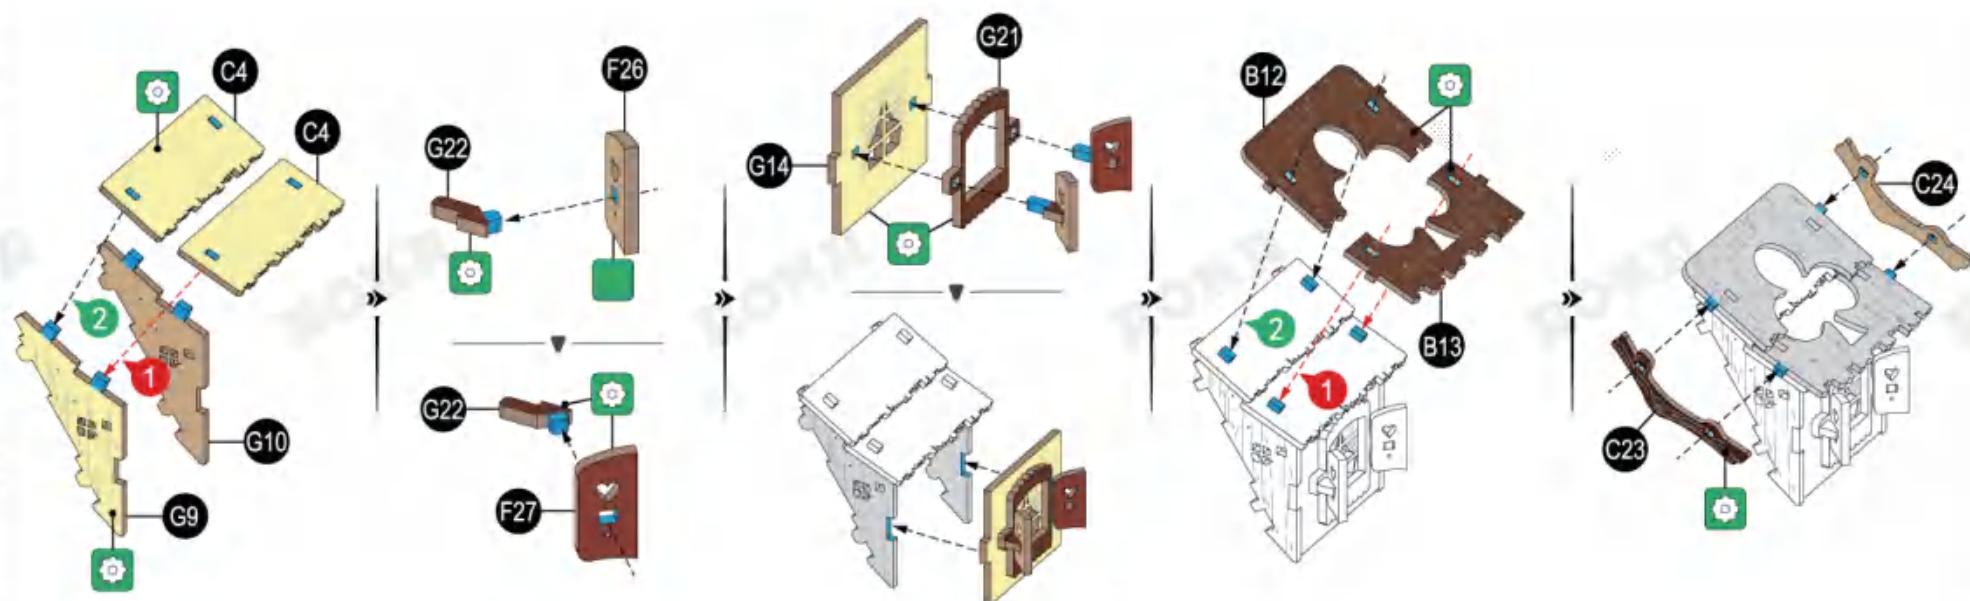

B31  
G23 x2  
H33

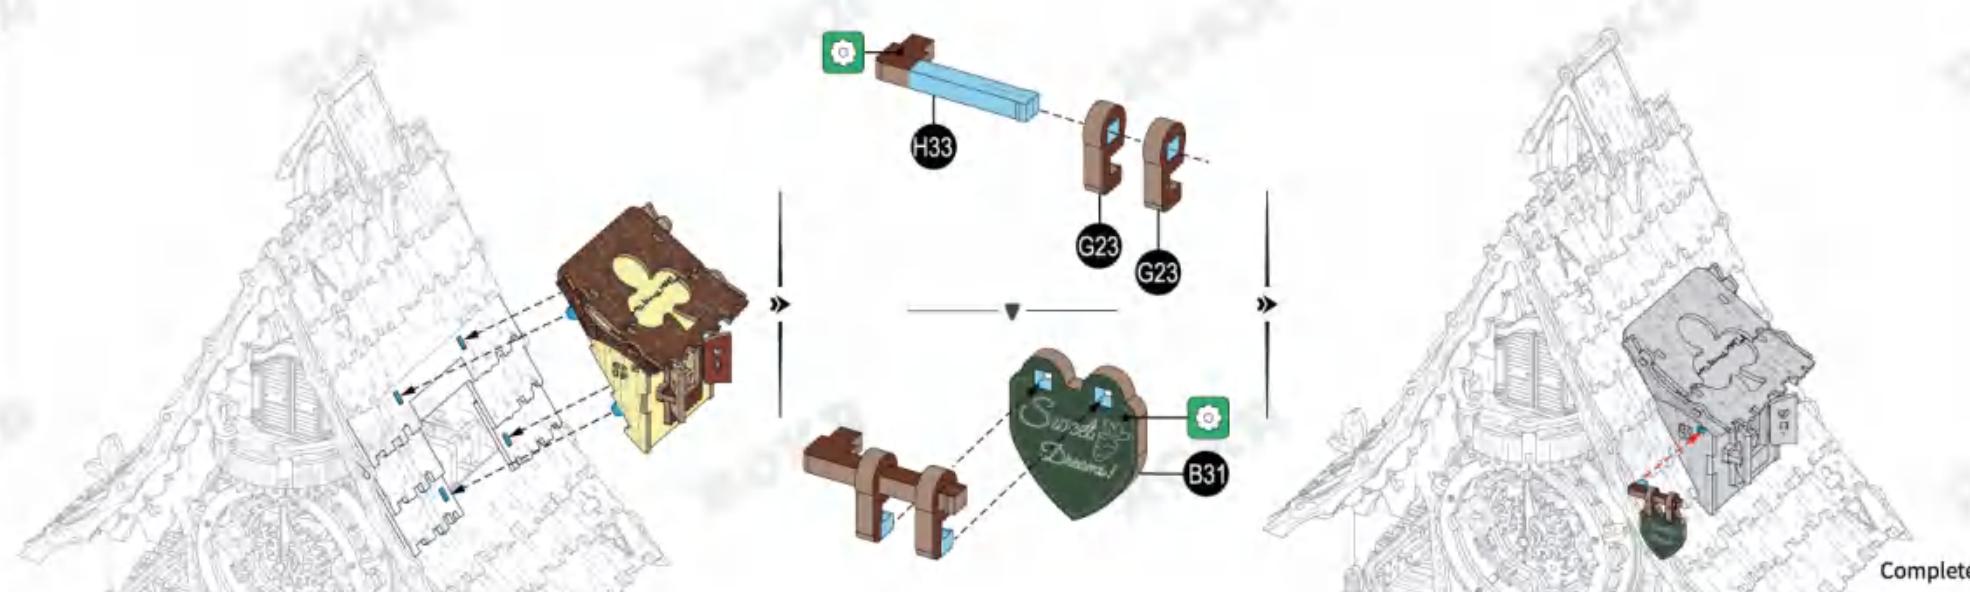

# Play Illustration:

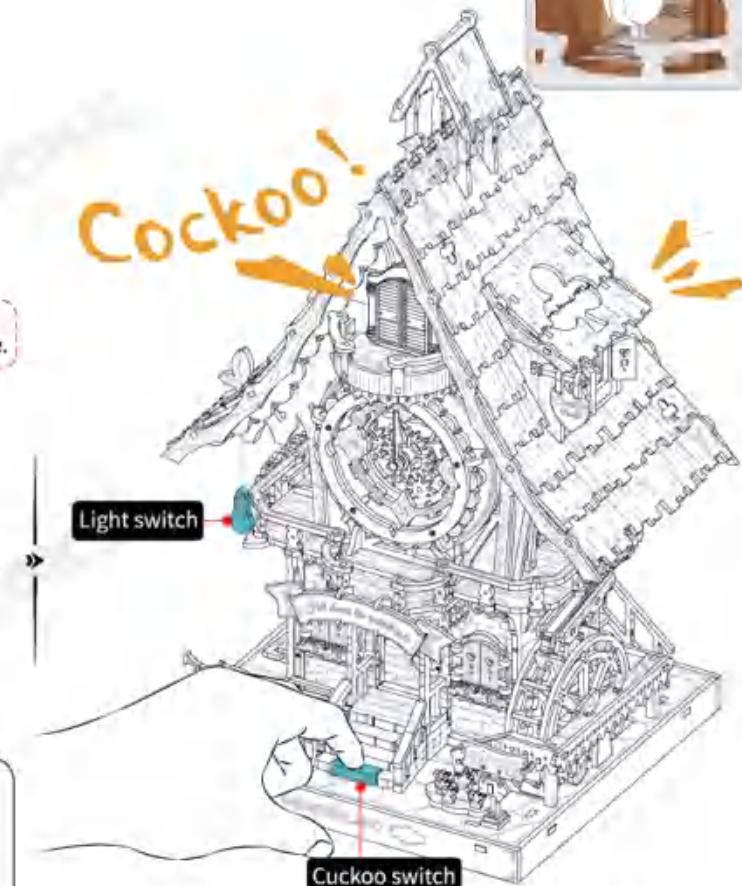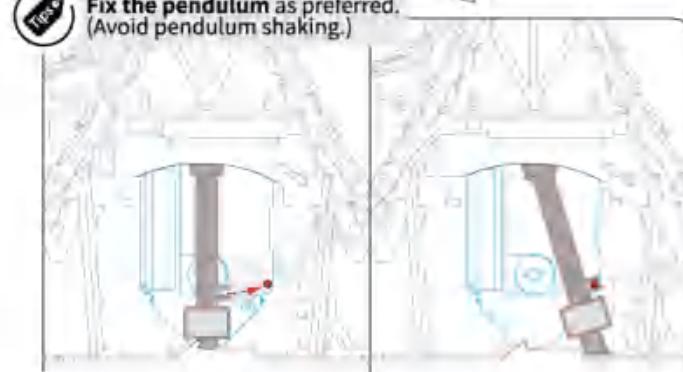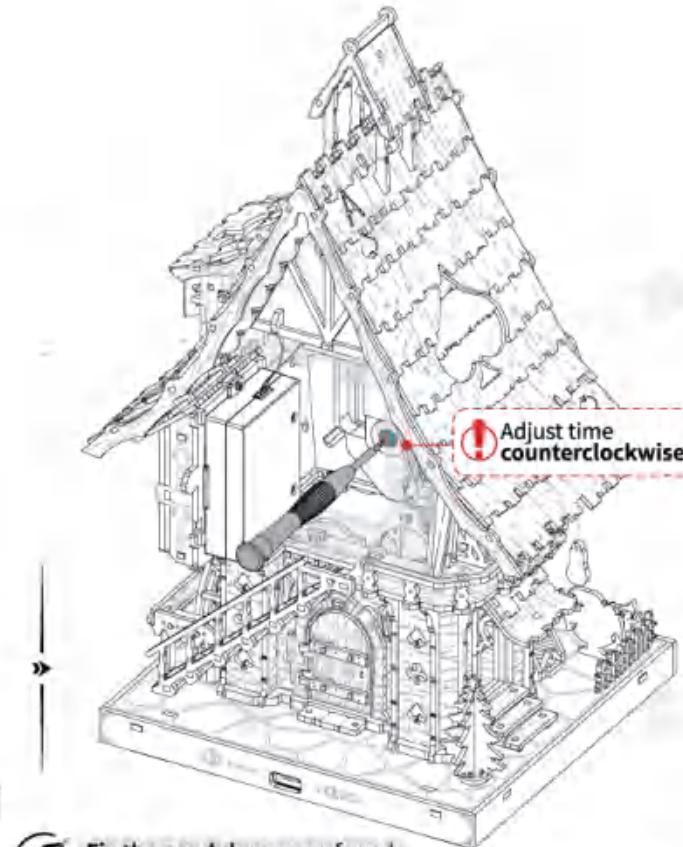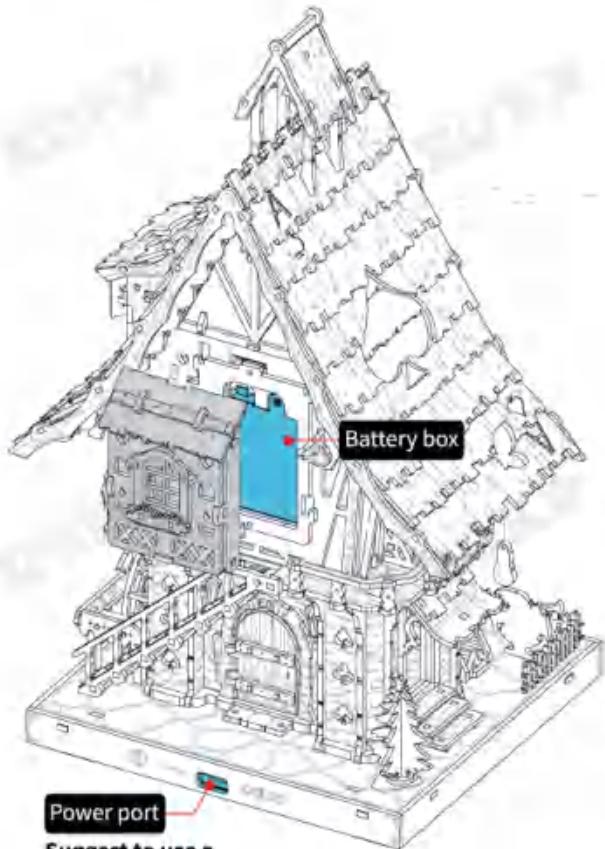

Paint the bird as preferred.  
(Paint and brushes not included.)



**ROKR**



[www.robotime.com](http://www.robotime.com)



[store.robotime.com](http://store.robotime.com)

In colder path  
With doomy hues,  
The clock stays still  
Like stars that fall