

Phrozen Resin User Guide


Engineering Tough: Tough 100E, Green/Black

Outline

Before printing the perfect object, it is important to first understand the material limitations we are handling and how it can be successfully printed under various conditions. With this in mind, Phrozen provides the following design suggestions to help you better understand the properties of each material and how you can best utilize them to bring your wildest creation to life.

Table of Contents

| | |
|------------------------------------|----------|
| TDS | 1 |
| Printing | 2 |
| Printing Parameters..... | 2 |
| Cleaning..... | 6 |
| Post-Curing..... | 6 |
| Design Specifications | 7 |

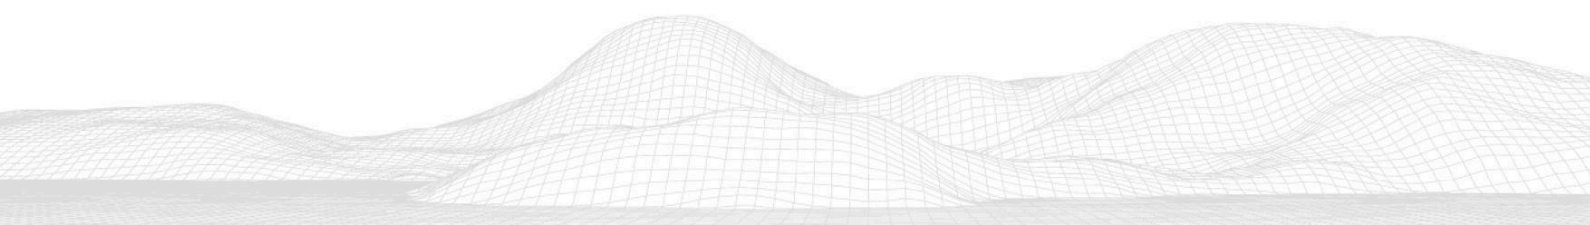

Section 1

TDS

| General Properties | Norm | Typical values | |
|-----------------------------------|------------------------------|---------------------------------|------------------------|
| Appearance | - | Green | Black |
| Viscosity | BROOKFIELD Viscometer(LV) | 1900 - 2500 cps | 1900 - 2500 cps |
| Density (liquid resin) | ASTM D4052-18a | 1.10 g/cm ³ | 1.10 g/cm ³ |
| Tensile Properties | Norm | Typical values (UV post-cured) | |
| Tensile Modulus | ASTM D638 | 1058.8 MPa | 925.4 MPa |
| Tensile Strength at Break | ASTM D638 | 29.9 MPa | 24.6 MPa |
| Elongation at Break | ASTM D638 | 93.5 % | 100.5 % |
| Flexural Properties | Norm | Flexural values (UV post-cured) | |
| Flexural Modulus | ASTM D790 | 1381.7 MPa | 711 MPa |
| Flexural Strength | ASTM D790 | 33.2 MPa | 23 MPa |
| Impact Properties | Norm | Typical values (UV post-cured) | |
| Notched Izod (Machined), 23 °C | ASTM D256 | 69.1 J/m | 77.3 J/m |
| Thermal Properties | Norm | Typical values (UV post-cured) | |
| HDT at 0.45 MPa | ASTM D648 | 51.5 °C | 52.7 °C |
| Hardness | Norm | Typical values (UV post-cured) | |
| Shore D | ASTM D2240 | 69-76D | 69-76D |

* All testing specimens are printed using Phrozen Sonic Mighty 8K or Sonic Mini 8K and post-processed with Phrozen Wash & Cure Kit.

* Increasing the curing time might improve the mechanical properties, but also increase the risk of deformation.

Specimens are printed unless stated otherwise. The information in this TDS, including product recommendations, is based on our current knowledge and experience. Descriptions, drawings, photographs, data, proportions, weights, etc. provided may change without notice and do not establish the product's contractual quality. You may request the relevant MSDS from your supplier or contact Phrozen Tech Co., Ltd at sales@phrozen3d.com.


Section 2

Printing

Printing Parameters

| Printer | Sonic Mini / Sonic Mini 4K | |
|----------------------|----------------------------|---------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 3.5 \pm 0.5 s | 6 \pm 0.5 s |
| Bottom Exposure Time | 30 \pm 5 s | 30 \pm 5 s |
| Light-off Delay | 15 s | 15 s |
| Lift Distance | 6 mm | 6 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mini 8K | |
|-------------------------|---------------|-----------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 4 \pm 0.5 s | 4.5 \pm 0.5 s |
| Bottom Exposure Time | 35 \pm 5 s | 30 \pm 5 s |
| Rest Time After Retract | 5 \pm 1 s | 5 \pm 1 s |
| Lift Distance | 6 mm | 6 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

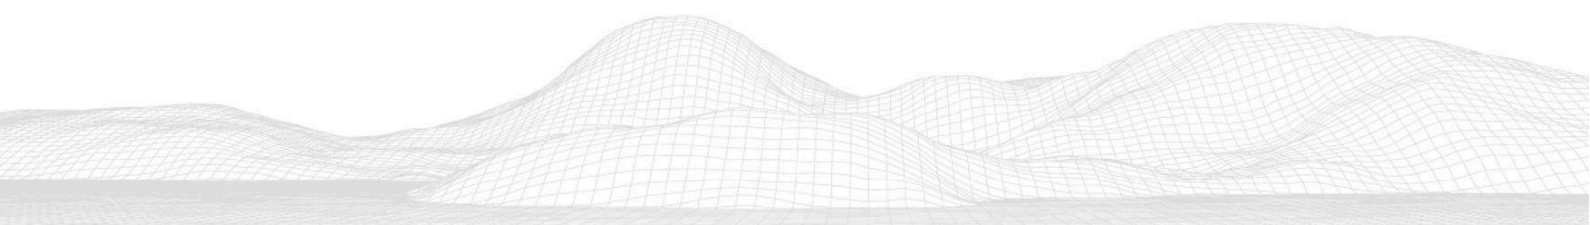

| Printer | Sonic Mini 8K S | |
|-------------------------|------------------|---------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 3.5 \pm 0.5 s | 4 \pm 0.5 s |
| Bottom Exposure Time | 12.5 \pm 2.5 s | 20 \pm 5 s |
| Rest Time After Retract | 5 \pm 1 s | 5 \pm 1 s |
| Lift Distance | 6 mm | 6 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mighty 4K | |
|----------------------|-----------------|---------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 3.5 \pm 0.5 s | 6 \pm 0.5 s |
| Bottom Exposure Time | 30 \pm 5 s | 30 \pm 5 s |
| Light-off Delay | 20 \pm 5 s | 20 \pm 5 s |
| Lift Distance | 8 mm | 8 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mighty 8K | |
|-------------------------|-----------------|-----------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 3 \pm 0.5 s | 4.5 \pm 0.5 s |
| Bottom Exposure Time | 35 \pm 5 s | 35 \pm 5 s |
| Rest Time After Retract | 10 \pm 5 s | 10 \pm 5 s |
| Lift Distance | 10 mm | 10 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mighty 12K (Upgrade Kit) | |
|-------------------------|--------------------------------|-----------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 3 \pm 0.5 s | 4.5 \pm 0.5 s |
| Bottom Exposure Time | 35 \pm 5 s | 35 \pm 5 s |
| Rest Time After Retract | 10 \pm 5 s | 10 \pm 5 s |
| Lift Distance | 10 mm | 10 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mighty Revo | |
|-------------------------|-------------------|---------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 4 \pm 0.5 s | 5 \pm 0.5 s |
| Bottom Exposure Time | 35 \pm 5 s | 40 \pm 5 s |
| Rest Time After Retract | 10 \pm 5 s | 10 \pm 5 s |
| Lift Distance | 10 mm | 10 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |
| Heating Function | On | On |

| Printer | Sonic Mega 8K* | |
|-------------------------|-----------------|---------------|
| Color | Green | Black |
| Layer Height | 50 μ m | 50 μ m |
| Exposure Time | 3.5 \pm 0.5 s | 5 \pm 0.5 s |
| Bottom Exposure Time | 35 \pm 5 s | 35 \pm 5 s |
| Rest Time After Retract | 10 \pm 5 s | 10 \pm 5 s |
| Lift Distance | 10 mm | 10 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mega 8K S* | |
|-------------------------|------------------|-----------|
| Color | Green | Black |
| Layer Height | 50 μm | 50 μm |
| Exposure Time | 3 ± 0.5 s | 4 ± 0.5 s |
| Bottom Exposure Time | 30 ± 5 s | 30 ± 5 s |
| Rest Time After Retract | 10 ± 5 s | 10 ± 5 s |
| Lift Distance | 10 mm | 10 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

| Printer | Sonic Mega 8K V2* | |
|-------------------------|-------------------|-----------|
| Color | Green | Black |
| Layer Height | 50 μm | 50 μm |
| Exposure Time | 3 ± 0.5 s | 4 ± 0.5 s |
| Bottom Exposure Time | 35 ± 5 s | 35 ± 5 s |
| Rest Time After Retract | 10 ± 5 s | 10 ± 5 s |
| Lift Distance | 10 mm | 10 mm |
| Lifting Speed | 60 mm/min | 60 mm/min |

* Sonic Mega 8K / Mega 8K S / Mega 8K V2 has a higher peeling force. Therefore, a longer exposure time is necessary to increase the success rate.

* Be sure to cover the hood when printing to maintain the best printing condition of the resin.

* Increasing rest time can slow down resin accumulation, leading to improved resolution.

Cleaning

1. After removing the printed object from the building stage, use the Phrozen Wash and Cure Kit for post-processing.
2. Soak the object in the Washing Station filled with 95% alcohol for 45–60 seconds to remove uncured resin from the surface.
3. Do not soak in alcohol or other solvent (such as IPA) for more than 60 seconds, as it may damage the surface of the objects.
4. Make sure to clean the inner parts of hollow objects completely.
5. Make sure that the object has been thoroughly cleaned, then leave it in a cool, well-ventilated place for at least 30 minutes without exposure to light.
Alternatively, you may gently apply compressed air to dry the printed object.

*When printing flat on the building plate, remove the printed objects carefully to avoid deformation on the objects.

Post-Curing

1. Use Phrozen post-curing lamps (Phrozen Curing Station, Phrozen Cure Mega S, Phrozen Cure Mega) or other post-curing lamps with the same wavelength to cure printed objects.
2. Cure the printed objects for 60 minutes for the best results.

Section 3


Design Specifications

※Note: All indicators are limited to each resin; the value will vary with different machines and environmental conditions.※

Minimum Unsupported Wall Thickness

This indicator shows the minimum wall thickness that can be printed independently with no support without causing any bending or breaking.


Recommended thickness: ≥ 0.2 mm

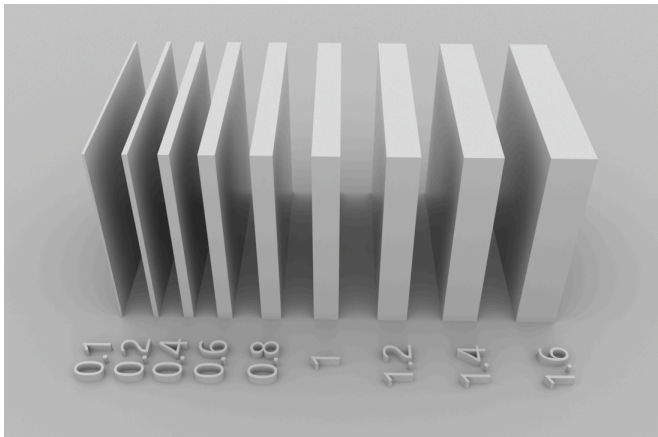

Size Tolerance, X-Y plane

This indicator shows the minimum dimensional tolerance between the hole and the column parallel to the XY plane.


Recommended tolerance: ≥ 0.06 mm

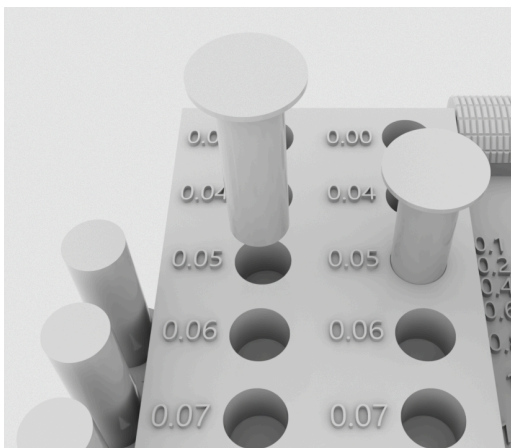

Minimum Pin Diameter

This indicator shows the minimum column diameter of pillars and supports that can be printed independently without bending or breaking.


Recommended diameter: ≥ 0.3 mm

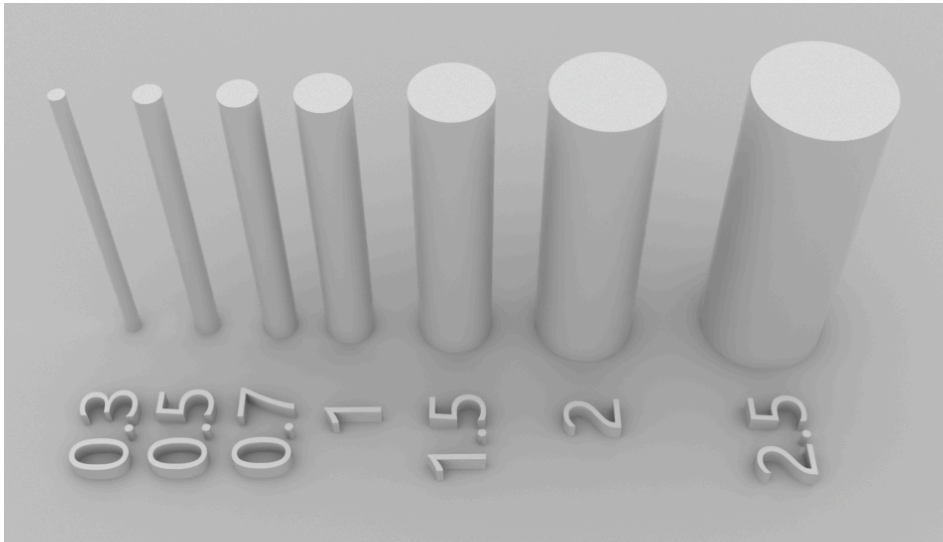

Minimum Hole Diameter, X-Y plane

This indicator shows the minimum hole diameter that can be successfully printed parallel to the XY plane.

Recommended diameter: ≥ 0.7 mm

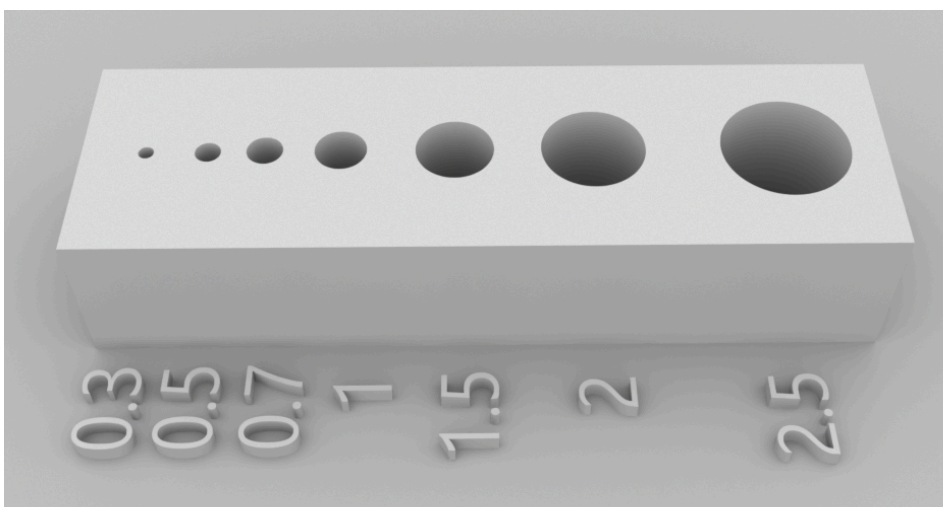

Minimum Embossed Detail Width, X-Y plane

This indicator shows the minimum line width that can successfully be printed with embossed details.


Recommended width: 0.1 mm



Minimum Engraved Detail Width, X-Y plane

This indicator shows the minimum line width that can successfully be printed with engraved details.


Recommended width: ≥ 0.3 mm

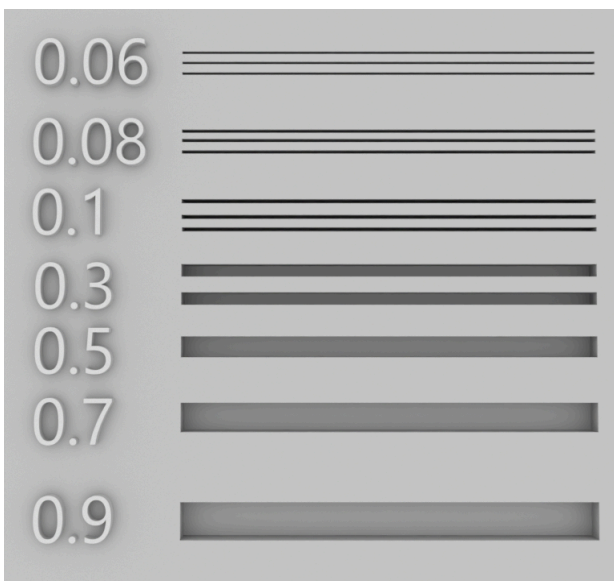

Maximum Horizontal Bridge Span

This indicator shows the maximum width between the supporting walls that can be printed without deforming the bridge.

Recommended width: ≤ 2 mm

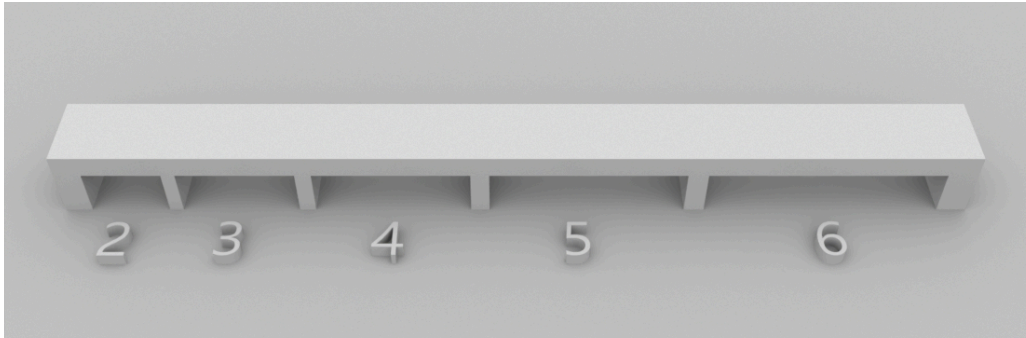


Minimum Hole Diameter and Engraved Detail Width, Z-Axis, at 0.05mm Layer Height

This indicator shows the minimum hole diameter and engraving groove width that can be successfully printed on the Z-axis with a layer thickness of 0.05mm.

Recommended diameter: ≥ 0.7 mm

Recommended width: ≥ 0.08 mm

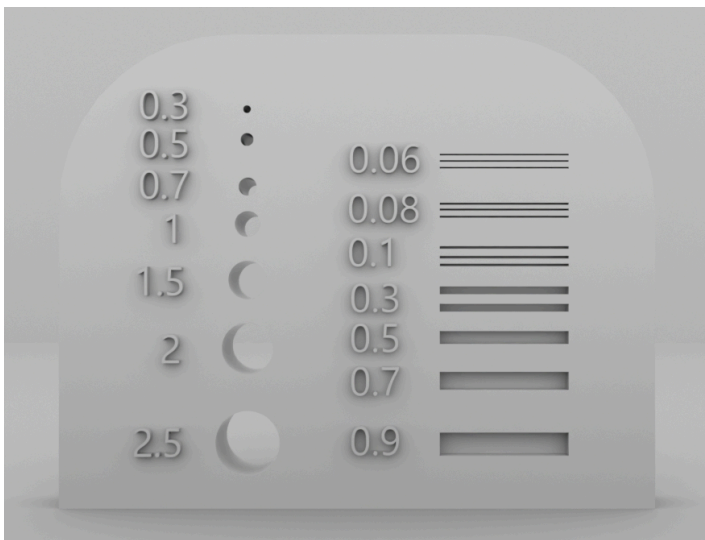

Block Shrinkage Test, at 0.05 mm Layer Height

This indicator shows the possible deformation for a 2x2x1 cm cuboid printed parallel to the XY plane. A Vernier caliper is used to measure the cuboid after post-curing to calculate the shrinkage rate. (This test result is only for reference purposes. Different machines and models may affect results.)

Calculation method: $[(\text{Cured size} - \text{Original size}) / \text{Original size}] \times 100\%$

X-Axis Recommended Shrinkage Rate: 0.75%

Y-Axis Recommended Shrinkage Rate: 0.7%

